


10990

1-Year Limited Warranty

Customer Service: 800-769-8370

or 952-943-1300

Website: www.yellowjacket.com

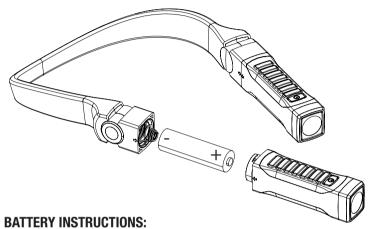

- 2 AA batteries are included
- · Remove insulator from batteries before use
- Twist the body of the light counterclockwise so the arrows are no longer aligned
- Remove the old batteries and insert batteries in correct polarity direction from the diagram above; always replace with new AA batteries — never mix old and new batteries
- · Re-assemble and lock by twisting the body clockwise and aligning the arrows
- Failure to insert batteries in the correct polarity as indicated in the diagram may shorten the life of the batteries or cause batteries to leak
- Do not dispose of batteries in fire batteries should always be recycled or disposed of as per state and local guidelines




10990

1-Year Limited Warranty

Customer Service: 800-769-8370

or 952-943-1300

Website: www.yellowjacket.com

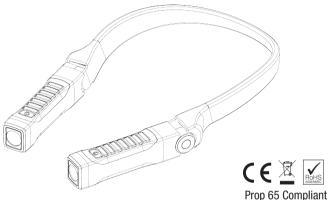

USE INSTRUCTIONS:

• There are two power switches-each light head operates separately

First Click- ON | HIGH Second Click- ON | LOW Third Click- OFF

WARNING:

- This product is not a toy do not leave children unsupervised with this
 product
- Do not look directly at the light or shine the light into eyes
- Always store in a safe, dry location