

Air conditioner

User manual

DMS2.5 MIM-D01AN / MIM-D01AUN

BACnet Gateway MIM-B17BN / MIM-B17BUN

LonWorks Gateway MIM-B18BN / MIM-B18BUN

- Thank you for purchasing this Samsung Product.
- Before operating this unit, please read this user manual carefully and retain it for future reference.



SAMSUNG

Safety Precautions **English**

- **Before using the DMS2.5, BACnet Gateway, LonWorks Gateway, read carefully these instructions.**
- **After reading the instructions, keep this user's manual in a handy and safe place.**
If a user is changed, you must hand over the manuals.
- **Never attempt to install the air conditioning system or to move the product by yourself.**

WARNING

- ◆ Do not attempt to install or repair the product by yourself.
- ◆ The product contains no user-serviceable parts. Always consult authorized service personnel for repairs.
- ◆ When moving, consult authorized service personnel for disconnection and installation of the product.
- ◆ Ensure that the wall is strong enough to support the weight of the product.
- ◆ Must install the product with rated power supply.
- ◆ In the event of a malfunction (burning smell, etc.), immediately stop operation, turn off the electrical breaker, and consult authorized service personnel.

CAUTION

- ◆ Do not use inflammable gases near the product.
- ◆ Do not spill water into the product.
- ◆ Do not operate the product with wet hands.
- ◆ Do not install the product in a location where it will come into contact with the combustible gases, machine oil, sulphide gas, etc.
- ◆ Do not press buttons with a pointed thing.
- ◆ Do not pull or bend the product cable excessively.
- ◆ Do not use the product for other purpose.
- ◆ Do not spray an insecticide or other combustible things on the product.
- ◆ Do not clean the product with benzene, solvents or other chemicals.
- ◆ Do not give a shock to the product or disassemble it by yourself.

Consignes de sécurité **Français**

- **Avant d'utiliser le DMS2.5, BACnet Gateway, LonWorks Gateway, lisez attentivement ces consignes.**
- **Après en avoir pris connaissance, conservez ce manuel d'utilisation dans un lieu sûr et à portée de main. En cas de changement d'utilisateur, vous devez remettre les manuels.**
- **Ne tentez jamais d'installer le climatiseur ou de déplacer le produit par vous-même.**

AVERTISSEMENT

- ◆ Ne tentez pas d'installer ou de réparer vous-même le produit.
- ◆ Le produit ne contient aucun composant interne susceptible d'être réparé par l'utilisateur. Consultez toujours le personnel d'entretien agréé pour toute réparation.
- ◆ En cas de déplacement, consultez le personnel d'entretien agréé pour tout débranchement et toute installation du produit.
- ◆ Assurez-vous que le mur est suffisamment résistant pour supporter le poids du produit.
- ◆ Vous devez raccorder le produit à une installation supportant sa puissance nominale.
- ◆ En cas de dysfonctionnement (odeur de brûlé, etc.), arrêtez immédiatement le fonctionnement, coupez le disjoncteur électrique et consultez le personnel d'entretien qualifié.

ATTENTION

- ◆ N'utilisez pas de gaz inflammable à proximité du produit.
- ◆ Ne renversez pas d'eau dans le produit.
- ◆ Ne manipulez pas le produit si vous avez les mains mouillées.
- ◆ N'installez pas le produit dans un lieu où il sera en contact avec des gaz combustibles, de l'huile de machine, de l'hydrogène sulfuré, etc.
- ◆ N'appuyez pas sur les boutons avec un objet pointu.
- ◆ Ne tirez pas sur le cordon d'alimentation du produit et ne le pliez pas excessivement.
- ◆ N'utilisez pas le produit dans un autre but que celui auquel il est destiné.
- ◆ Ne vaporisez pas d'insecticide ou autre produit combustible sur le produit.
- ◆ Ne nettoyez pas le produit en utilisant du benzène, des solvants ou autres produits chimiques.
- ◆ N'appliquez pas de choc sur le produit et ne le désassemblez pas non plus vous-même.

Contents

◆ GENERAL DESCRIPTION	4
◆ VIEWING THE PARTS	6
◆ BEFORE USE	8
◆ MAIN FUNCTION	10
◆ STARTING DMS2.5	14
◆ CONTROL AND MONITORING	20
◆ ZONE MANAGEMENT	76
◆ SCHEDULE	81
◆ EHP POWER CONSUMPTION INSPECTION	96
◆ CONTROL LOGIC MANAGEMENT	107
◆ SYSTEM SETTINGS	120
◆ CHECK BEFORE USING PANEL	174
◆ SETTING NETWORK INFORMATION	175
◆ CHECKING INDOOR/OUTDOOR UNIT INFORMATION	177
◆ CHECKING DMS2.5 VERSION	178
◆ DATA BACKUP SETTING	181
◆ CHECKING ERROR INFORMATION	183
◆ RESET PASSWORD	184
◆ BUTTON LOCK	185
◆ SAFETY HALT	186
◆ TROUBLESHOOTING	187
◆ SPECIFICATIONS	189
◆ LICENSE	190

Note ◆ The contents and pictures used in this user manual may be changed without advance notice for the functional reinforcement and improvement of a product.



CAUTION

***This System is strictly restricted to authorized user.
Any illegal access shall be punished with a related-law.***

COMMISSION REGULATION (EU) 2019/1782 Ecodesign requirements for external power supplies :
www.samsung.com/global/ecodesign_component

General Description

■ Introduction of DMS2.5 (Data Management Server2.5)

The DMS2.5 is an Ethernet based device for central management of Samsung system air-conditioners. It operates 24 hours without a separate management (PC).

■ Advantages of DMS2.5 System

The DMS2.5 provides the following advantages:

- ◆ Everyday Device—The DMS2.5 is operational all year long 24 hours.
- ◆ Independent Operation—The DMS2.5 can operate schedule control and power distribution without a PC.
Note In order to run power distribution, relevant controllers need to be installed.
- ◆ Remote Control
 - ✓ Web – The DMS2.5 has a built-in web server function and can be accessed from a remote location to operate status monitoring, control, trouble history, and schedule setting of the system air-conditioners.
 - ✓ Using an Upper Level Controller—When a separate upper level controller (S-NET series) is used, a number of DMS2.5 can be controlled with one central management system.
- ◆ Data Storage—The DMS2.5 has its own database built-in, therefore, trouble history, indoor unit installation information, and power distribution data can be saved and retrieved.
- ◆ Large Scale Management—At most 256 indoor units can be connected to one DMS2.5 and therefore, only one DMS2.5 can manage small and medium size buildings.
- ◆ Automatic "e-mail" sending—When an error is occurred, inform the error details to an e-mail saved on DMS2.5.


Note ◆ Please be advised that once you are permitted access to the system, you will be deemed to have consented to having software relating this system automatically updated or modified on a periodic basis. You will be deemed to have consented to having software relating this system automatically updated or modified on a periodic basis.

■ Terms

- ◆ DMS2.5: The abbreviation of Data Management Server2.5.
- ◆ Upper Controller: S-NET 3, RMS and DMS2.5 which allows controlling by accessing to a web page.
- ◆ OnOff Controller: A device that controls 16 groups of the DVM air conditioner.
A central control device of a DVM system which is located between a DMS2.5 and an outdoor unit.
- ◆ AHU(Air Handling Unit): Executes heat exchange between air and cooling unit using central air conditioning duct method.
- ◆ ERV(Energy Recovery Ventilator): Ventilating system using heat recovery function.


Viewing the Parts

Front View

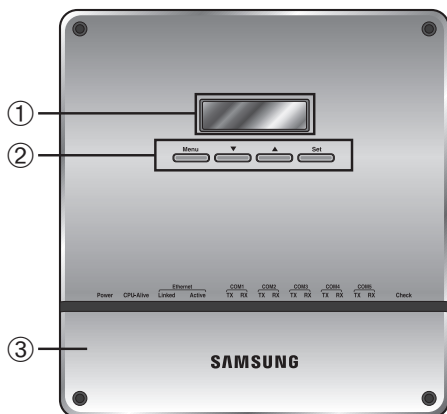

No.	Name	Description
①	LCD Display	Display current time/ Check menu
②	Menu button	Access to main menu
	▼/▲ button	Select the function you want and set detailed functions in main menu
	Set button	Check the function you want from main menu and select it
③	Bottom cover	Unfasten 2 screws on the bottom and separate the bottom cover from DMS2.5. Then check cable connection part.


Indicator

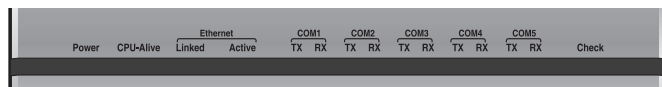

Name	Description
Power	Turns blue when the power is supplied.
CPU Alive	Blinks in orange with 1 second intervals during normal operation.
Ethernet-Linked	Turns green during normal connection.
Ethernet-Active	Blinks in orange during normal transmission/reception.
COM1~5 - TX	Blinks in green during normal transmission.
COM1~5 - RX	Blinks in green during normal reception.
Check	Turns green when notice occurs.


Bottom View

◆ Separate bottom cover by unfastening 2 screws on the bottom.

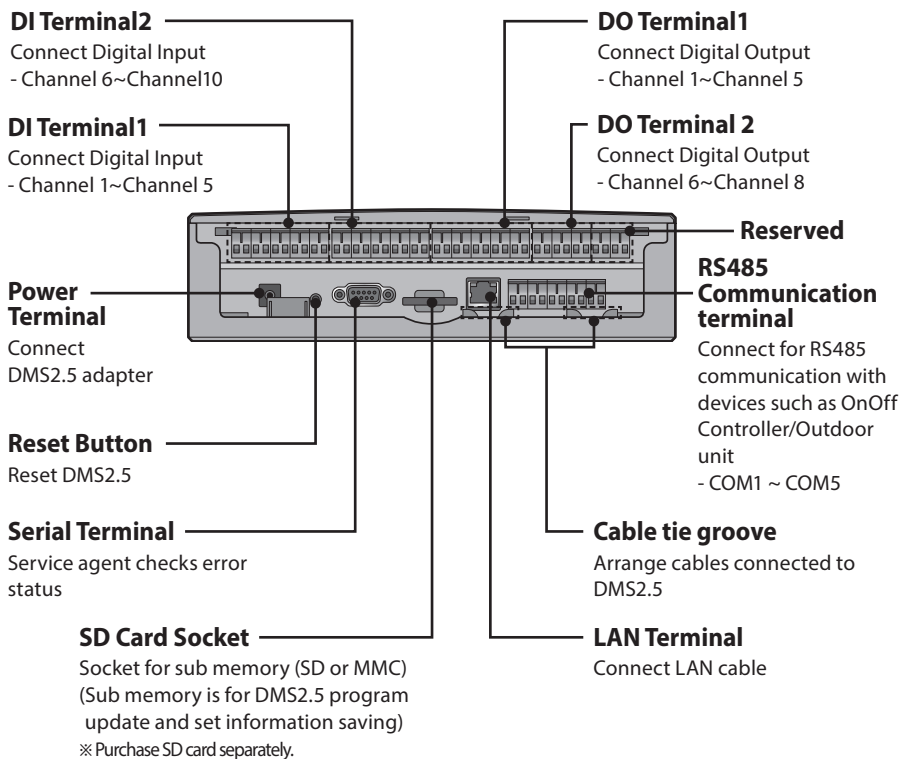

Before Use

System Configuration

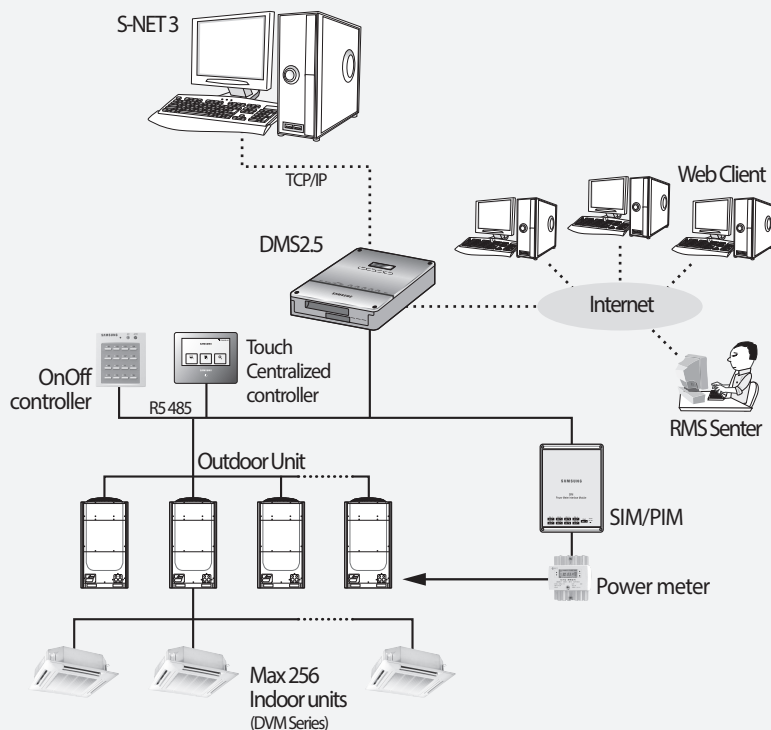

◆ Connecting outdoor unit and DMS2.5

- You can control up to 80 outdoor units and 256 indoor units by using DMS2.5.
- ※ You can connect up to 16 (outdoor) units per each communication channel of the DMS2.5.
- If the number of connected outdoor unit increases, it may take long time for tracking.
(Max. 30 minutes)



CAUTION

- ◆ **For devices that support new communication, you must set the communication mode of the channel to 'NEW' from [System settings → Tracking] menu. Set of Indoor/outdoor units, with conventional communication type, cannot be connected to DMS2.5 with new communication.**
- ◆ **When 'NEW' is set as communication mode of the channel, virtual OnOff controller address will be assigned.**
(Channel 0: Virtual OnOff controller 11, Channel 1: Virtual OnOff controller 12, Channel 2: Virtual OnOff controller 13, Channel 3: Virtual OnOff controller 14, Channel 4: Virtual OnOff controller 15)
- ◆ **The maximum number of indoor units that can be connected to each communication channel of DMS2.5 RS485 is 128.**

Web Browser Specification

- ◆ Windows 7 or later version
- ◆ Install Internet Explorer 11 or later version
- ◆ Install Silverlight 2.0 or later version

Note ◆ Visit internet homepage (<http://www.microsoft.com/silverlight/>) to download Silverlight. Or you can download it through the download link which is noticed automatically when the PC is connected to the Internet and you access to DMS2.5 for the first time.

- ◆ Silverlight operates normally with Windows 7 or later version.
It may not operate normally with former version of Windows.

Computer Settings for DMS2.5 Connection

All settings of DMS2.5 will be arranged in web page which built in DMS2.5.
You should access to DMS2.5 IP to use DMS2.5 web page.
There are 2 ways to access DMS2.5 IP.
(For about settings, refer to installation manual.)

- ◆ Static IP setting
- ◆ Dynamic IP(DHCP) setting
- ◆ Basically, only Private IP can be set to IP address. To use Public IP, you must set Enable public IP as 'Enable' from the menu [System Settings] → [System environment setting].
 - Private IP range: 10.0.0.0 ~ 10.255.255.255, 172.16.0.0 ~ 172.31.255.255,
192.168.0.0 ~ 192.168.255.255



CAUTION

- ◆ **Use this product only in a separate dedicated network.**
Samsung electronics is not liable for any problems caused by connecting it to the Internet or an intranet.

Interface with Upper Level Controller

The DMS2.5 receives/manages setting and control data from the upper level controller and sends the received data to the lower level system.

- ◆ Upper controller: S-NET 3, RMS and DMS2.5 which allows controlling by accessing to a web page.
- ◆ S-NET 3: System air conditioner controlling and monitoring program that is used by installing on a PC.
- ◆ RMS: A device which supervises operation status and break down status by connecting to DMS2.5 for system air conditioner remote service. If break down is detected, it notifies service agent and makes fast service possible.

Save Trouble History

The DMS2.5 saves at most 1024 cases of trouble history. If the number of errors exceeds 1024, only the latest 1024 cases are stored by deleting the oldest trouble history.

- ◆ Device name, address, error occurrence time, error solvation time, trouble history will be saved. You can check it in web page or upper controller.
- ◆ When an error occurs, it sends trouble history to e-mail saved in DMS2.5.
- ◆ Some functions available on DMS2.5 web page may not be functional at BACnet Gateway and Lonworks Gateway. For detailed function, refer to the installation manual or contact Samsung Electronics.

Device	Type
Indoor Unit	Indoor unit communication error Indoor unit sensor related error Other errors
Outdoor Unit	Outdoor unit communication error Pipe inspection error Outdoor unit sensor related error Outdoor unit related other errors
Communication error such as OnOff controller	Control device related communication error

Set and Run Schedule

The schedule function of the DMS2.5 can be set through the Web or using the upper level controller. 1day/Everyday/Every week schedules can be set.

- ◆ Each schedule can be used selectively by using the run schedule/stop schedule order.
- ◆ At most 256 schedules can be set.
- ◆ Indoor unit control is possible at least 1 minute of interval by set schedule.

Item	Content	Remark
Schedule Period	Starting and ending date of a schedule	
Exception Day Setup	Set an exception day within a schedule period to ignore the schedule control	
Devices to be applied	Select devices to receive schedule control	
Event	Set indoor unit operation modes - Device On time - Device Off time - Desired temperature - Operation mode: Auto/Cool/Dry/Fan/Heat/Off - Remote control usage Enable RC/ Disable RC/ Cond.RC - Fan speed: Auto/Low/Mid/High/Turbo - Air flow: None/Vertical/Horizontal/All - ERV operation mode: Auto/HeatEx/ByPass/Sleep - ERV Fan speed: Low/High/Turbo	Weekly Repeat: Maximum 30 events per day Daily Repeat: Maximum 70 events


Main Function (Continued)

Save Integrated Power Distribution Data

The DMS2.5 calculates and distributes the power consumed by each indoor unit by receiving the total power usage from the watt-hour meter interface modules (SIM/PIM) and taking into account the operation status of the indoor units.


The DMS2.5 saves at most 1 year of data. After a year, the oldest data is deleted and the latest data is saved. This data can be checked through the built-in Web page of the DMS2.5 or by S-NET 3.

System Architecture

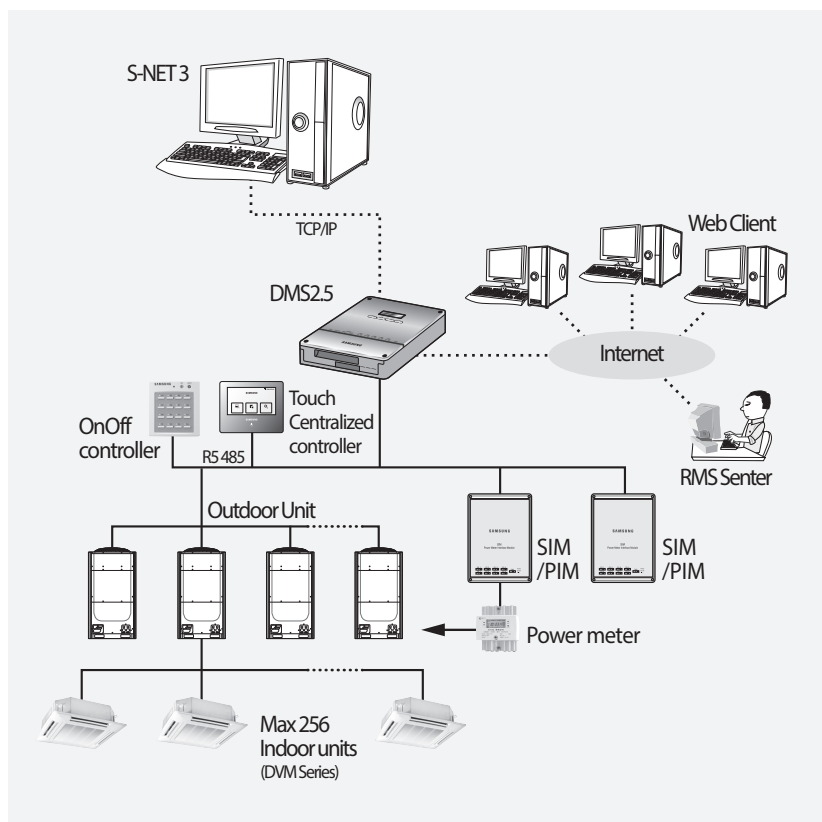

Time Segmentation

- ◆ Time segmentation is used to divide 24 hours into different sections and to distribute power according to each section.
- ◆ This function is used when the power consumption fee is different according to different time slots or when a building is charged differently depending on the consumption time.
- ◆ 1 section (A) is set as 24hours, and the factory default setting is set as 1 section. The time, 24hours, can also be divided into 2 sections (A,B,A), 3 sections (A,B,C,A) or 4 sections (A,B,C,D,A)
- ◆ DMS2.5 shows the result of the power distribution for each section you set.

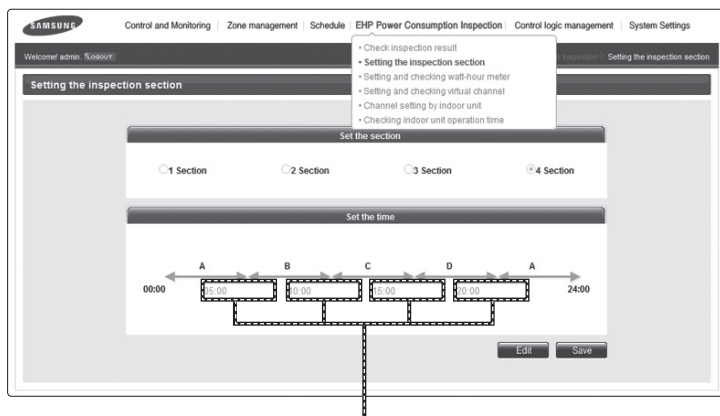

Input manually (When setting 2 sections, 3 sections, and 4 sections)



If communication error occurs between DMS and the lower level controllers, actual power consumption and the result of power distribution value may not be same. Make sure to solve communication error status.

- Example of communication error : Communication error between DMS2.5 and SIM(PIM)/SIM(PIM) and watt hour meter/ DMS2.5 and outdoor unit/indoor and outdoor units.

Starting DMS2.5

Starting DMS2.5

Current time setting

Set the current time of DMS2.5 system.

- ◆ "2016/01/01 01:01:01" is factory setting. Set the current time as DMS2.5 system time.
You can set DMS2.5 time in [System Settings] → [System environment setting]
(Refer to page 140~141)




If DMS2.5 time does not set as the current time, DMS2.5 may cause malfunction when using Schedule or control logic management.

Connecting OnOff controller & outdoor unit

Connecting devices

- (1) Make sure the connection of communication cables(R1/R2) between DMS2.5 and other devices such as outdoor units, control devices.
- (2) Execute tracking.
 - ◆ DMS2.5 communicates with outdoor unit and brings information about installed indoor unit and outdoor unit.
 - ◆ After tracking, you can use indoor unit control and other menu.
 - ◆ For tracking, refer to [System Settings] → [Tracking] (Refer to page 161~165)

Access to DMS2.5 & Login

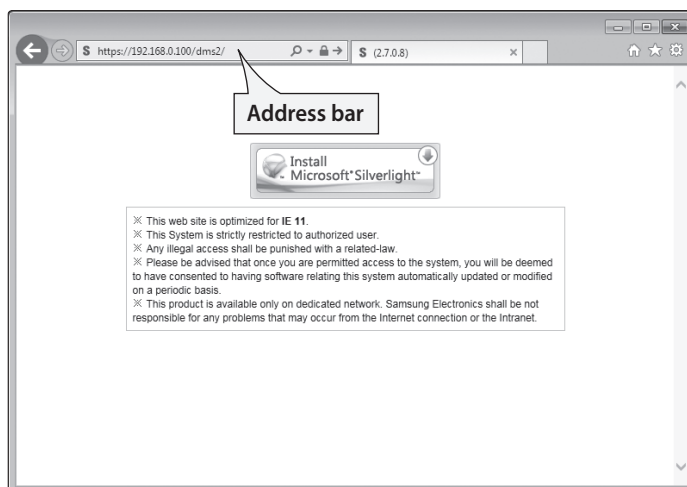


1 Run internet explorer on your computer.

2 Enter IP address (https://192.168.0.100) on the address bar, and then press [ENTER].

- ◆ If it is the first access to DMS2.5, "Install Microsoft Silverlight" message will be displayed.
 - The message will not appear if Microsoft Silverlight have already installed.
 - If the message window and login screen does not appear, check PC setting status.


1) At initial access, security certificate warning popup message will appear as shown. This message appears since DMS2.5 used the certificate of its own, so it will not appear if DMS2.5 certificate is registered on web browser. DMS2.5 certificate must be registered because the message will appear every time and it is not safe for security if it is not registered. Also, it should be registered to all PCs that are connecting to DMS2.5.

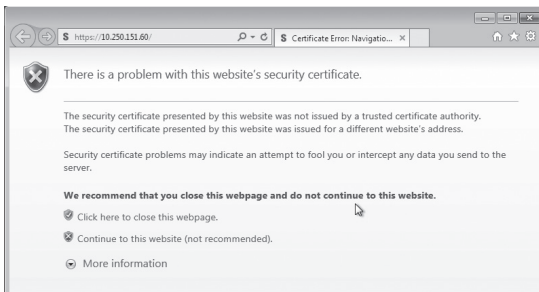

You must stop connecting due to security problem if the message appears even if you registered DMS2.5 certificate.


2) Registering DMS2.5 certificate on web browser

A. Select 'Content' tap in 'Tools' → 'Internet options', and click 'Certificates'.

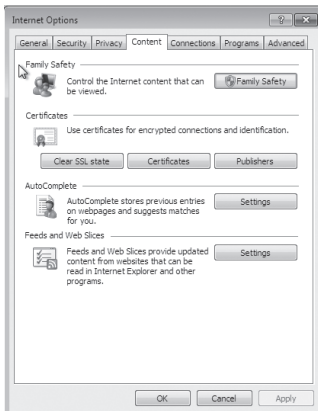

Starting DMS2.5 (Continued)


B. Select 'Trusted Root Certification Authorities' and click 'Import'.

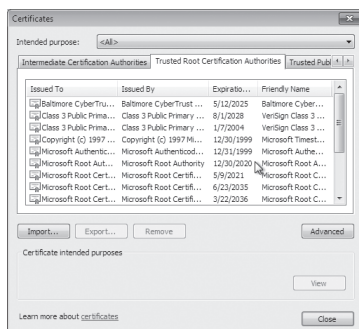


C. Click 'Next'.




D. Select 'Browse' and find DMS2.5 certificate, and click 'Next'. DMS2.5 certificate can be downloaded from [System environment setting].

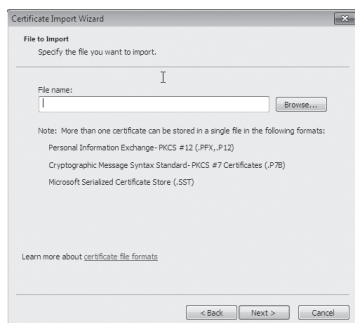

E. Select 'Place all certificates in following drive' and click 'Next'.

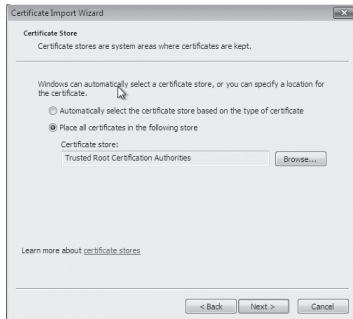


F. Click 'Finish', and click 'Yes' when security warning appears.

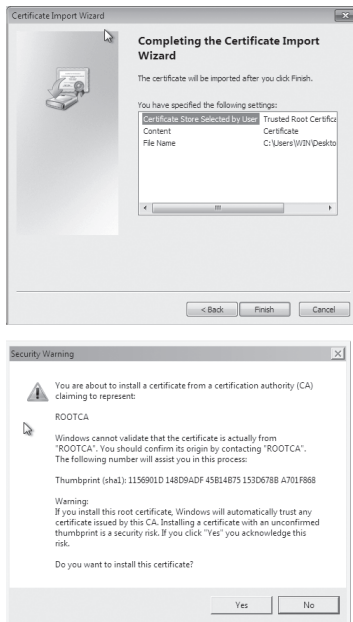

- Click [Run] and continue installation.
- ◆ Access to DMS2.5 again after installation.

Starting DMS2.5 (Continued)

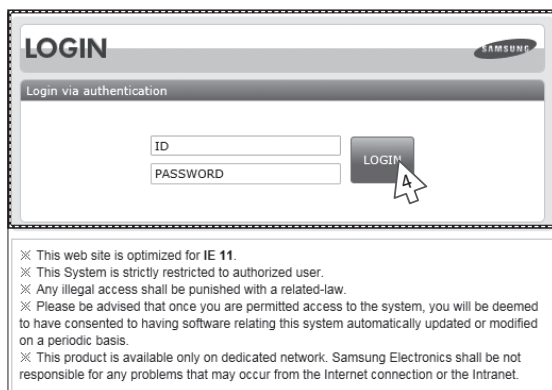

LOGIN

Login via authentication

ID

PASSWORD

LOGIN

X This web site is optimized for IE 11.
X This System is strictly restricted to authorized user.
X Any illegal access shall be punished with a related-law.
X Please be advised that once you are permitted access to the system, you will be deemed to have consented to having software relating this system automatically updated or modified on a periodic basis.
X This product is available only on dedicated network. Samsung Electronics shall be not responsible for any problems that may occur from the Internet connection or the Intranet.


- 4 Enter ID and password when DMS2.5 main web page appears.
Then click [LOGIN].
 - ◆ The default DMS2.5 user ID is 'admin' and password is 'ac0530'.
 - ◆ Depending on authorization settings which set by the administrator, access to some functions may be restricted.
 - ◆ To edit user authorization, refer to [System Settings] → [User authorization management]. (Refer to page 123)

- Note**
- ◆ Only authorized users can access to web page.
 - ◆ Fewer than 5 concurrent users are recommended because connection speed may slow down.
 - ◆ DMS2.5 manager should change ID and password for security and management. (Refer to page 121)
 - ◆ Logout: To log out, click [LOGOUT] on the top of the menu.



Silverlight will run normally with Windows 7 or later version. With former version of Windows, DMS2.5 may not operate normally.

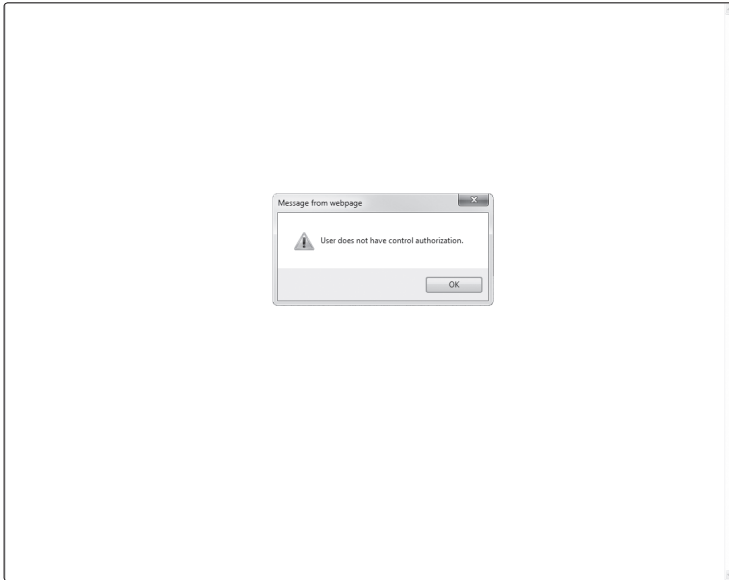


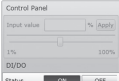

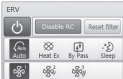

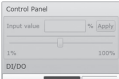














|| Logged-in User with No Authorization




- 1 When the screen above appears, ask for manager.
 - ◆ Depending on control authorization setting, there can be a user who does not have control authorization.
 - ◆ Above screen will appear when the logged-in user does not have control authorization.


Control and Monitoring

Devices controlled and monitored by DMS2.5

Type	Display	Remote controller (Controlling range)	Type	Display	Remote controller (Controlling range)
Indoor unit display icon			DI (Digital Input) display icon		
ERV display icon			DO (Digital Output) display icon		
AHU display icon			Hydro Unit HT, display icon		
ERV PLUS display icon			FCU Kit display icon		
Hydro Unit, EHS display icon			DVM CHILLER display icon		
Fresh duct display icon					

Monitoring Indoor Unit Operation Status

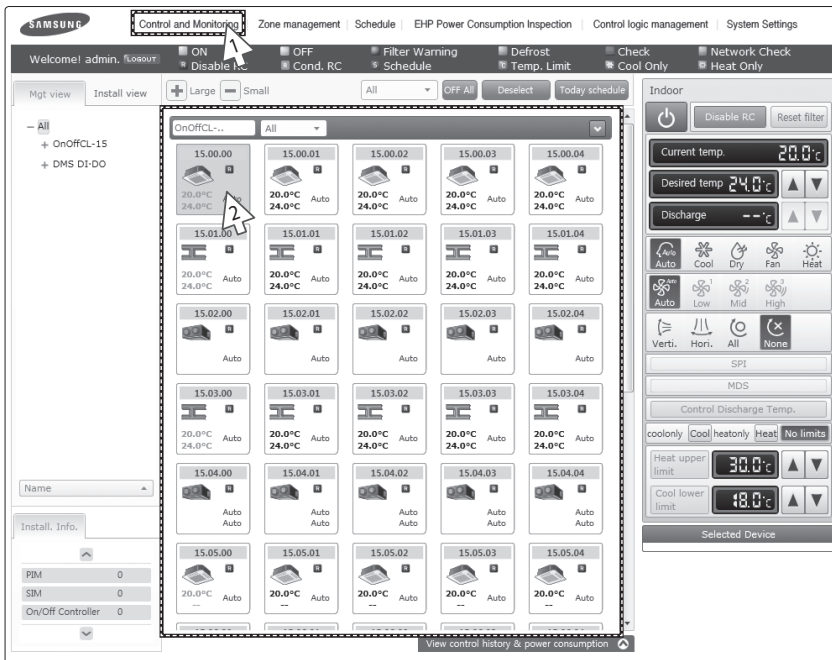

- Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- Check the current status of all devices.
 - ◆ You can check the current controlling status of all installed indoor units, ERV, AHU, ERV PLUS, Fresh duct, Hydro Unit, Hydro Unit HT, EHS, DVM CHILLER, FCU Kit and other devices.
 - ◆ If the SPI or MDS option is set for an indoor unit, the  icon appears on the indoor unit picture as shown in the following figure:



- ◆ If the outdoor unit is in emergency operation or the MTFC is operating, the siren icon appears as shown in the following figure:



Control and Monitoring (Continued)

Note


- ◆ When the advanced functions (such as Sleep mode, Energy saving function) are selected through wired/wireless remote controllers or indoor unit panel, set operation mode on the remote controllers and DMS2.5 may be displayed differently. Also, when controlling by DMS2.5, additional functions will be canceled.
- ◆ Depending on the model of indoor unit, Horizontal/All air flow direction control may not be possible. In this case, vertical or fixed flow will be displayed depending on indoor unit's basic operation specification.



CAUTION


Some functions available on DMS2.5 web page may not be functional at BACnet Gateway and LonWorks Gateway. For detailed function, refer to the installation manual or contact Samsung Electronics.

Controlling an Indoor Unit

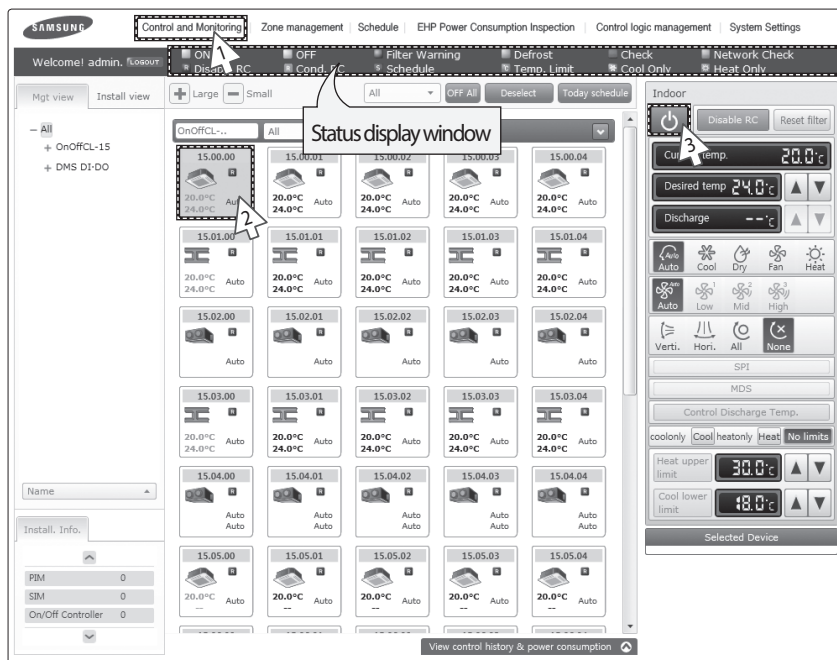

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select an indoor unit to control.
 - ◆ Check the indoor unit status through status display window.
 - ◆ When the selected indoor unit is switched on, the remote controller panel will be automatically activated.
- 3 Turn the indoor unit on by clicking [⏻].
 - ◆ Remote controller panel will be activated.

Control and Monitoring (Continued)

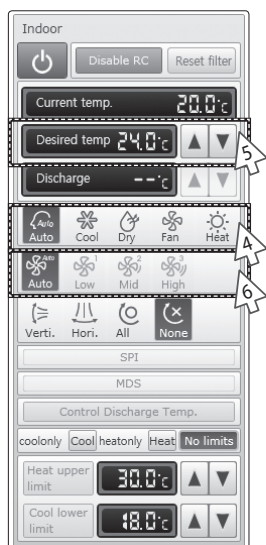

4 Select the operation mode.


- ◆ You can select Auto, Cool, Dry, Fan and Heat operation mode.

5 Click [▲][▼] to set the desired temperature.

- ◆ Each time you press the buttons, the temperature will be adjusted by 1 or 0.1°C (or by 1°F).
- ◆ You cannot adjust the desired temperature in Fan mode.
- ◆ When the indoor unit is in the Cool or Dry mode, you cannot set the desired temperature to none of a temperature higher than the upper temperature limit for cooling and a temperature lower than the lower temperature limit for cooling.
- ◆ When the indoor unit is in the Heat mode, you cannot set the desired temperature to none of a temperature higher than the upper temperature limit for heating and a temperature lower than the lower temperature limit for heating.
- ◆ If the indoor unit supports the Dual Set Point function and this function is enabled in the [System Settings] → [Dual Set Point setting] web page, you can individually set the cooling and heating set temperatures in the Auto mode.

6 Select the fan speed.

- ◆ You can select Auto, Low, Mid and High.
- ◆ If Auto/Dry mode is in operation, fan speed will be set as Auto fan speed.
- ◆ If Fan mode is in operation, you cannot select Auto fan speed.
- ◆ When the Turbo fan speed is available, the Turbo icon is displayed and you can select and control the Turbo fan speed.

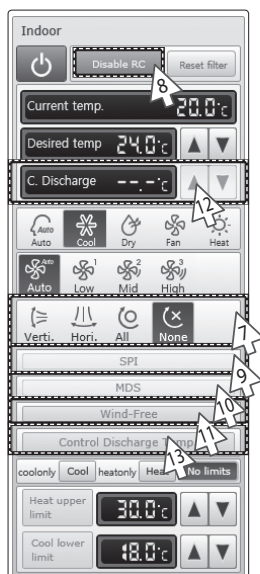

7 Select the air flow.

- ◆ You can select Vertical, Horizontal, All and None air flow direction.
- ◆ When the 360 Cassette air conditioner is connected, icons are changed to Spot, Mid, Wide, and Swing.

8 Set remote controller settings.

- ◆ You can select Enable RC, Disable RC, and Cond. RC.
- ◆ When selecting [Disable RC], indoor unit control by wired/wireless remote controller and indoor unit panel is not possible. Indoor unit control is only available in DMS2.5 web page.
- ◆ Click [] when you want to use wired remote controller in each room.

9 Select SPI setting.

- ◆ You can set SPI through button activation / non activation.

Control and Monitoring (Continued)

10 Select MDS setting .

- ◆ You can set MDS(Motion Detection Sensor) through button activation / non activation.
- ◆ When MDS is activated, you can set the Indirect/Direct function.

11 Select [Wind-Free].

- ◆ When an indoor unit supporting the wind-free feature is connected, use this button to activate or deactivate the wind-free feature.
- ◆ The wind-free feature can be activated only in Cool, Dry, and Fan modes. While the wind-free feature is running, you cannot control the fan speed and the air flow direction.
- ◆ If the mode changes, the wind-free feature is deactivated.

12 Set cooling/heating discharge temperature by clicking [▲] and [▼].

- ◆ When the indoor unit is in Cool mode, you can adjust cooling discharge temperature and when the indoor unit is in Heat mode, you can adjust the heating discharge temperature.
- ◆ When the indoor unit is in Auto, Dry or Fan mode, you cannot adjust the discharged temperature.

13 Select [Control Discharge Temp].


- ◆ You can enable/disable button to decide whether to use discharge temperature adjustment.

Note ***When filter warning sign is displayed on indoor unit status window**
Select the indoor unit and click [Reset filter].
Filter warning will be released.*



- ◆ ***Make sure that each indoor unit must be turned on to control.***
- ◆ ***Selecting remote controller, reset filter, operation mode limits, setting lower/upper temperature limit are possible even if the power of indoor unit is off.***
- ◆ ***Some air flow direction option may be restricted depending on the indoor unit model.***
- ◆ ***SPI, MDS and discharge temperature functions can be operated normally when corresponding optional functions are installed to the selected indoor unit.***


Indoor Unit Operation Mode Limit

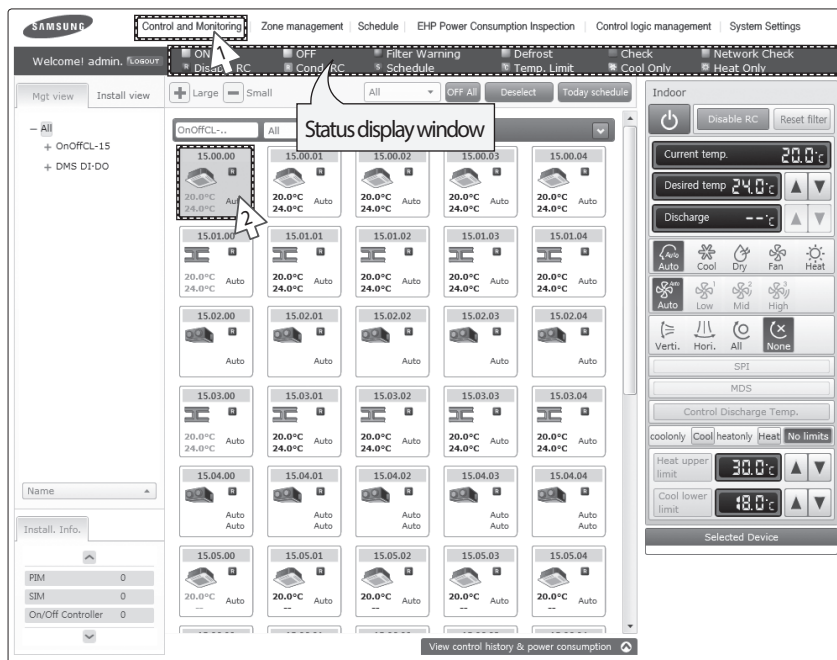

You can monitor the operation status of all indoor units or have individual or whole control of the indoor units.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select an indoor unit to control.
 - ◆ Check the indoor unit status through status display window.
 - ◆ When the selected indoor unit is switched on, the remote controller panel will be automatically activated.

Control and Monitoring (Continued)

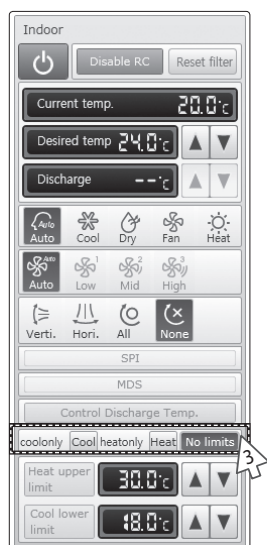

3 Set operation mode limit.


- ◆ You can select [coolonly (Cool)], [heatonly (Heat)], and [No limits].
- No limits : You can use cool mode and heat mode with no limits.

Note ◆ Operation mode limits setting is not available in ERV and DVM CHILLER.



- ◆ If you set the operation mode limit, DMS2.5 will automatically change the operation mode limit setting of all the indoor units connected to same outdoor unit.
- ◆ If the indoor unit is cooling only model, you cannot set the operation mode limit to 'heatonly'.

Setting Upper and Lower Temperature Limits for Cooling and Heating of the Indoor Unit

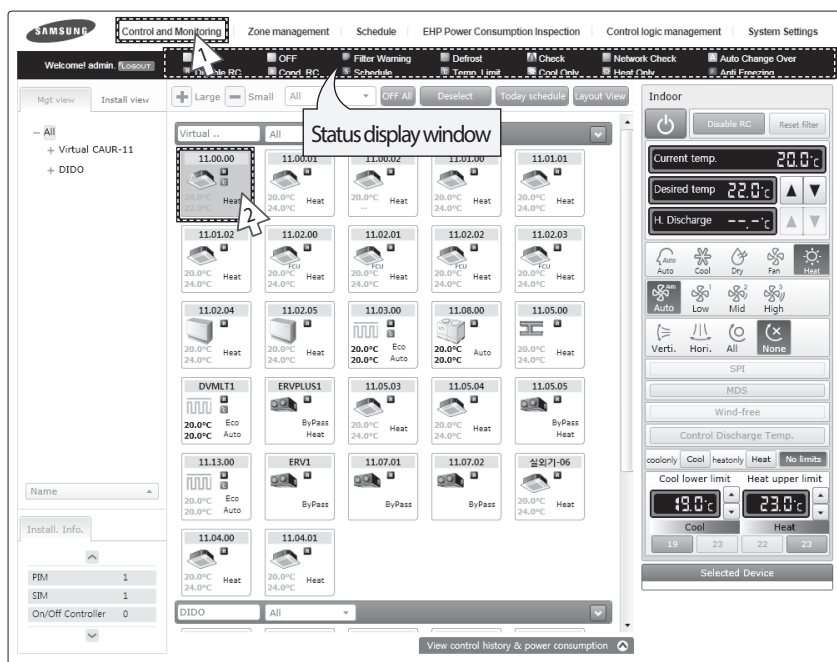

You can monitor the operation status of all indoor units, and control the indoor units as a whole, or as individual units.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select an indoor unit to control.
 - ◆ Check the indoor unit status through status display window.
 - ◆ When the selected indoor unit is switched on, the remote controller panel will be automatically activated.

Control and Monitoring (Continued)



- 3 Set the upper and lower temperature limits for cooling by pressing [▲] and [▼].


- ◆ When the indoor unit is in the Cool or Dry mode, you cannot set the desired temperature to none of a temperature higher than the upper temperature limit for cooling and a temperature lower than the lower temperature limit for cooling.

- 4 Set the upper and lower temperature limits for heating by pressing [▲] and [▼].

- ◆ When the indoor unit is in the Heat mode, you cannot set the desired temperature to none of a temperature higher than the upper temperature limit for heating and a temperature lower than the lower temperature limit for heating.

Note ◆ *You cannot set the upper and lower temperature limits for cooling and heating of ERV, ERV PLUS, Fresh duct, DVM CHILLER.*

Monitoring AHU Operation Status

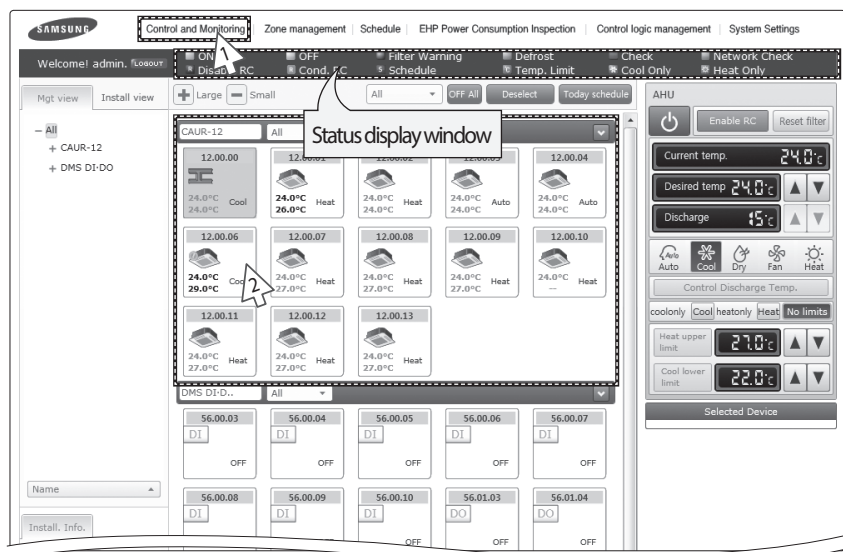


You can monitor the operation status of AHU, and control AHU as a whole, or as individual units.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Check current status of AHU.
◆ Check AHU status through status display window.
◆ When the selected AHU is switched on, the remote controller panel will be automatically activated.

- Note**
- ◆ To control AHU, refer to the 'Controlling an indoor unit' steps. (Refer to the page 23~26)
 - ◆ AHU's fan speed is fixed as high.
 - ◆ You cannot set air flow direction of AHU.
 - ◆ To set the operation mode limit of AHU, refer to the 'Indoor unit operation mode limit' steps. (Refer to the page 27~28)
 - ◆ To set the lower/upper temperature limit of AHU, refer to the 'Setting Upper and Lower Temperature Limits for Cooling and Heating of the Indoor Unit' steps. (Refer to the page 29)
 - ◆ To set the cooling/heating discharge temperature, refer to the step 12~13 of 'Controlling and indoor unit'. (Refer to the page 26)

Control and Monitoring (Continued)


Monitoring Fresh duct operation status

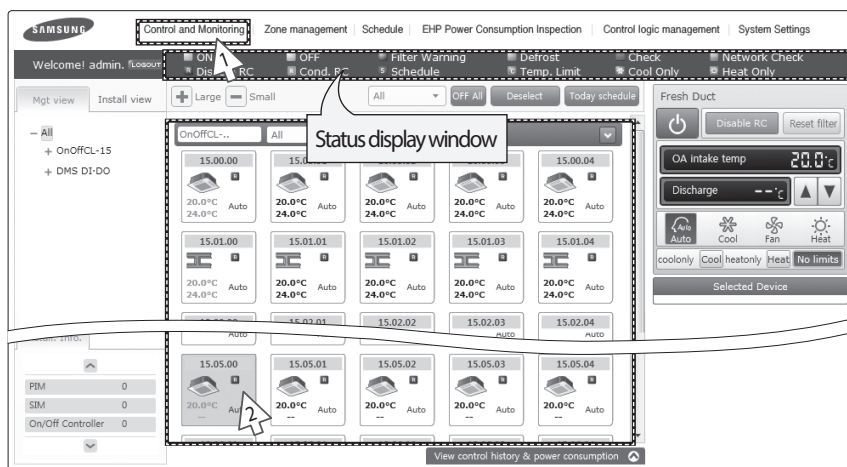




You can monitor the operation status of Fresh duct, and control the Fresh duct as a whole, or as individual units.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appear.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Check the current status of a Fresh duct.
 - ◆ Check the status of a Fresh duct through the status display window.
 - ◆ When the selected Fresh duct is switched on, the remote controller panel will be automatically activated.

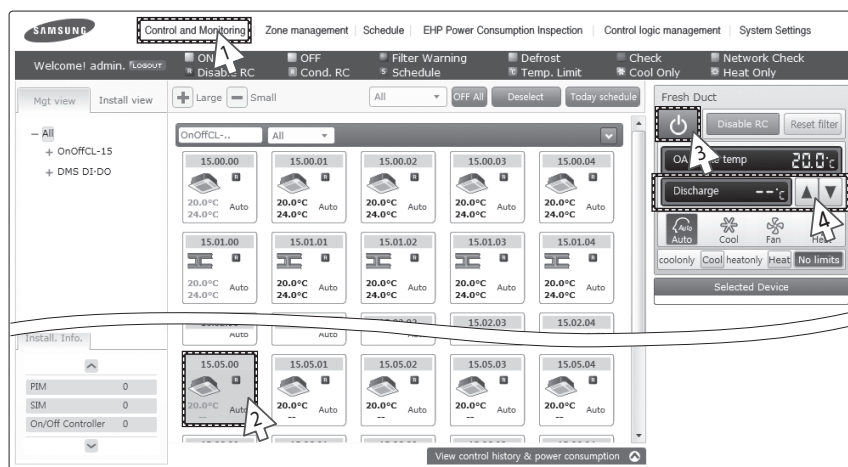Controlling a Fresh duct




- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appear.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS web page.
- 2 Check the current status of a Fresh duct.
 - ◆ Check the status of a Fresh duct through the status display window.
 - ◆ When the selected Fresh duct is switched on, the remote controller panel will be automatically activated.
- 3 Turn the Fresh duct on by clicking [].
 - ◆ Remote controller panel will be activated.
- 4 Set cooling/heating discharge temperature by clicking [] and [].
 - ◆ When the Fresh duct is in Cool mode, the Fresh duct can be set as cooling discharge temperature and when the Fresh duct is in Heat mode, the Fresh duct can be set as heating discharge temperature.
 - ◆ When the Fresh duct is in Auto or Fan mode, the discharge temperature cannot be adjusted.

Control and Monitoring (Continued)

Note

- ◆ *Refer to the 'OnOff controller' for Fresh duct control.
(Refer to page 23~26)*
- ◆ *The fan speed of a Fresh duct is fixed as 'High'.*
- ◆ *Setting air flow direction of a Fresh duct is not available.*
- ◆ *Refer to the 'Indoor unit operation mode limit' for
Fresh duct operation mode limit.
(Refer to page 27~28)*

Monitoring ERV Operation Status

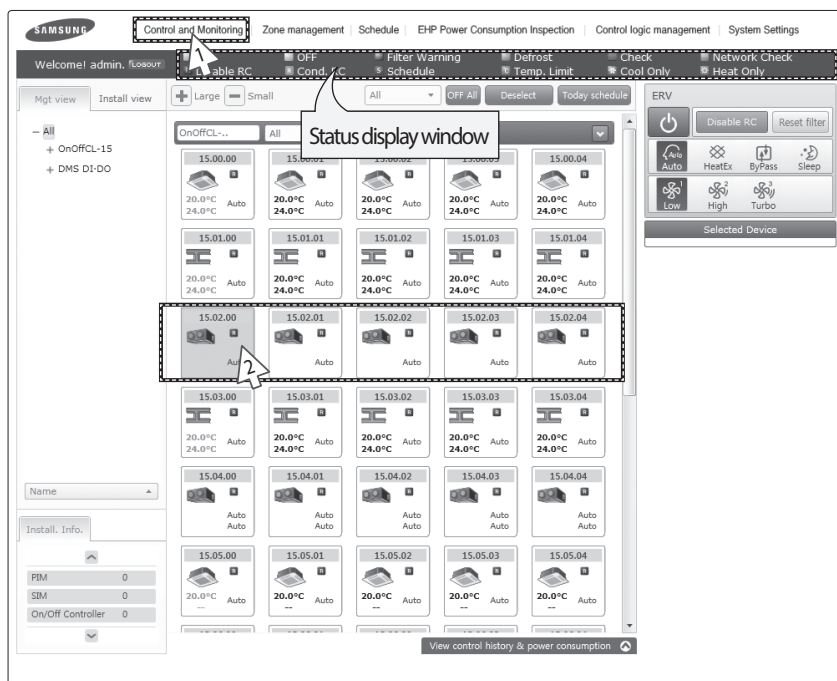


You can monitor the operation status of ERV, and control the ERV as a whole, or as individual units.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Check current status of ERV.
 - ◆ Check the status of ERV through the status display window.
 - ◆ When the selected ERV is switched on, the remote controller panel will be automatically activated.


Control and Monitoring (Continued)

Controlling ERV

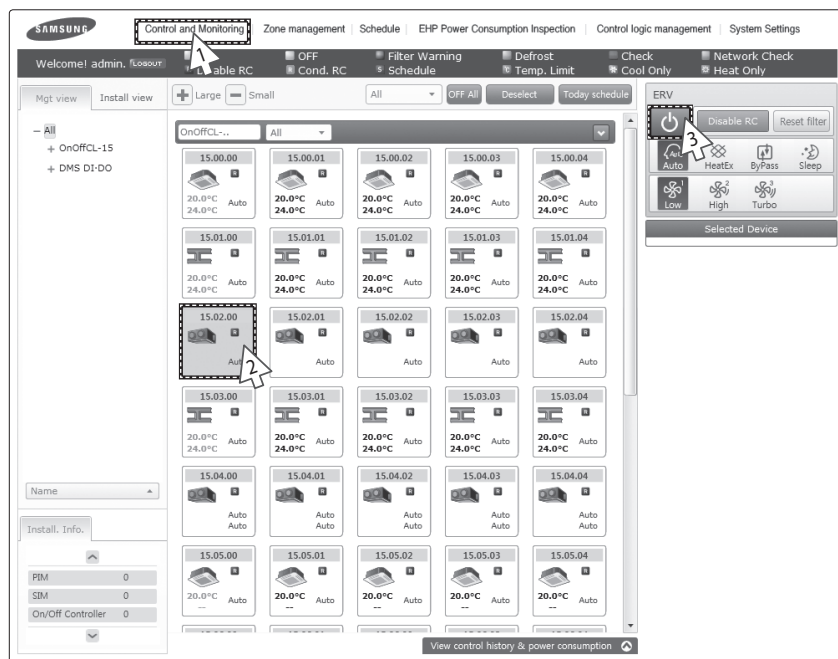

You can monitor the operation status of ERV, and control the ERV as a whole, or as individual units.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select an ERV to control.
 - ◆ When the selected ERV is switched on, the remote controller panel will be automatically activated.
- 3 Turn ERV on by pressing [].
 - ◆ The remote controller panel will be activated.

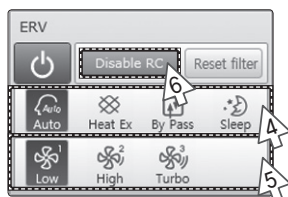

4 Select the operation mode.

- ◆ You can select Auto, HeatEx, By pass and Sleep.
- ◆ Only the buttons that the ERV supports are enabled.

5 Select the fan speed.

- ◆ You can select Low, High and Turbo.
- ◆ Fan speed is set to Low in Sleep mode.

6 Set remote controller settings.

- ◆ You can select Enable RC, Disable RC, and Cond. RC.
- ◆ When selecting [Enable RC], indoor unit control by wired/ wireless remote controller is not possible. Indoor unit control is only available in DMS2.5 web page.
- ◆ Click [⌂] when you want to use wired remote controller in each room.

Note


- ◆ **When filter warning sign is displayed on ERV status window**
Select the ERV and click [Reset filter]. Filter warning will be released.



- ◆ **Make sure that ERV must be turned on to control.**
- ◆ **Selecting remote controller and filter reset are possible even if the power of indoor unit is off.**

Control and Monitoring (Continued)


Monitoring ERV PLUS operation status

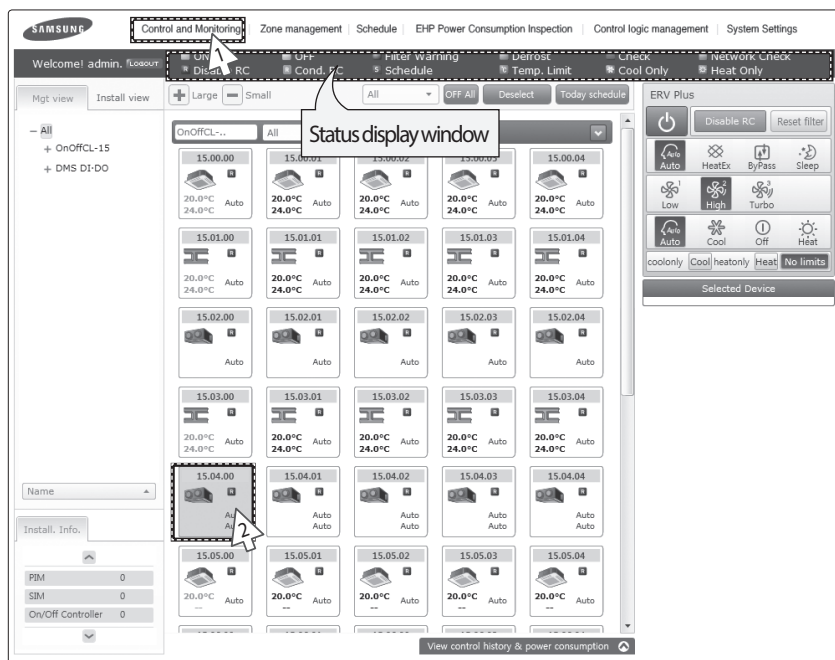

You can monitor the operation status of ERV PLUS, and control the ERV PLUS as a whole, or as individual units.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Check the current status of ERV PLUS.
 - ◆ Check the status of ERV PLUS through the status display window.
 - ◆ When the selected ERV PLUS is switched on, the remote controller panel will be automatically activated.

Controlling ERV PLUS

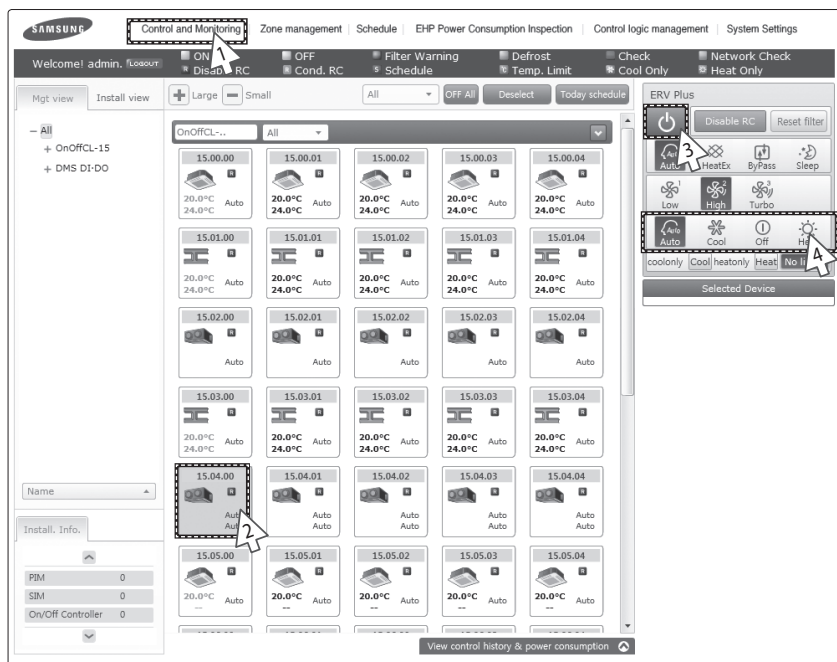


- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appear.
◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select ERV PLUS to control.
◆ Check the status of ERV PLUS through the status display window.
◆ When the selected ERV PLUS is switched on, the remote controller panel will be automatically activated.
- 3 Turn the ERV PLUS on by clicking [Auto].
◆ Remote controller panel will be activated.
- 4 Select the operation mode
◆ You can select Auto, Cool, Off and Heat mode.


Note ◆ Refer to the 'Controlling ERV' for ERV PLUS control. (Refer to page 36~37)
◆ Refer to the 'Indoor unit operation mode limit' for ERV PLUS operation mode limit. (Refer to page 27~28)

Control and Monitoring (Continued)

Controlling Hydro unit

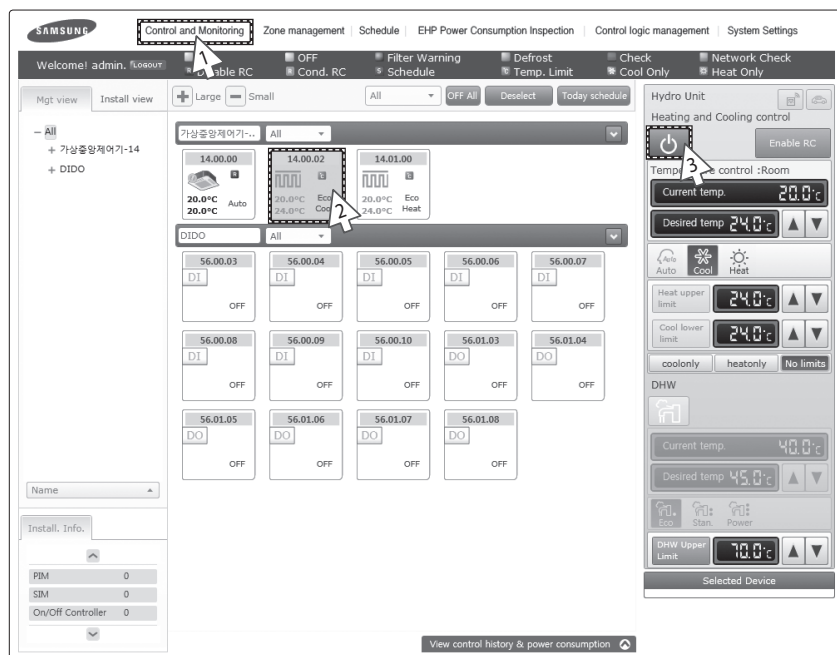


- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appear.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select a Hydro unit to control.
 - ◆ When the selected Hydro unit is switched on, the remote controller panel will be automatically activated.
 - ◆ Hydro unit does not support multiple selection with other devices and you can only control and monitor the Hydro unit individually. When you select Hydro unit while multiple devices are already selected, previously selection (of multiple devices) will be canceled.
- 3 Turn the Hydro unit on by clicking [ON].
 - ◆ Remote controller panel will be activated.

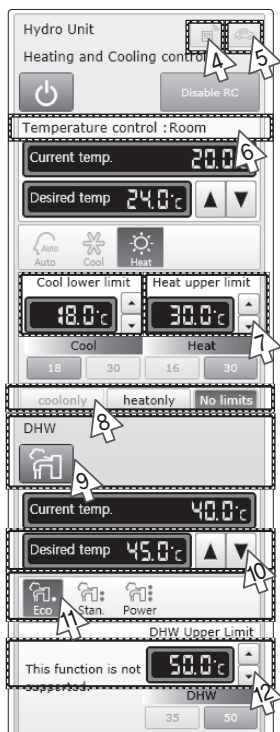


- 4 Icon will be activated when either Thermostat 1 or Thermostat 2 is on.
- 5 Icon will be activated when the Outing mode is on.
- 6 Type of temperature control will be displayed. Control and monitoring status of current temperature, desired temperature, operation mode, the upper and lower temperature limits for cooling and heating will be changed depending on the type of temperature control.
 - ◆ Room: You can only control Cool and Heat mode.
 - ◆ Water out: You cannot adjust the desired temperature in Auto mode.

Control and Monitoring (Continued)

-
- 7 Select the upper and lower temperature limits for cooling and heating by clicking [▲] [▼].
-
- 8 Select [coolonly] or [heatonly] button.
-
- 9 Click the  button to turn on/off the power for direct heat water.
◆ You can turn on the power for direct hot water only when the operation mode is on Auto or Heat mode.
-
- 10 Select desired temperature for hot water by clicking [▲] [▼].
-
- 11 Select desired operation mode for hot water.
◆ Select the operation mode from Eco/Standard/Power.
-
- 12 Select the upper and lower temperature limits for DHW by clicking [▲] [▼].
-


Note ◆ *Since the Hydro Unit and Hydro Unit HT does not have any filters, filter monitoring and filter reset is not available.*

Controlling Hydro Unit HT

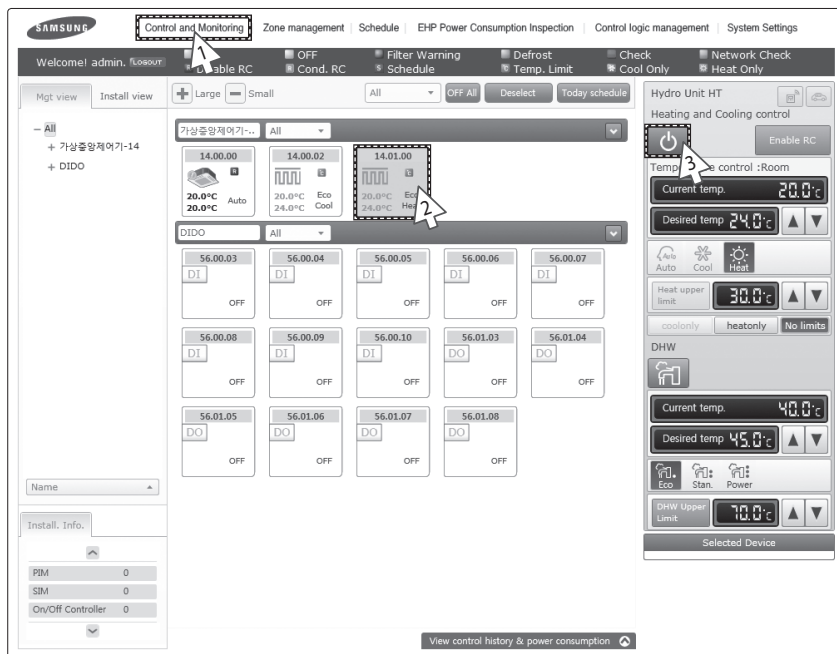


- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appear.
 ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select a Hydro Unit HT to control.
 ◆ When the selected Hydro Unit HT is switched on, the remote controller panel will be automatically activated.
 ◆ Hydro Unit HT does not support multiple selection with other devices and you can only control and monitor the Hydro Unit HT individually. When you select Hydro Unit HT while multiple devices are already selected, previously selection (of multiple devices) will be canceled.
- 3 Turn the Hydro Unit HT on by clicking [⏻].
 ◆ Remote controller panel will be activated.

Control and Monitoring (Continued)

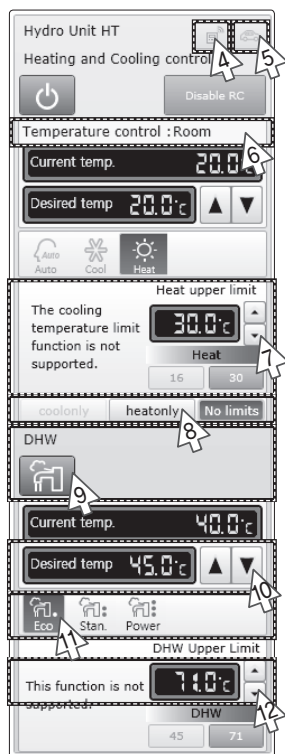

- 4 Icon will be activated when either Thermostat 1 or Thermostat 2 is on.
- 5 Icon will be activated when the Outing mode is on.
- 6 Type of temperature control will be displayed. Control and monitoring status of current temperature, desired temperature, operation mode, the upper and lower temperature limits for heating will be changed depending on the type of temperature control.
 - ◆ Room: You can only control Heat mode.
 - ◆ Water out: You can only control Auto and Heat mode.
You cannot adjust the desired temperature in Auto mode.

-
- 7 Select the upper and lower temperature limits for heating by clicking [▲] [▼].
-
- 8 To select exclusive operation mode, select [heatonly] or [No limits].
-
- 9 Click the  button to turn on/off the power for direct heat water.
 - ◆ You can turn on the power for direct hot water only when the operation mode is on Auto or Heat mode.
-
- 10 Select desired temperature for hot water by clicking [▲] [▼].
-
- 11 Select desired operation mode for hot water.
 - ◆ Select the operation mode from Eco/Standard/Power/Force.
-
- 12 Select the upper and lower temperature limits for DHW by clicking [▲] [▼].
-


Note ◆ *Since the Hydro Unit HT does not have any filters, filter monitoring and filter reset is not available.*
 ◆ *Hydro Unit HT does not support temperature in Fahrenheit.*

Controlling EHS

- 1 Basic control operating procedures are the same as 'Hydro Unit', and others are as follows:
 - ◆ 'Force' is added to the hot water mode.
 - ◆ The hot water thermostat is also considered when the thermostat icon is activated.
-
- 2 Basic control operating procedures are the same as 'Hydro Unit HT' in case of EHS HT.
-

Control and Monitoring (Continued)

Monitoring DMS DI/DO Operation Status

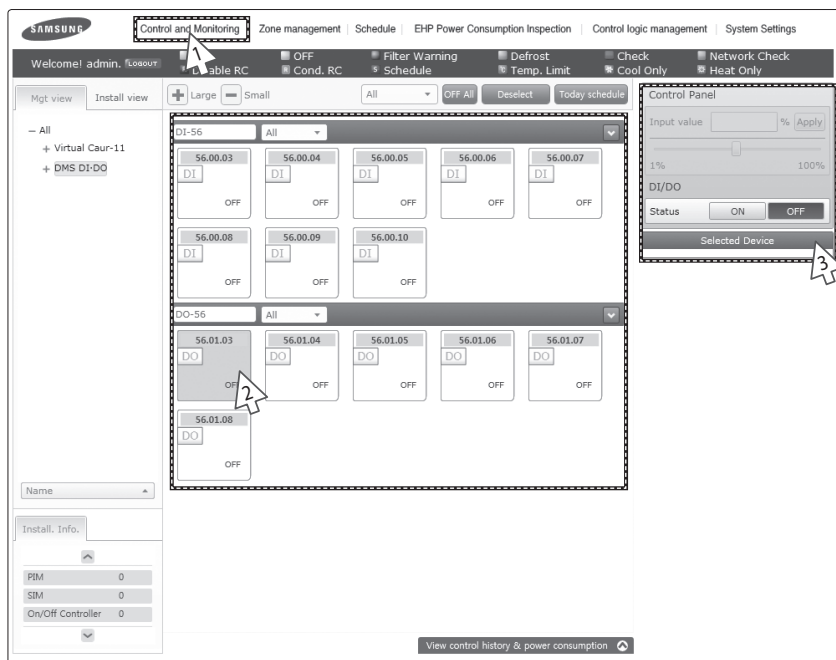


- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Check the current status of DI and DO device.
- 3 Monitor the device through the control panel.


Note

- ◆ Entering OnOff becomes impossible for DI device.
- ◆ Entering OnOff becomes possible for DO device.
- ◆ Entering control value becomes impossible for DI/DO device.
- ◆ You can control and monitor DI/DO which built-in DMS2.5. However, DI 1, 2 and DO 1, 2, 9, 10 are excluded from controlling and monitoring because they are used for the internal function of DMS.

Controlling DMS DO

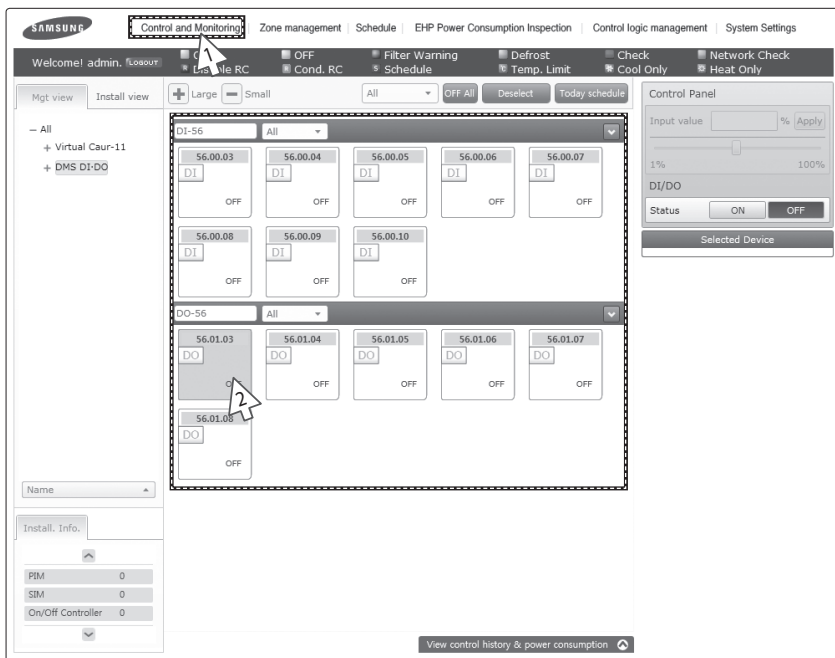

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select DO device to control when control and monitoring screen appears.
◆ Check the status of DI or DO device.

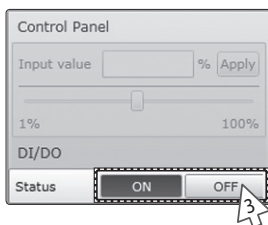


- 3 Turn DO device on by clicking [ON]/[OFF] button on the control panel.

Note Remote controller setting is not possible for DI/DO device.

Control and Monitoring (Continued)


Controlling FCU Kit

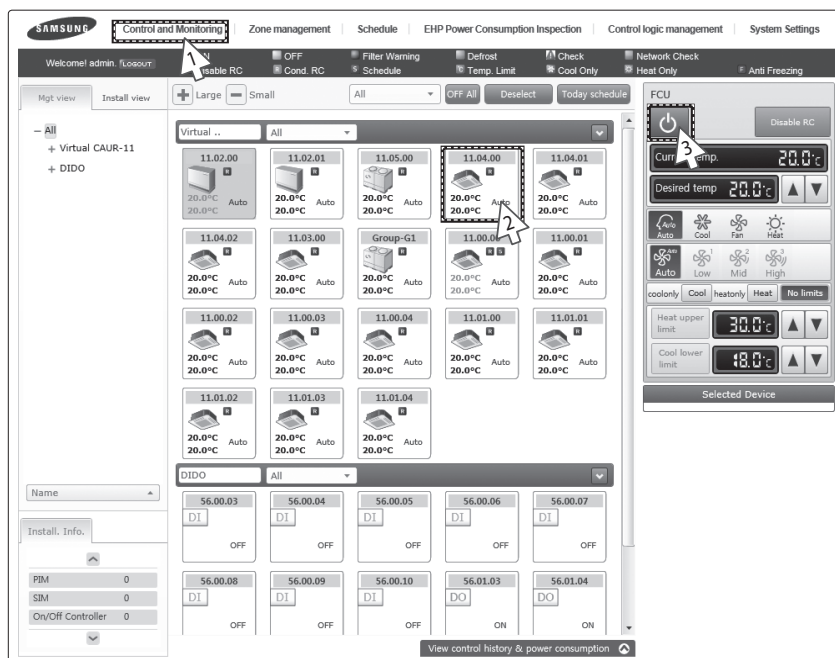

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.

- 2 Select FCU to control when control and monitoring screen appears.
 - ◆ Check the status of an indoor unit through status display window.
 - ◆ When the selected indoor units are switched on, the remote controller panel will be automatically activated.

- 3 Turn the selected indoor units on by clicking [⏻].
 - ◆ Remote controller panel will be activated.

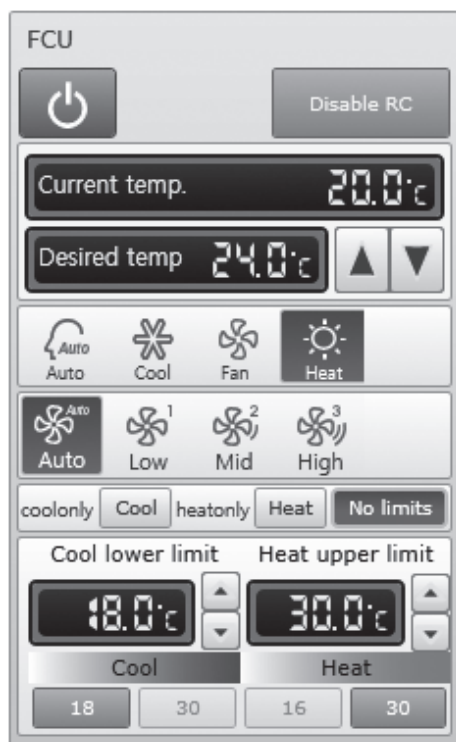


Note

- ◆ Refer to the 'Controlling an indoor units' steps for FCU Kit control. (Refer to page 23~26)
- ◆ Refer to the 'Indoor unit operation mode limit' for FCU Kit operation mode limit. (Refer to page 27~28)
- ◆ Refer to 'Setting Upper and Lower Temperature Limits for Cooling and Heating of the Indoor Unit' for FCU Kit temperature limits. (Refer to page 29)
- ◆ When a FCU manufactured by Samsung is connected, the indoor unit icon appears as shown in the figure below. The control and monitoring items are the same with normal indoor units, except that you cannot control Auto and Dry modes.




Control and Monitoring (Continued)

Controlling DVM CHILLER

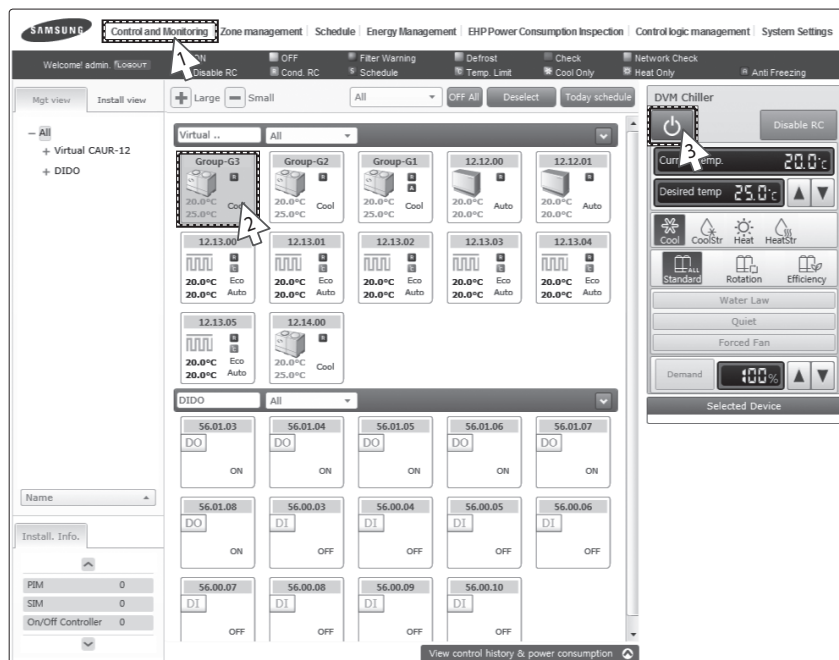

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select DVM CHILLER to control when control and monitoring screen appears.
 - ◆ Check the status of an indoor unit through status display window.
 - ◆ When the selected indoor units are switched on, the remote controller panel will be automatically activated.
- 3 Turn the selected indoor units on by clicking [ON].
 - ◆ Remote controller panel will be activated.

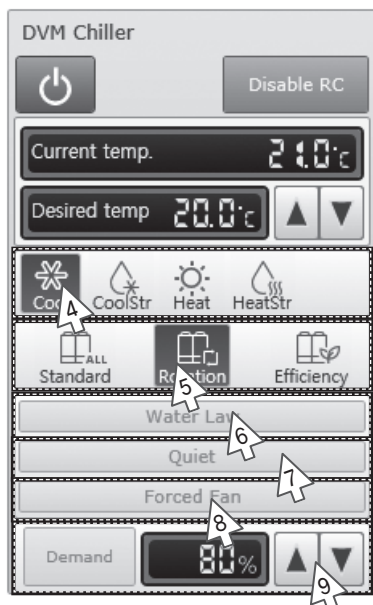


- 4 Select the operation mode.
◆ You can select Cool, Cool Storage, Heat, and Hot Water mode.
- 5 Select the operation pattern.
◆ You can select Standard, Rotation, Efficiency pattern.
- 6 Select Water Law setting.
◆ You can enable/disable button to select Water Law.
◆ You cannot adjust the desired temperature in Water Law.
- 7 Select Quiet function.
◆ You can enable/disable button to select Quiet function.
- 8 Select Forced Fan function.
◆ You can enable/disable button to select Forced Fan function.
- 9 Select Demand level by clicking [▲] [▼].
◆ You can select Demand level in range of 50%~100%.


Note ◆ *Power, desired temperature, operation mode, operation pattern, Water Law, Quiet function, Forced Fan function, Demand function can be controlled and monitored properly when the options are installed on DVM CHILLER.*

Control and Monitoring (Continued)

Controlling Packaged DOAS

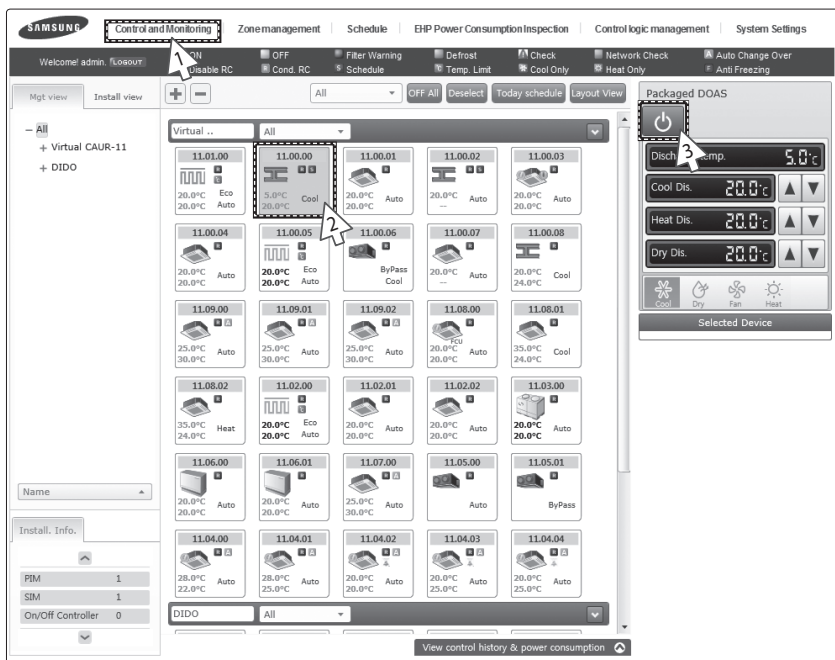


- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Check the current status of Packaged DOAS when control and monitoring screen appears.
 - ◆ Check the status of Packaged DOAS through status display window.
 - ◆ When the selected indoor units are switched on, the remote controller panel will be automatically activated.
- 3 Turn the Packaged DOAS on by clicking [⏻].
 - ◆ Remote controller panel will be activated.

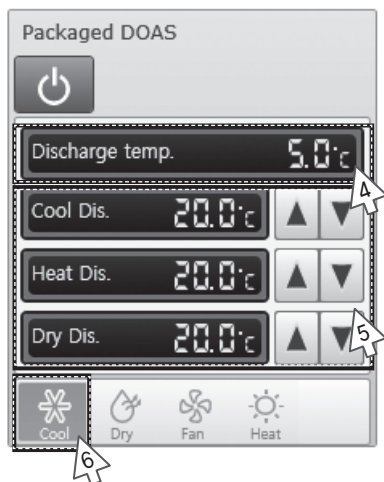

-
- 4 Check the current discharge temperature.
-
- 5 Set the cool, heat, and dry discharge temperatures by clicking [▲] [▼].
-
- 6 Check the current operation mode. You cannot control operation modes in Packaged DOAS.
-

Control and Monitoring (Continued)

Monitoring the selected multiple devices operation status

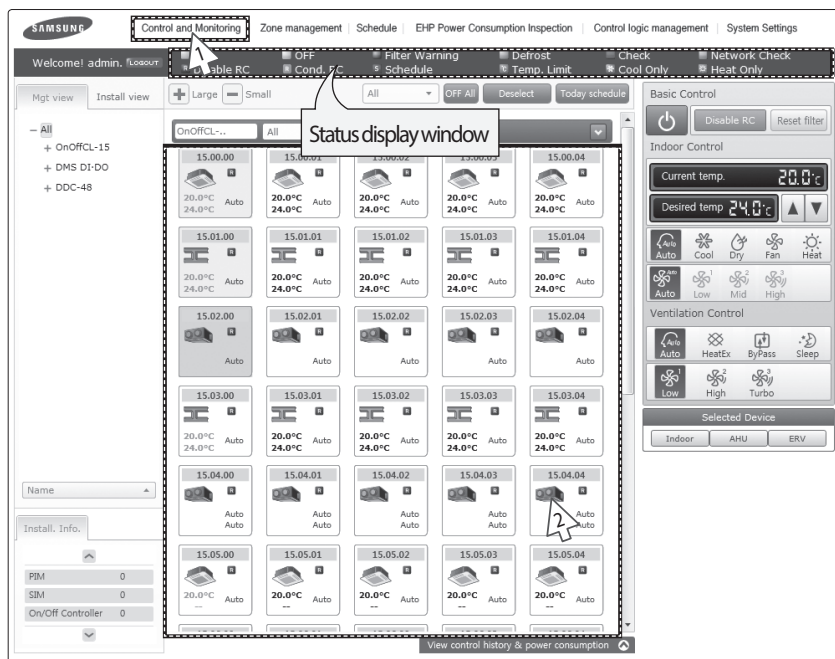


You can monitor the operation status of other type devices, and control other type devices as a whole, or as individual units.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Check the status of the selected multiple devices.
 - ◆ Check the status of an indoor unit through status display window.
 - ◆ When the selected devices are switched on, the remote controller panel will be automatically activated.

Note


- ◆ When users select multiple devices, 'Basic Control' will be displayed on the screen. (This is when different types of multiple devices are selected.)
- ◆ The current status of last selected indoor unit type devices (Indoor unit, AHU, Fresh duct) will be displayed on the 'Indoor control'.
- ◆ The status of last selected ERV type devices (ERV, ERV PLUS) will be displayed on the 'Ventilation Control'.
- ◆ The list of the selected multiple devices will be displayed on the 'Selected Device'.
- ◆ Hydro Unit, Hydro unit HT and EHS do not support multiple selection with other devices and you can only control and monitor the Hydro Unit, Hydro unit HT and EHS individually. When you select Hydro Unit or Hydro Unit HT or EHS while multiple devices are already selected, previously selection (of multiple devices) will be canceled.

Controlling the selected multiple devices

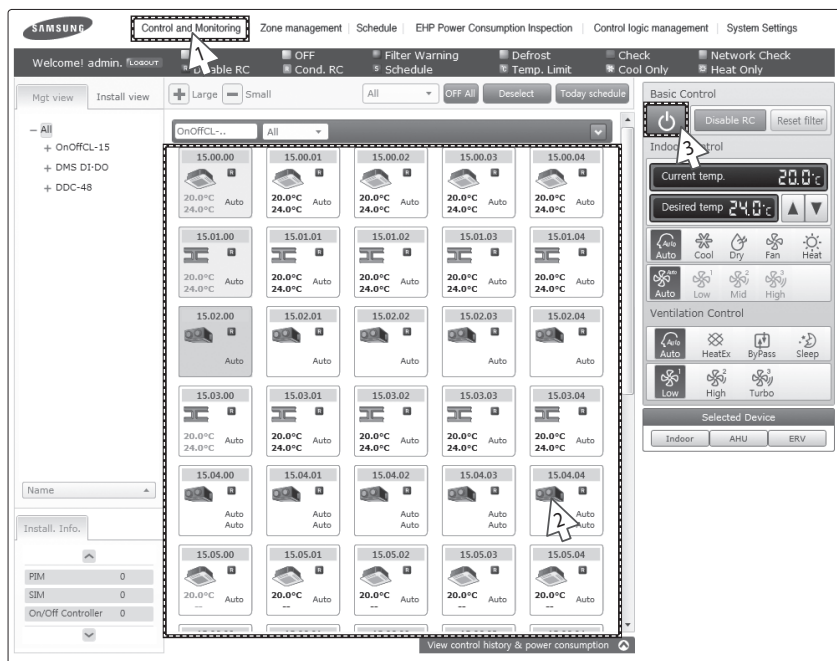

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Check the status of the selected devices.
 - ◆ Check the status of an indoor unit through status display window.
 - ◆ When the selected devices are switched on, the remote controller panel will be automatically activated.
- 3 Turn the selected devices on by clicking [⏻].
 - ◆ Remote controller panel will be activated.

Control and Monitoring (Continued)

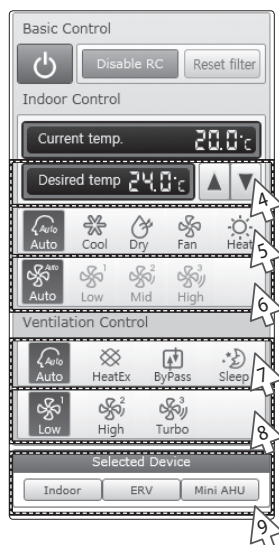

- 4 Select the desired temperature by clicking [▲][▼].
 - ◆ Each time you press the buttons, the temperature will be adjusted by 1 or 0.1°C (or by 1°F).
 - ◆ You cannot adjust the desired temperature in Fan mode.
 - ◆ When the indoor unit is in the Cool or Dry mode, you cannot set the desired temperature to none of a temperature higher than the upper temperature limit for cooling and a temperature lower than the lower temperature limit for cooling.
 - ◆ When the indoor unit is in the Heat mode, you cannot set the desired temperature to none of a temperature higher than the upper temperature limit for heating and a temperature lower than the lower temperature limit for heating.
- 5 Select the operation mode.
 - ◆ You can select Auto, Cool, Dry, Fan and Heat mode.
- 6 Select the fan speed.
 - ◆ You can select Auto, Low, Mid and High.
 - ◆ If Auto/Dry mode is in operation, fan speed will be set as Auto fan speed.
 - ◆ If Fan mode is in operation, you cannot select Auto fan speed.

7 Select the ERV operation mode.

- ◆ You can select Auto, Heat Ex, By pass and Sleep mode.

8 Select the fan speed.

- ◆ You can select Low, high and Turbo.
- ◆ If Sleep mode is in operation, the fan speed will be set as Low fan speed.


9 When controlling certain types of devices in detail, select the device you want to control on the list of the 'Selected Device'.

Note

- ◆ *If the ERV type devices are not on the list of the 'Selected Device', ventilation control will not be activated.*
- ◆ *If the indoor unit type devices are not on the list of the 'Selected Device', Indoor control will not be activated.*
- ◆ *When controlling an indoor unit, ERV devices (ERV, ERV PLUS) cannot be controlled.*
- ◆ *When controlling ERV devices, Indoor unit (Indoor unit, AHU, Fresh duct) cannot be controlled.*
- ◆ *You can select power OnOff, Disable RC, Reset filter, Indoor Control (Desired temp, operation mode, fan speed) and ERV Control in the 'Basic control'.*
- ◆ *Power OnOff, Disable RC and Reset filter are controlled to all the devices.*
- ◆ *When selecting multiple devices, the list of the selected devices will be displayed at the bottom of the remote controller. When selecting the device you want to control, the remote control panel of the selected device will be activated and you can control the selected device in detail. However, the rest of the devices cannot be controlled other than the selected device.*
- ◆ *DVM CHILLER cannot be selected with other types of devices and can be selected with DVM CHILLERS only.*

Control and Monitoring (Continued)


Checking the Installation Information

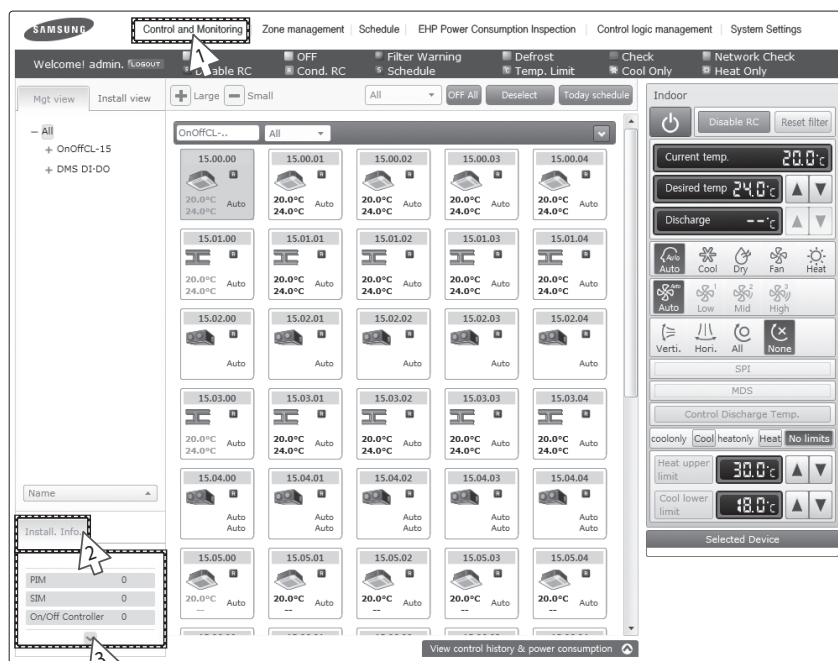

You can check the installation status of currently connected device.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Click 'Install.Info.' tab at the bottom left of the screen.
- 3 Check installation status of currently connected device in the installation information tab.
 - ◆ You can check installation information by pressing [^] and [v] buttons.

View the Control History & Power Consumption

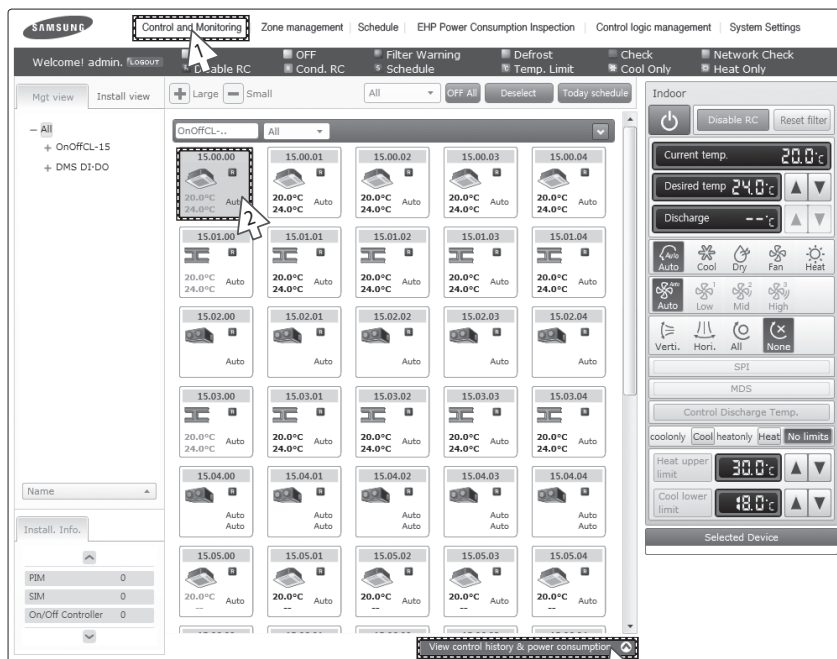

You can select a device and view control history and power consumption information.

- 1 Click [Control and Monitoring] when DMS2.5 web page menu screen appears.
 - ◆ [Control and Monitoring] screen will appear when you log-in to DMS2.5 web page.
- 2 Select a device you want to view control history and power consumption.
- 3 Click [View control history & power consumption] tab and wait for a while.
 - ◆ Control history and power consumption information are received from DMS2.5.
 - ◆ 'Data receiving' message will appear on the bottom right of the tab.



Control and Monitoring (Continued)

The screenshot displays the Samsung Control and Monitoring web interface. The top navigation bar includes links for Control and Monitoring, Zone management, Schedule, EHP Power Consumption Inspection, Control logic management, and System Settings. The main area shows a grid of device controls, each displaying a temperature setpoint and mode. A callout box highlights the 'View control history & power consumption' option for a selected device.

15.00.00

☒ Control history

Controlled time	2012-12-03 20:13:20
Type of control	User control
Power	OFF
RC	-

☒ Power consumption

Consumption in the current month	-
Average consumption current month	-
Consumption of previous month	-
Average consumption last month	-

Indoor

Current temp. 20.0°C

Desired temp. 24.0°C

Discharge 00°C

Auto Cool Dry Fan Heat

Auto Low Mid High

Verti. Hori. All None

SPI

MDS

보통온도 제어

coolonly Cool/heating Heat No limits

Heat upper limit 30.0°C


Cool lower limit 18.0°C

Selected Device

- When data reception is completed from DMS2.5, check control history and power consumption of selected device.

- Note**
- ◆ In 'Control history', you can check power control and remote controller usage status.
 - ◆ Operation mode, desired temperature, air flow and fan speed control shows you the controlled time and type of control only.
 - ◆ If SIM/PIM is not installed, power consumption information may not be correct.
 - ◆ Power consumption information is displayed only when SIM/PIM is installed.
 - ◆ If SIM/PIM is removed, value measured with SIM/PIM will be displayed.

Adding a 2D Layout Drawing

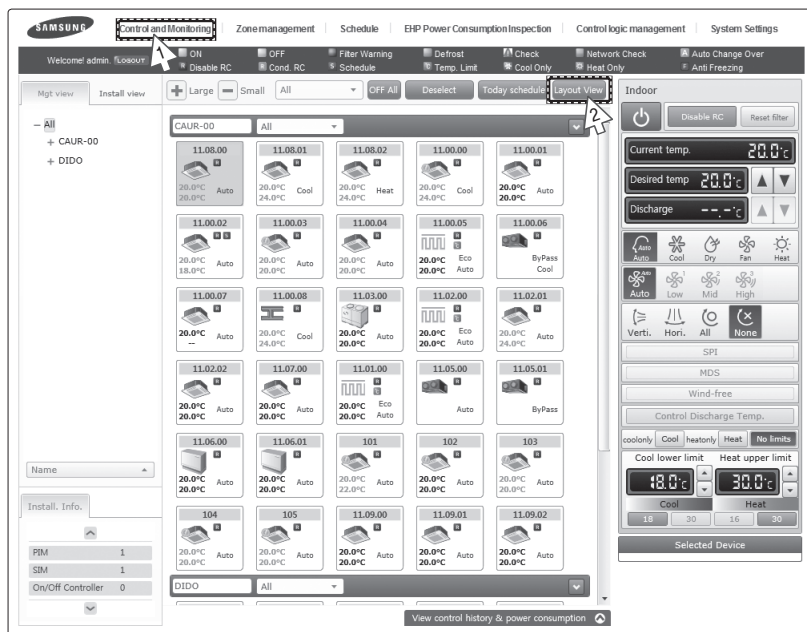

- When the DMS2.5 web page menu screen appears, click [Control and Monitoring].
 - When you log in to the DMS2.5 web page for the first time, the [Control and Monitoring] screen appears.
- When the [Control and Monitoring] screen appears, click the [Layout View] button.
 - You are moved to the drawing view screen.
- In the current view mode, click the [Edit] button to switch to the Edit mode.
 - When the Edit mode is entered, additional editing menus appear.



- Click the [+] button to add a zone.




- Click the [Add] button. You can select a drawing file to display in the zone.
 - When the drawing is added, this button changes to the [change] button.






Control and Monitoring (Continued)

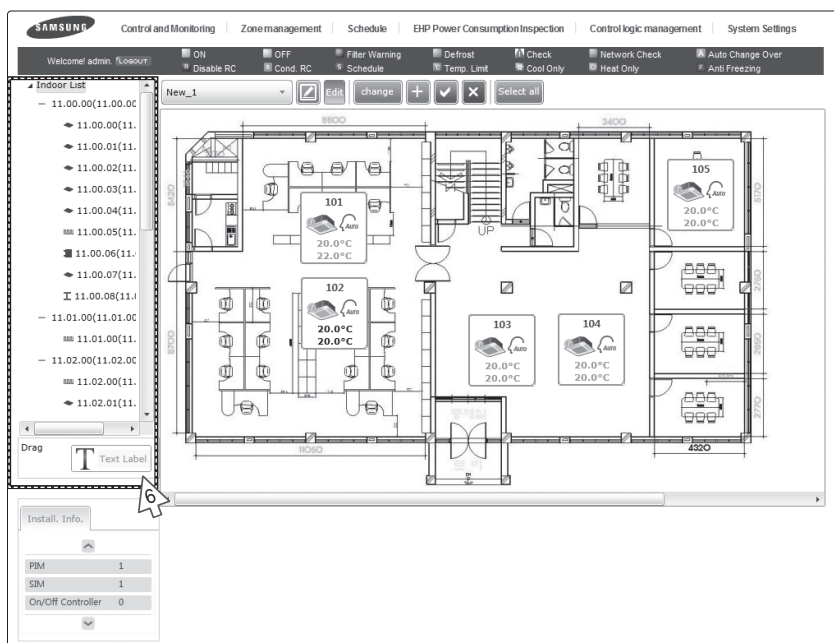- 6 Drag and drop the units that you want to display on the drawing from the installation information pane at the left of the screen to the drawing pane.
 - ◆ To display a text, drag and drop [Text Label] from the bottom of the installation information pane to the drawing pane.

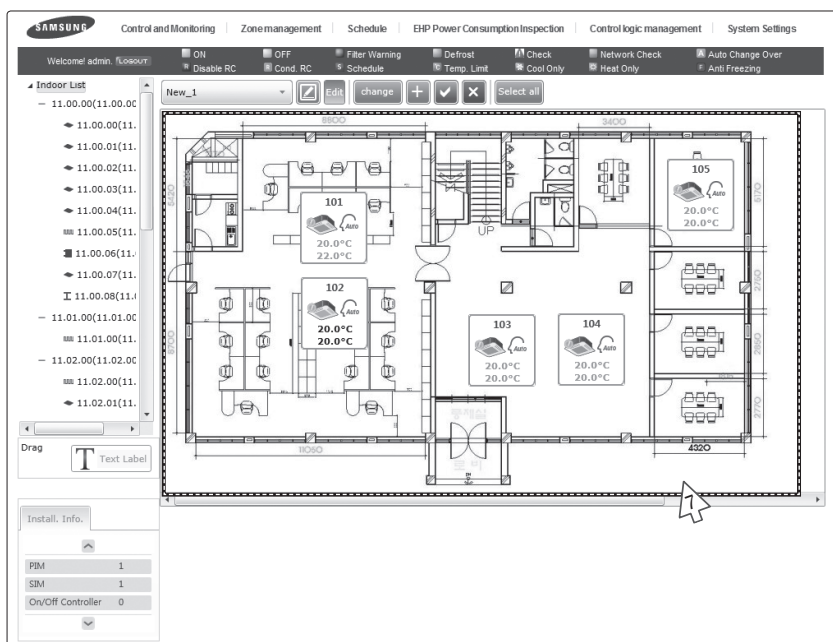


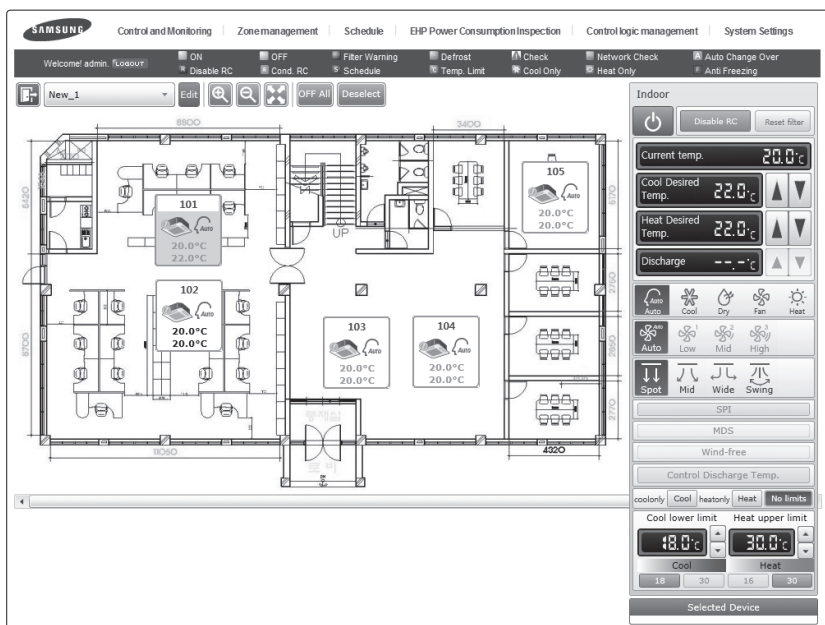
- 7 Drag the indoor unit icons to adjust the indoor unit positions in detail.
 - ◆ After adjusting a text position, double-click the text label to edit the text.
 - ◆ When a popup window appears, enter a new text.
 - ◆ To adjust the text size, click the [+ / -] button.



- 8 To delete an indoor unit from the drawing, select the indoor unit, and then click the  Delete icon from the menu.
 - ◆ To delete a text label from the drawing, click the [X] button at the right to the text label.
- 9 To rename the zone, click the  Rename zone icon.
 - ◆ When a popup window appears, enter a new text.


Control and Monitoring (Continued)

- 10 To complete the drawing addition, click the  Save icon from the menu
- 11 Click the [Edit] button to switch to the View mode so that you can control and monitor the indoor units.
- 12 Click an indoor unit in the drawing. A control panel appears, and you can control the indoor unit from it.



- 13 If scroll bars appear because the drawing file is large, drag the drawing to move to the positions you want.
 - ◆ To move left or right, press and hold the left Shift key and turn the mouse wheel.
 - ◆ To move up or down, press and hold the left Ctrl key and turn the mouse wheel.
 - ◆ To zoom or out, turn the mouse wheel when the mouse pointer is over the drawing.
 - ◆ You can also zoom in or out by clicking the corresponding buttons in the menu bar at the top.



- 14 To view the drawing in full screen mode, click the  Full screen button from the menu bar at the top.

◆ The 2D Layout screen appears in full screen mode.

Note


- ◆ You can add only image files in jpg, gif, or png format that are 1.8 MB or less.
- ◆ If none of zone and drawing file exist, you can add neither indoor unit nor text box.
- ◆ To exit full screen mode, click Add drawing, or press the ESC or Backspace key. If you are using dual monitors, you can exit full screen mode by pressing another program that is running. An indoor unit can belong to only one zone.
- ◆ You can enter only up to 30 characters in a text label.
- ◆ You can zoom in up to 1.5 times of the original image.
- ◆ You can zoom out up to 0.5 times of the original image.
- ◆ You can control and monitor an indoor unit only in the View mode.
- ◆ Even if you go back to Control and Monitoring by pressing the Backspace key while editing in the 2D Layout screen, your changes remain temporarily. However, if you refresh or enter another menu, your changes are lost.

2D Layout View Mode Functions



- 1 Returns to the basic Control and Monitoring screen from the Drawing View screen.
- 2 Displays the currently added zones. You can select a zone.
- 3 Switches from the View mode to the Edit mode.
- 4 Zooms in or out on the screen.
- 5 Displays the 2D Layout screen in full screen mode.
- 6 Turns off all indoor units connected to the DMS.
- 7 Selects all indoor units displayed in the current zone.
 - ◆ Only some indoor units may be selected depending on their types.

2D Layout Edit Mode Functions

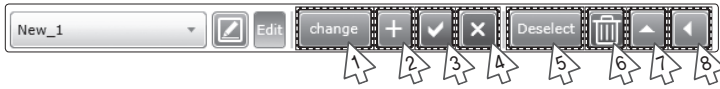

- 1 Allows you to change the drawing file of the currently selected zone.
- 2 Click to add a new zone.
- 3 Saves the changes you made, such as added and deleted indoor units, added and deleted text labels, indoor unit relocations, or drawing file changes.
- 4 Deletes the currently selected zone.
- 5 Selects or deselects all indoor units placed in the drawing.
- 6 Click to delete the selected indoor units from the drawing. The deleted indoor units appear again in the left tree.
 - ◆ This button appears in the menu bar only if at least one indoor unit is selected.
- 7 Click to top-align the selected indoor units. Because the selected indoor units are aligned according to the top of the indoor unit positioning at the topmost, they may overlap.
 - ◆ This button appears in the menu bar only if at least two indoor unit is selected.
- 8 Click to left-align the selected indoor units. Because the selected indoor units are aligned according to the left of the indoor unit positioning at the leftmost, they may overlap.
 - ◆ This button appears in the menu bar only if at least two indoor unit is selected.

Note ◆ *You can top-align or left-align only indoor units. You cannot align text labels automatically.*
◆ *If you delete a zone, the indoor units that were placed appear again in the left tree.*

Cycle Monitoring

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin. (log out) | Indoor set usage restriction | Control and Monitoring | Cycle monitoring

Cycle monitoring

- Cycle monitoring
- Indoor set usage restriction
- Troubleshooting
- Outdoor unit control
- Checking operation status

Select (0.00)

- All
- Virtual CAUR-11
 - 11.00.00
 - 11.00.01
 - 11.00.02
 - 11.00.03
 - 11.00.04
 - 11.00.05
 - 11.00.06
 - 11.00.08
 - 11.00.10
 - 11.00.17
 - 11.00.30

Oil recovering	--	Operation Mode	Heat
Total capacity of Indoor	0.0kW	Defrost status	--
Number of outdoor units	2	Oil balancing	--

[Address : 00]
 Master [Address : 01]

Outdoor temperature	1.2°C	Model	DVM Inverter/ DVM S
Condenser outlet temp.	-10.9°C	Oil / OLP temperature	--
Comp 2	On	Comp 3	--
Hot Gas Valve	On	Outdoor capacity	22HP
Liquid Bypass Valve	--	EVI Bypass Valve	On
Running currents(Comp.2)	0.0A	Running currents(Comp.3)	--
High pressure data	22.0 kgf/cm2	Low pressure data	2.0 kgf/cm2
Main expansion valve step	0 STEP	ESC EEV/EVI(Liquid) EEV	0 STEP
Discharge-1 temperature	60.3°C	Discharge-2 temperature	55.1°C
Outdoor Fan Step	35 STEP	Loading Time	--
CCH1	Off	CCH2	Off
HotGasValve #2	--	Top Temp Sensor #1	66.4°C
		Top Temp Sensor #2	50.1°C

You can select an indoor unit and check cycle information.

- Click [Control and Monitoring] → [Cycle Monitoring] when DMS2.5 web page menu screen appears.
- Click [Select].
 - DMS2.5 installation information will be displayed.
- Select a device to check cycle information.
 - If you select OnOff controller, its subordinate outdoor unit which has the earliest address will be selected.
 - If you select an outdoor unit, all the information of the module (that are connected to the selected outdoor unit) will be displayed.
 - If you select indoor unit, upper outdoor unit will be selected.
- Cycle information of selected outdoor unit and subordinate indoor units.
 - If the status of outdoor unit and indoor unit is changed, status value turns into blue.

Control and Monitoring (Continued)

Indoor Unit Usage Restriction_Operation Limit

Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin. [Logout]

Control and Monitoring > Indoor unit usage restriction

Indoor unit usage restriction


- Cycle monitoring
- Indoor unit usage restriction
- Trouble history
- Outdoor unit control
- Checking operation status

Indoor unit usage restriction					
Address	Name	Limit mode	Control mode	Cooling temperature	Heating temperature
11.00.00(255)	11.00.00	None	None	Lower limit 18.0 °C Upper limit 30.0 °C	Lower limit 16.0 °C Upper limit 30.0 °C
11.00.01(255)	11.00.01	Cool Only	None	Lower limit 18.0 °C Upper limit 30.0 °C	Lower limit 16.0 °C Upper limit 30.0 °C
11.00.02(255)	11.00.02	None	None	Lower limit 18.0 °C Upper limit 30.0 °C	Lower limit 16.0 °C Upper limit 30.0 °C
11.00.03(255)	11.00.03	None	None	Lower limit 18.0 °C Upper limit 30.0 °C	Lower limit 16.0 °C Upper limit 30.0 °C

[Edit] [Save]

You can set the operation of indoor unit as cooling only and heating only.

- 1 Click [Control and Monitoring] → [Indoor unit usage restriction] when DMS2.5 web page menu screen appears.
- 2 Press [Edit] button.
- 3 Set the limit mode.
 - ◆ You can select 'Cool-only', 'Heat-only' or 'None'.
 - For cooling only indoor unit, you can select cool, dry and fan modes only.
 - For heating only indoor unit, you can select heat and fan modes only.

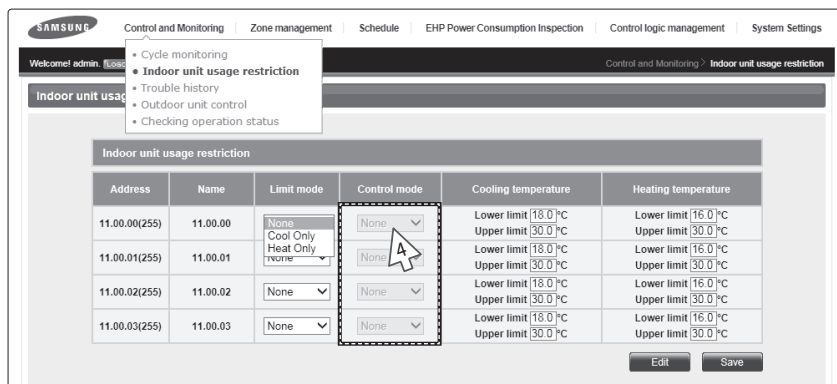

4 Set the control mode.

- ◆ Control mode is used for DMS2.5 to set either 'cool only' or 'heat only' mode to indoor and outdoor units.

Note

- ◆ *Mixed operation can occur even if you set limit mode.*
- ◆ *If the indoor unit with operation mode limit is in mixed operation, DMS2.5 will solve the problem automatically by controlling it in control mode.*
- ◆ *Since Hydro unit HT does not support Cool mode, control mode for Hydro unit HT can only be set as 'Heat only' or 'None'.*



CAUTION

- ◆ *When you set the operation mode limit, and if the outdoor unit is HP (Heat pump) type, DMS2.5 will automatically change the operation mode limit setting of all the indoor units connected to same outdoor unit.*
- ◆ *If the indoor unit is cooling only model, you cannot set the operation mode limit to 'heatonly'.*
- ◆ *DVM CHILLER cannot set 'only' mode.*

Control and Monitoring (Continued)

Indoor Unit Usage Restriction_ Upper and Lower Temperature Limits for Cool/Heat mode

Indoor unit usage restriction

Address	Name	Limit mode	Control mode	Cooling temperature	Heating temperature
11.00.00(255)	11.00.00	None	None	Lower limit 18.0 °C Upper limit 30.0 °C	Lower limit 16.0 °C Upper limit 30.0 °C
11.00.01(255)	11.00.01	None	None	Lower limit 18.0 °C Upper limit 30.0 °C	Lower limit 16.0 °C Upper limit 30.0 °C
11.00.02(255)	11.00.02	None	None	Lower limit 18.0 °C Upper limit 30.0 °C	Lower limit 16.0 °C Upper limit 30.0 °C
11.00.03(255)	11.00.03	None	None	Lower limit 18.0 °C Upper limit 30.0 °C	Lower limit 16.0 °C Upper limit 30.0 °C

You can set temperature lower/upper temperature limit in cool/heat mode.

- Click [Control and Monitoring] → [Indoor unit usage restriction] when DMS2.5 web page menu screen appears.
- Press [Edit] button.
- Set the lower/upper temperature limit.
 - ◆ ERV PLUS and Fresh Duct cannot set the upper and lower temperature limits in the Cool and Heat mode.
 - ◆ For Hydro unit and EHS, if the temperature control is set as 'Room', you can set the upper and lower temperature limits in the Cool and Heat modes. If the temperature control of Hydro unit is set as 'Water out', you can set the upper and lower temperature limits in the Cool and Heat modes.
 - ◆ For Hydro unit HT, if the temperature control is set as 'Room', you can set the upper and lower temperature limits in the Heat mode according to room temperature. If the temperature control of Hydro unit is set as 'Water out', you can set the upper and lower temperature limits in the Heat mode according to water out temperature.
 - ◆ DVM CHILLER cannot set the lower temperature limit in Cool mode or upper temperature limit in Heat mode.
- Click [Save].
 - ◆ Indoor unit usage restriction setting will be saved.

Checking the Trouble History

Control and Monitoring : Zone management : Schedule : EHP Power Consumption Inspection : Control logic management : System Settings

Welcome! admin, 10.0.0.1

Trouble history

• Cycle monitoring
• Indoor unit usage restriction
• **Trouble history**
• Outdoor unit control
• Checking of alarm status

2013 2 5 2013 2 5

• All • Communication trouble Search

Select	Address	Device type	Occurrence time	Resolution time	Code No.	Status
<input type="checkbox"/>	11.00	outdoor	2013-02-05 20:15		628	Not resolved

Communication error between DMS ↔ Outdoor unit

※ Click the row for detailed information.

1

Delete

- 1 Click [Control and Monitoring] → [Trouble history] when DMS2.5 web page menu screen appears.
- 2 Check all the trouble history.
 - ◆ You can check address, device type, occurrence time, resolution time, code number and status.
- 3 You can check detailed information on trouble history by selecting the item in the list.

Note

- ◆ **DMS2.5 saves maximum 1024 trouble histories. If the number of history exceeds 1024, DMS2.5 will delete the oldest history first.**
- ◆ **If the same code trouble is detected repeatedly in the same device on the same day, trouble history will be shown as 1 case. If it occurs more than 2 times, 'Resolution time' may change every time you check. And the number of repetition will be displayed in 'Status' field.**

Control and Monitoring (Continued)

Checking the Trouble History by Date

SAMSUNG

Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin, floor

- Cycle monitoring
- Indoor unit usage restriction
- **Trouble history**
- Outdoor unit control
- Checking operation status

Control and Monitoring - Trouble history

Trouble history

2013 2 5 2013 2 5

All Communication trouble Search

Select	Address	Device type	Occurrence time	Resolution time	Code No.	Status
<input type="checkbox"/>	11.00	outdoor	2013-02-05 20:15		628	Not resolved

Communication error between DMS ↔ Outdoor unit

× Click the row for detailed information.


1

Delete

DMS2.5 saves maximum 1024 trouble histories. If the number of history exceeds 1024, DMS2.5 will delete the oldest history first.

- 1 Click [Control and Monitoring] → [Trouble history] when DMS2.5 web page menu screen appears.
- 2 Enter the time period you want to check.
 - ◆ Enter year/month/day in order.
- 3 Click [Search].
 - ◆ You can check address, device type, occurrence time, resolution time, code number and status in the entered period.
- 4 You can check detailed information on trouble history by selecting the item in the list.


Deleting the Trouble History

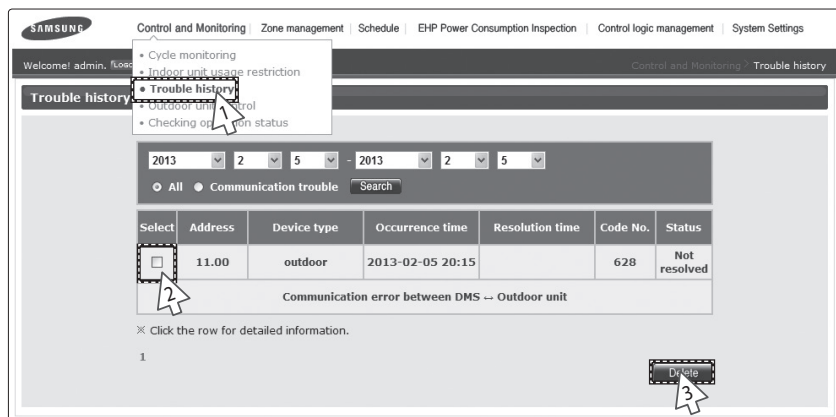

- 1 Click [Control and Monitoring] → [Trouble history] when DMS2.5 web page menu screen appears.
- 2 Select trouble history you want to delete.
- 3 Click [Delete].
 - ◆ Click [OK] from the confirm window. Selected trouble history will be deleted.

Control and Monitoring (Continued)

Outdoor unit control

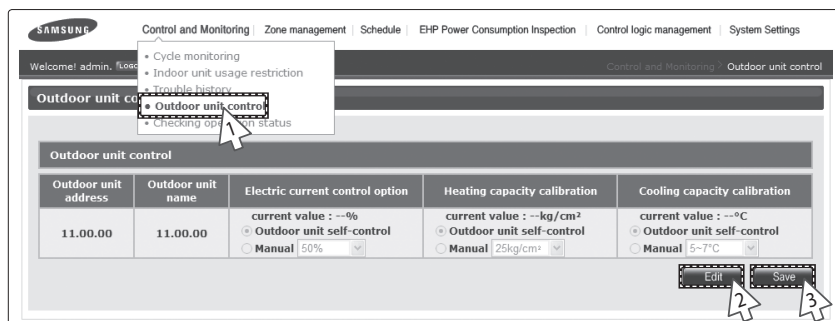


- 1 Click [Control and Monitoring] → [Outdoor unit control] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] and select the desired setting for Electric current control option, Heating capacity calibration and Cooling capacity calibration.
 - ◆ Outdoor unit self-control: Outdoor unit controls the value itself.
 - ◆ Manual: Outdoor will be controlled at value set by the user.
- 3 Click [Save] and the outdoor unit will be controlled at set value.
 - ◆ If the value was set manually on DMS2.5, outdoor unit will always operate at set value.

Note ◆ *Outdoor unit control is supported on certain models only, and the 'Outdoor unit control page' only appears on those supported models.*

Control for Occupied/Vacant room

- 1 Click [Control and Monitoring] → [Occupied/Vacant room control] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] and select the desired setting for Mode, Desired temperature, Fan speed and Apply.
- 3 Click [Save] and the unoccupied room will be controlled at set value.

Note ◆ *The 'Occupied/Vacant room control page' only appears on those supported models.*

◆  *will appear on the indoor unit icon on [Control and Monitoring] screen, if the indoor unit is unoccupied.*

Checking the Operation Status

The screenshot shows the Samsung DMS2.5 web interface. The top navigation bar includes 'Control and Monitoring', 'Zone management', 'Schedule', 'EHP Power Consumption Inspection', 'Control logic management', and 'System Settings'. The left sidebar shows a menu with 'Checking operation status' selected. The main content area displays a search filter for the year 2013, month 2, and 'all' devices. Below the search bar is a table with the following data:

Device type	Occurrence time	Control Unit	Control type	Controlled device
DVM	2013.02.05 20:50:43	DMS Web	Upper controller control	11.00.01

Below the table, there is a detailed view for the selected row, showing 'Control device(DVM) 11.00.01(11.00.01)' and 'Control device type : DVM Power : On'. A note at the bottom states: '※ Click the row for detailed information.'


You can check operation status of indoor unit which is controlled by DMS2.5.

- 1 Click [Control and Monitoring] → [Checking operation status] when DMS2.5 web page menu screen appears.
- 2 Check the operation history.
 - ◆ You can check the device type, occurrence time, control unit, control type, and controlled device address of indoor unit which is controlled by DMS2.5 and subordinate controller.
- 3 You can check operation status by entering date.
 - ◆ Enter year/month/day then click [Search]. You can check control history that occurred on the entered date.
- 4 You can check detailed control history which is controlled by the command by pressing control history in the list.

Note DMS2.5 saves the information of operation history for 180 days. However, it varies depending on saving space of DMS2.5.

Zone Management

Zone Setting & Edit – Individual/Group Initialization

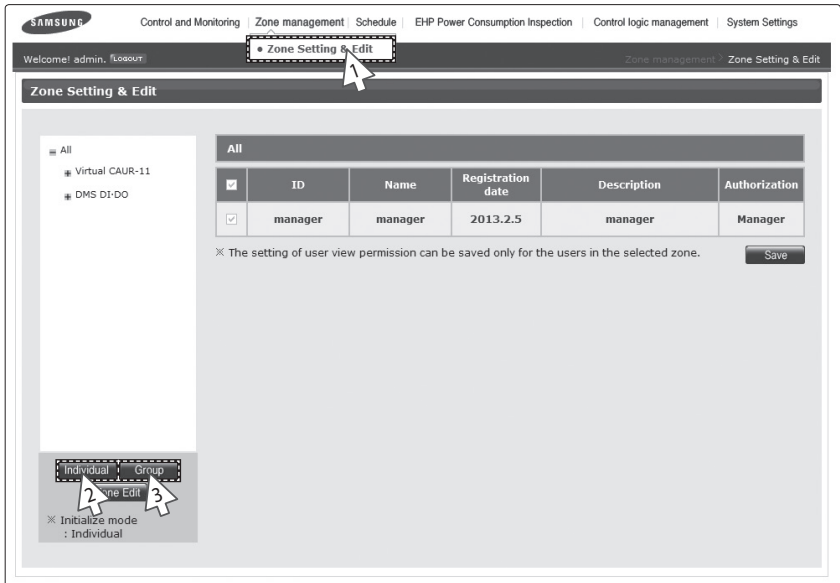


- 1 Click [Zone management] → [Zone Setting & Edit] when DMS2.5 web page menu screen appears.
 - ◆ Same screen will be displayed even if you click [Zone management] only.
- 2 Initialize the indoor unit organization as individual by clicking [Individual].
 - ◆ Individual initialization reorganizes connected indoor unit based on installation address.
- 3 Initialize the indoor unit organization as group by clicking [Group].
 - ◆ Group initialization reorganizes connected indoor unit based on RMC address.
 - ◆ After group initialization, indoor units are displayed as one device when upper zone is selected in the [Control and Monitoring] screen.
 - ◆ When editing zone after group initialization, moving in group is only allowed.
 - ◆ After group initialization, subordinate devices cannot be moved individually to the other zone.

Note

- ◆ Only the user who has authorization to edit all zones can use zone initialization.
 - To the user who has no authorization to use zone initialization and manage structure, button will not be displayed.
- ◆ If the user does not have authorization to edit zone, [Individual], [Group] and [Zone edit] will not be displayed.

Zone Setting & Edit – Setting the User Authorization

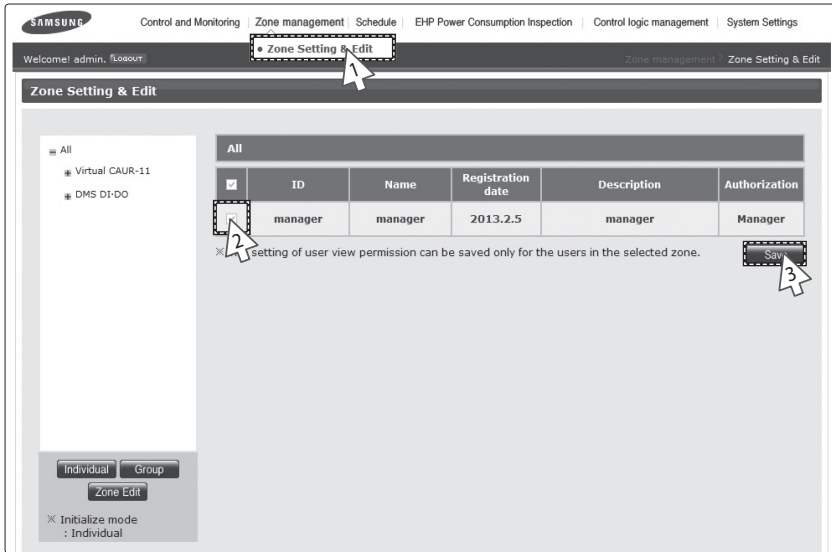

- 1 Click [Zone management] → [Zone Setting & Edit] when DMS2.5 web page menu screen appears.
 - ◆ Same screen will be displayed even if you press [Zone management] only.
- 2 Set user authorization for each zone.
 - ◆ If the user has no authorization for the zone, controlling and monitoring of the zone is restricted.
 - ◆ The user who is allowed to control and monitor zone has '☑' sign.
- 3 Click [Save] to save.
 - ◆ The user of currently selected zone is selected in the screen.



CAUTION

- ◆ You should set the authorization for controlling and monitoring the zone when the user is added.
- ◆ If you do not set the authorization for zone after adding a user, the zone will not be displayed even if the user logged in.
- ◆ Setting the user authorization is valid only for the zone displayed on the screen. If you select the other zone setting without clicking save button after changing the setting, user authorization for previously selected zone will be gone.
- ◆ When initializing zone, all rights are given to all users.

Zone Management (Continued)

Zone Setting & Edit – Zone Edit

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin, [Logout] | Zone management | Zone Setting & Edit

Zone Setting & Edit

All

- Virtual CAUR-11
- DMS DI-DO


<input checked="" type="checkbox"/>	ID	Name	Registration date	Description	Authorization
<input checked="" type="checkbox"/>	manager	manager	2013.2.5	manager	Manager

※ The setting of user view permission can be saved only for the users in the selected zone. Save

Individual Group **Zone Edit**

※ Initialize mo
: Individual

- 1 Click [Zone management] → [Zone Setting & Edit] when DMS2.5 web page menu screen appears.
 - ◆ Same screen will be displayed even if you press [Zone management] only.
- 2 Click [Zone Edit].
 - ◆ Zone edit screen will be displayed.

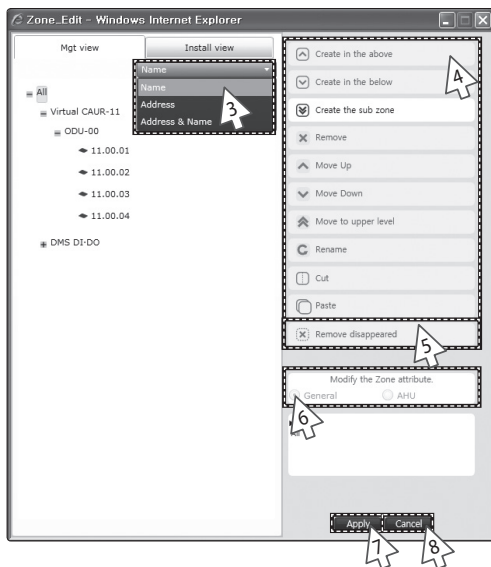

- 3 Click [▼] to set viewing option of zone edit list.
◆ You can select from viewing by 'Name', 'Address' and 'Address & Name'.

4 Edit item you want.

Create in the above	Create a new zone on top of the selected zone.
Create in the below	Create a new zone under the selected zone.
Create the sub zone	Create a zone one step lower than the user selected. You cannot create a zone under 5 steps in zone edit.
Remove	Remove selected zone. If the selected zone includes device, the device will move to the top step.
Move up	Move up the selected zone or indoor unit.
Move down	Move down the selected zone or indoor unit.
Move to upper level	Move the selected zone or indoor unit to the upper level.
Rename	Rename the selected zone or indoor unit.
Cut	Cut to move the selected zone or indoor unit,
Paste	Move the cut zone or indoor unit to the selected zone.

Zone Management (Continued)

- 5 Click [Remove disappeared] to remove all disappeared devices which were found after tracking.

- 6 Change zone properties.

◆ You can select “General”, “AHU”, and “Group”.

Mode	Property name	Description	Remarks
Individual initialization mode	General	<ul style="list-style-type: none"> ■ Virtual group which is managed by installation address, not by RMC address ■ The user can create and delete zone. 	-
	Group	Not applicable. (Only supported in group initialization mode.)	Not applicable. (Only supported in group initialization mode.)
	AHU	<ul style="list-style-type: none"> ■ Virtual group which manages AHU kit in general zone. ■ The user can create and delete. 	<ul style="list-style-type: none"> ■ It will be displayed as single device in the control and monitoring screen, and it can be controlled as single device. ■ You cannot move subordinate device to the other zone.
Group initialization mode	General	<ul style="list-style-type: none"> ■ Virtual group which is set and managed by the user. ■ The user can create and delete. 	-
	Group	<ul style="list-style-type: none"> ■ Virtual group which is managed by installation address, not by RMC address. ■ The user cannot create and delete. DMS2.5 creates it automatically. 	<ul style="list-style-type: none"> ■ It is displayed like as one device in the control and monitoring screen and can be controlled. ■ You cannot move subordinate device to the other zone.
	AHU	<ul style="list-style-type: none"> ■ Virtual group which manages AHU kit in general zone. ■ The user can create and delete. 	<ul style="list-style-type: none"> ■ It is displayed like as one device in the control and monitoring screen and can be controlled. ■ You cannot move subordinate device to the other zone.



- 7 Click [Apply].

◆ Edited zone structure will be applied.

- 8 To cancel the setting, click [Cancel].

Schedule

Creating New schedule

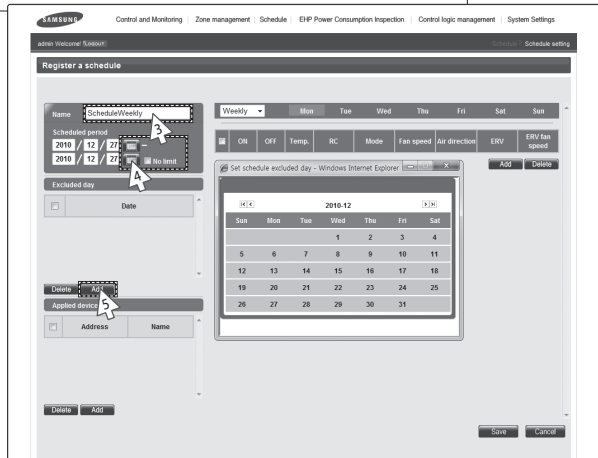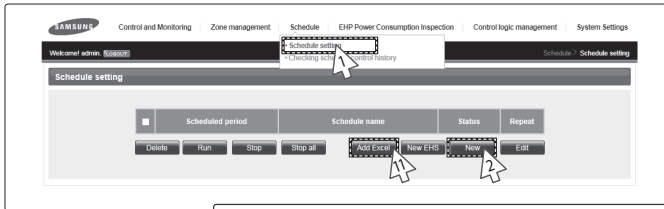

You can set, edit, delete and use the schedules for air conditioner control.

1 Click [Schedule] → [Schedule setting] when DMS2.5 web page menu screen appears.

2 Click [New] in the schedule setting screen.

Note It is not available to provide the schedule information to BMS system.

3 Enter the schedule name when the schedule setting screen appears.

4 Select schedule period you want by clicking calendar.
◆ If you select 'No limit' when setting end date, it means there is no period and it displays Dec 31st, 9999.
To set the end date, remove the check of 'No limit' or select calendar icon which is on the right side of date.

5 To set an exception date in the schedule period, click [Add] and select date(month/day) you want.
◆ Select an exception date on the calendar window.

Schedule (Continued)

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

admin Welcome! (Logout) Schedule | Schedule setting

Register a schedule

Name: ScheduleWeekly

Scheduled period: 2010/12/27 - 2010/12/27 No limit

Weekly | Mon | Tue | Wed | Thu | Fri | Sat | Sun

ON	OFF	Temp.	RC	Mode	Fan speed	Air direction	ERV	ERV fan speed

Add Delete

Excluded day

Date
2010/12/04
2010/12/11
2010/12/18

Delete Add


Applied device

Address	Name
---------	------

Delete Add

Save Cancel

- 6 To cancel the added exception date, select the exception date it(☑) and click [Delete].
 - ◆ Maximum 365 exception dates can be saved.

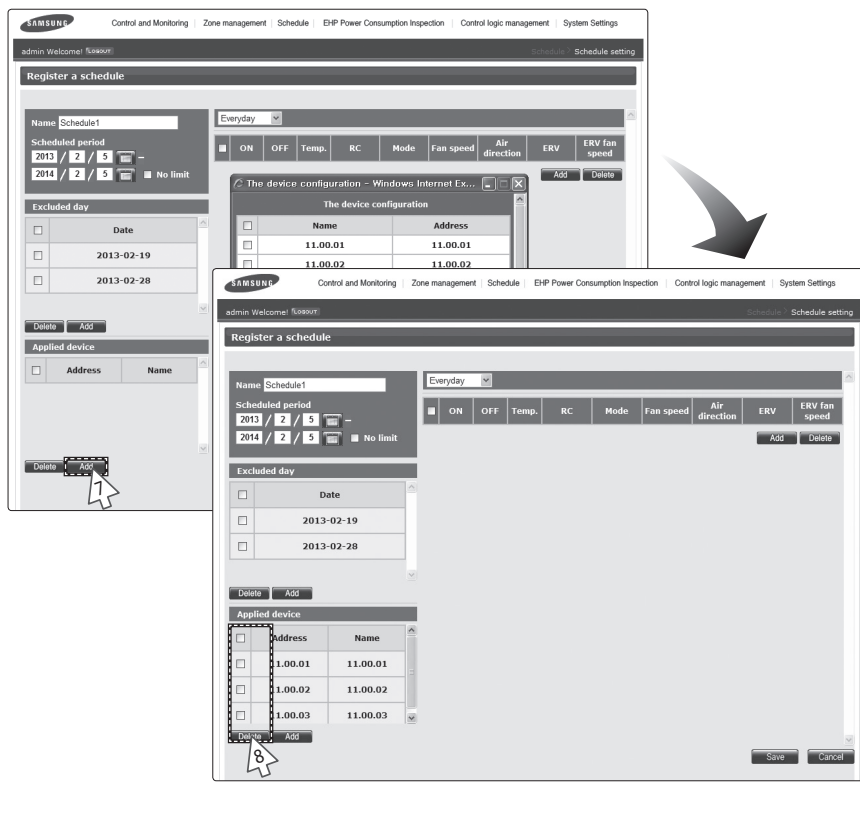

- 7 Click [Add] to select a device to apply.
 - ◆ The list of all the connected devices will be displayed.
 - ◆ You can register a schedule for DMS DO as well.
 - ◆ You cannot select DVM CHILLER and other devices simultaneously.

- 8 To cancel the selected device, select (☑) the device again and click [Delete].

Schedule (Continued)

Register a schedule

Name: Schedule1

Scheduled period: 2013 / 2 / 5 - 2014 / 2 / 5 ☐ No limit

Excluded day:

<input type="checkbox"/>	Date
<input type="checkbox"/>	2013-02-19
<input type="checkbox"/>	2013-02-28

Applied device:

<input type="checkbox"/>	Address	Name
<input type="checkbox"/>	11.00.01	11.00.01
<input type="checkbox"/>	11.00.02	11.00.02
<input type="checkbox"/>	11.00.03	11.00.03

Frequency	On/Off time	Temp.	RC	Mode	Fan speed	Air direction	ERV	ERV fan speed
Everyday	21:10		No set	No set	No set	No set	No set	No set

Buttons: Delete, Add, Save, Cancel

9 Click [v] to select repeat schedule you want and set an event.

- ◆ You can select 'Weekly', 'Everyday' and '1day'.
However, the starting and end date should be same when you select '1day'.
- ◆ Enter 4 digits for OnOff time setting.
Ex) 8:00 → 0800, 9:30 → 0930
- ◆ Remote controller setting is as follows.
 - Enable RC: Controlling indoor unit using wired/wireless remote controller or indoor unit panel in each room is possible.
 - Disable RC: Controlling indoor unit using wired/wireless remote controller or indoor unit panel in each room is not possible.
 - Cond. RC
 - ON by OnOff controller, DMS2.5: Controlling indoor unit using wired/wireless remote controller or indoor unit panel in each room is possible.
 - OFF by OnOff controller, DMS2.5: Controlling indoor unit using wired/wireless remote controller or indoor unit panel in each room is not possible.

- ◆ Click [Add] to add event.
- ◆ To delete event, select an event(☒) and click [Delete].
- ◆ Maximum 70 events can be set per 1 schedule. In case of week schedule, 30 events per 1 day can be set.
- ◆ If starting and end time of schedule event are repeated, only the schedule event which is made earlier will be executed.

10 Click [Save].

- ◆ Set schedule information is saved in DMS2.5.
- ◆ Click [Cancel] to cancel schedule setting.

Note

- ◆ *If you select dry mode among basic modes, auto fan speed is only available.*
- ◆ *When the operation mode is 'Auto', fan speed is always set to 'Auto'.*
- ◆ *When the operation mode is 'Fan', you cannot control fan speed as 'Auto'.*
- ◆ *When the operation mode is 'Dry', fan speed is always set to 'Auto'.*
- ◆ *When you select sleep mode among ERV modes, 'Mid' fan speed is only available.*
- ◆ *If the tracking is not completed, schedule setting is not possible. To use proper schedule function, make sure to complete tracking with installation engineer.*
- ◆ *'Off' operation works only with ERV PLUS.*
- ◆ *'Cool Storage' and 'Hot Water' mode works by DVM CHILLER only.*
- ◆ *The Turbo fan speed is available only in the devices that support the Turbo fan speed. For the devices that do not support the Turbo fan speed, the Auto or High fan speed operates, even though the Turbo fan speed is selected.*
- ◆ *Spot, Mid, Wide, and Swing are available only for the 360 Cassette air conditioner, None, Verti., Hori., and All is not available for 360 Cassette air conditioner.*
- ◆ *If the indoor unit supports the Dual Set Point function and this function is enabled in the [System Settings] → [Dual Set Point setting] web page, you can additionally set the cooling and heating set temperatures in the Auto mode.*

11 Click [Add Excel], and then register an Excel schedule template. The schedules are created automatically.

Schedule (Continued)

Creating new schedule for EHS



- 1 Click [Schedule] → [Schedule setting] when DMS2.5 web page menu screen appears.
- 2 Click [New EHS] in the schedule setting screen.
- 3 Enter the schedule name when the schedule setting screen appears.
- 4 Select schedule period you want by clicking calendar.
 - ◆ If you select 'No limit' when setting end date, it means there is no period and it displays Dec 31st, 9999.
 - To set the end date, remove the check of 'No limit' or select calendar icon which is on the right side of date.
- 5 To set an exception date in the schedule period, click [Add] and select date(month/day) you want.
 - ◆ Select an exception date on the calendar window.

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

admin Welcome! Logout | Schedule | Schedule setting

Register a schedule

Name:

Scheduled period: 2012 / 11 / 3 - 2013 / 11 / 3 ☐ No limit

Weekly ☒ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☐ Sun

	ON	OFF	Temp.	RC	Mode	DHW ON	DHW OFF	DHW temp.	DHW mode
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Excluded day


	Date
<input checked="" type="checkbox"/>	2012-11-08
<input type="checkbox"/>	2012-11-22
<input type="checkbox"/>	2012-11-29

Applied device

	Address	Name
<input type="checkbox"/>		

- 6 To cancel the added exception date, select the exception date (☒) and click [Delete].
 - ◆ Maximum 365 exception dates can be saved.

Schedule (Continued)

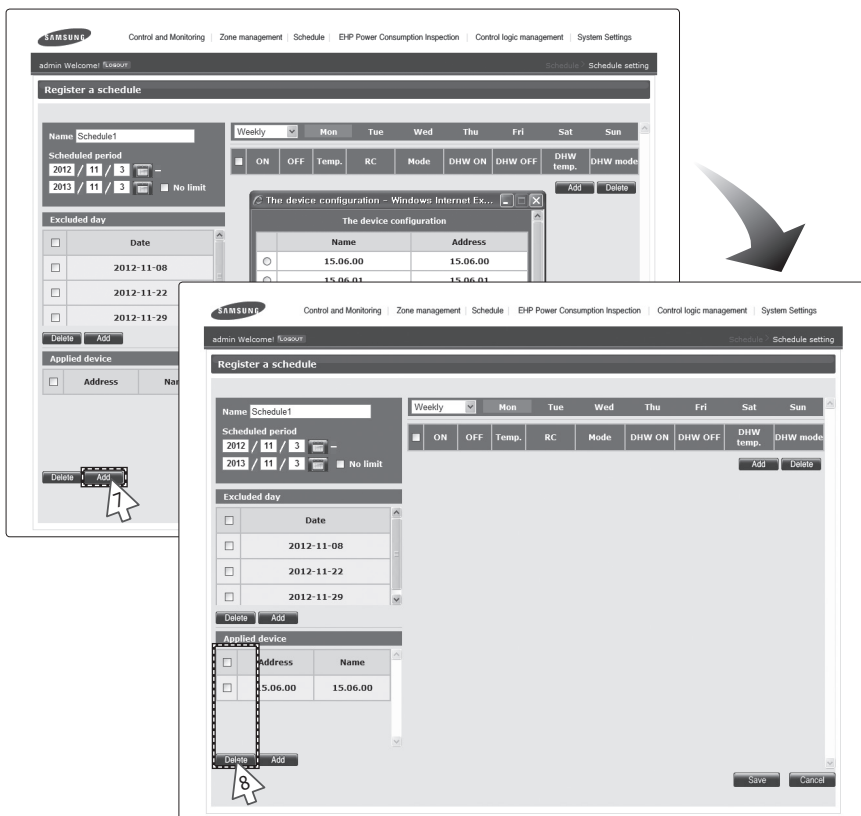

- 7 Click [Add] to select a device to apply.
 - ◆ The list of all the connected devices will be displayed. Select a device and click [OK].
 - ◆ You can only select one device.
- 8 To cancel the selected device, select (☑) the device again and click [Delete].

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

admin Welcome! E-8900F Schedule Schedule setting

Register a schedule

Name: Schedule1
Scheduled period:
2012 / 11 / 3 - 2013 / 11 / 3 ☐ No limit

Weekly
Everyday
1day

Mon Temp. RC Mode DHW ON DHW OFF DHW temp. DHW mode
Tue
Wed
Thu
Fri
Sat
Sun

Excluded day
☐ Date
☐ 2012-11-08
☐ 2012-11-22
☐ 2012-11-29

Applied device
☐ Address Name
☐ 15.06.00 15.06.00

Save Cancel

- 9 Click [v] to select repeat schedule you want and set an event.
 - ◆ You can select 'Weekly', 'Everyday' and '1day'. However, the starting and end date should be same when you select '1day'.
 - ◆ Enter 4 digits to set the time for turning ON/OFF the EHS and the Hot water.
Ex) 8:00 → 0800, 9:30 → 0930
 - ◆ Remote controller setting is as follows.
 - Enable RC: Controlling indoor unit using wired/wireless remote controller or indoor unit panel in each room is possible.
 - Disable RC: Controlling indoor unit using wired/wireless remote controller or indoor unit panel in each room is not possible.
 - Cond. RC
 - ON by OnOff controller, DMS2.5: Controlling indoor unit using wired/wireless remote controller or indoor unit panel in each room is possible.
 - OFF by OnOff controller, DMS2.5: Controlling indoor unit using wired/wireless remote controller or indoor unit panel in each room is not possible.
 - ◆ Click [Add] to add event.
 - ◆ To delete event, select an event(☒) and click [Delete].
 - ◆ Maximum 70 events can be set per 1 schedule. In case of week schedule and 10 events per 1 day can be set.
 - ◆ If starting and end time of schedule event are repeated, only the schedule event which is made earlier will be executed.


10 Click [Save].

- ◆ Created schedule information will be saved in DMS2.5.
 - ◆ Click [Cancel] to cancel schedule setting.
-

Note

- ◆ *Since Hydro unit HT does not support Cool mode, you should not add any schedules related to Cool mode.*
- ◆ *If the desired temperature is set when the operation mode is 'None'; when the actual schedule should start working, it may not work at desired temperature setting depending on control type and mode.*
- ◆ *Do not input the desired temperature when the operation mode is set to 'Auto'.*
- ◆ *Do not turn on the power for direct hot water when the operation mode is set to 'Cool'.*
- ◆ *Schedule setting is not available when the tracking is not completed. To use the schedule function normally, complete the tracking with the installation expert.*
- ◆ *When Thermostat #1 or Thermostat #2 is ON, the desired temperature and operation mode cannot be controlled.*
- ◆ *When the hot water thermostat is ON, the schedule of the hot water temperature cannot be controlled.*

Creating new schedule for Packaged DOAS

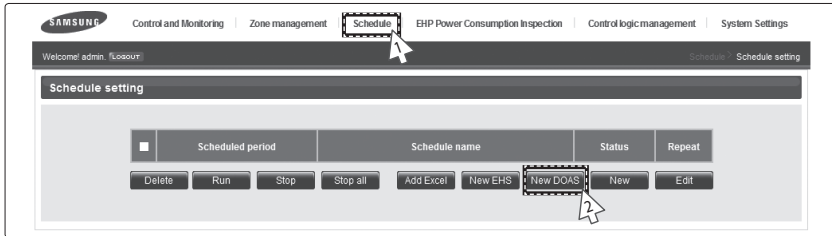

- 1 Click [Schedule] → [Schedule setting] when DMS2.5 web page menu screen appears.
- 2 Click [New DOAS] in the schedule setting screen.

Schedule (Continued)

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

admin Welcome! Logout | Schedule > Schedule setting

Register a schedule

Name:

Scheduled period: 2019 / 4 / 19 - 2020 / 4 / 19 ☐ No limit

Excluded day: ☐ Date:

Applied device: ☐ Address: Name:


Weekly	Mon	Tue	Wed	Thu	Fri	Sat	Sun
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
ON	OFF	Cool discharge temp.	Dry discharge temp.	Heat discharge temp.			
<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Add Delete

Save Cancel

- 3 Enter the ON time, OFF time, and cool, heat, and dry discharge temperatures that you want.
- 4 The other settings are the same as the general schedule settings.

Editing Schedule

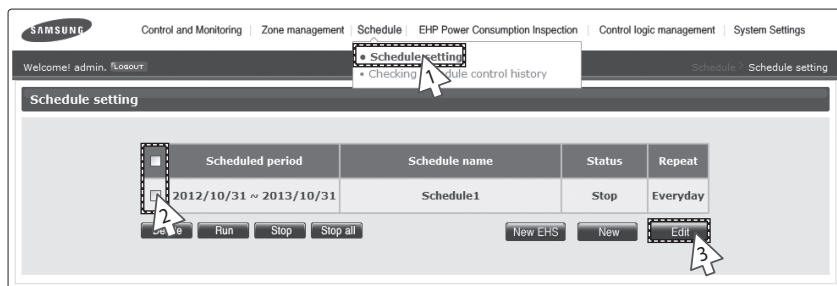

1 Click [Schedule] → [Schedule setting] when DMS2.5 web page menu screen appears.

2 Select the schedule to edit.

◆ For the currently operating schedule, you can only check it.


3 Click [Edit].

◆ Edit schedule when the schedule edit screen appears.

◆ Editing schedule method is same as "Creating New Schedule". (Refer to page 81~85)


Schedule (Continued)

Deleting Schedule

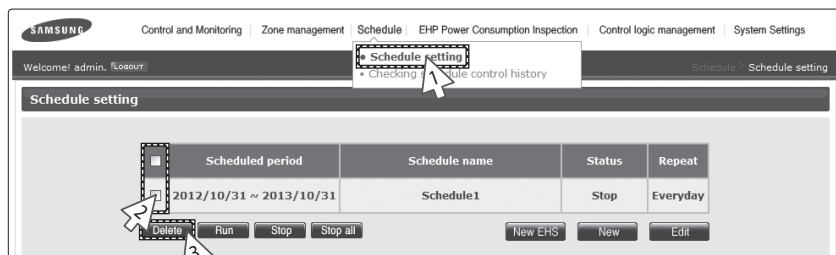

- 1 Click [Schedule] → [Schedule setting] when DMS2.5 web page menu screen appears.
- 2 Select the schedule to delete.
- 3 Click [Delete].
 - ◆ Click [OK] in confirm window and selected schedule will be deleted.
 - ◆ Deleting schedule is possible only when the schedule is in stop status. If you want to delete schedule which is currently applied, stop applying the schedule first.

Applying schedule

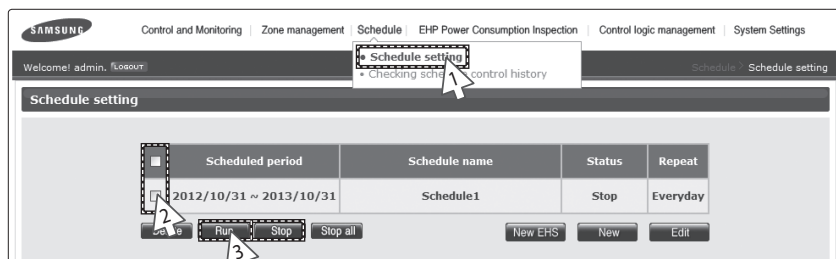

- 1 Click [Schedule] → [Schedule setting] when DMS2.5 web page menu screen appears.
- 2 Select the schedule you want to use.
- 3 Use schedule functions by clicking [Run] and [Stop].
 - ◆ To apply the selected schedule, click [Run].
 - ◆ To stop the selected schedule, click [Stop].

Note To stop all schedules, click [Stop all].
- Currently applied schedule will be stopped.

Checking Schedule Control History

Checking schedule control history

2013 2 5 Search

Schedule name	Occurrence time	Controlling subject	Control type
Schedule1	2013.02.05 21:10:00	DMS internal features	Schedule control

Control device type : DVM
Control device : 11.00.03(11.00.03), 11.00.02(11.00.02), 11.00.01(11.00.01)
Control device type : DVM
Power : On

* Click the row for detailed information.

- 1 Click [Schedule] → [Checking schedule control history] when DMS2.5 web page menu screen appears.
- 2 Select a date to check and then click [Search].
◆ Only executed schedules can be searched.
- 3 You can check detailed setting by clicking the schedule name.

Note DMS2.5 saves the information or schedule control history for 180 days.
However, it varies depending on saving space of DMS2.5.

EHP Power Consumption Inspection

Checking Inspection Result (with SIM/PIM)

2013 2 1 ~ 2013 2 4

Power consumption • Proportion • Individual indoor unit by date

Search

Indoor unit address	Indoor unit name	Used power consumption (kWh)				
		A	B	C	D	SUM
11.00.01	11.00.01	0.0	0.0	0.0	0.0	0.0
11.00.02	11.00.02	0.0	0.0	0.0	0.0	0.0
11.00.03	11.00.03	0.0	0.0	0.0	0.0	0.0
11.00.04	11.00.04	0.0	0.0	0.0	0.0	0.0
Total power consumption (kWh)		0.0	0.0	0.0	0.0	0.0

Save as Excel

You can check the operation history and power consumption saved in DMS for each indoor unit.

- 1 Click [EHP Power Consumption Inspection] → [Check inspection result] when DMS2.5 web page menu screen appears.
- 2 Set date and search condition (power consumption/proportion/individual indoor unit by date) when inspection result screen appears.
 - ◆ Select year/month/day in order.
 - ◆ Based on DMS2.5 time, you can check up to 365 days of watt-hour meter value.
- 3 Click [Search].
 - ◆ Inspection result will be displayed depending on set period and searching condition.
 - ◆ You can check power consumption only when watt-hour meter is connected. If watt-hour meter is not connected, you can check operating proportion by indoor unit only.
- 4 Click [Save as Excel].
 - ◆ Searched inspection result will be saved as MS Excel file.

Note

- ◆ For data management, it is recommended to save indoor unit inspection result periodically.
- ◆ Power consumption inspection result is for reference only and should not be used for official financial transactions.

Checking Inspection Result (without SIM/PIM)

Check inspection result

- Setting the inspection period
- Setting and checking indoor meter
- Setting and checking virtual channel
- Channel setting by indoor unit
- Checking indoor unit operation time

2010 2 26

Virtual channel	Used power consumption (kWh)
24.1	50
24.2	50
24.3	100
24.4	100

Calculate

- 1 Click [EHP Power Consumption Inspection] → [Check inspection result] when DMS2.5 web page menu screen appears.
 - ◆ Channel setting by indoor unit must be done in advance.
- 2 Set date when inspection result screen appears.
 - ◆ Select year/month/day in order.
 - ◆ Based on DMS2.5 time, You can check up to 365 days of inspection results.
- 3 Enter power consumption value during the period.
 - ◆ Virtual channel is value which is set in channel setting by indoor unit.
- 4 Click [Calculate].
 - ◆ Power consumption by indoor unit during the period will be displayed.

EHP Power Consumption Inspection (Continued)

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin, (Logout) EHP Power Consumption Inspection Check inspection result

Check inspection result

☒ Power consumption
 ☐ Proportion
 Calculate

2013-2-1~2013-2-4

Indoor unit address	Indoor unit name	Used power consumption (kWh)				
		A	B	C	D	SUM
11.00.01	11.00.01	24.991	0.0	0.0	0.0	24.991
11.00.02	11.00.02	25.026	0.0	0.0	0.0	25.026
11.00.03	11.00.03	25.009	0.0	0.0	0.0	25.009
11.00.04	11.00.04	24.974	0.0	0.0	0.0	24.974
Total power consumption (kWh)		100.0	0.0	0.0	0.0	100.0

Save as Excel


5 Check the power consumption result of the selected period.

- ◆ Due to rounding the actual values, actual input value and result value may different to each other.
- ◆ If you want to save the consumption result for selected period as MS Excel file, click [Save as Excel].
- ◆ Click [Calculate] to go back to inspection result screen.

Note

- ◆ For data management, it is recommended to save indoor unit inspection result periodically.
- ◆ Power consumption inspection result is for reference only and should not be used for official financial transactions.

Setting the Inspection Section

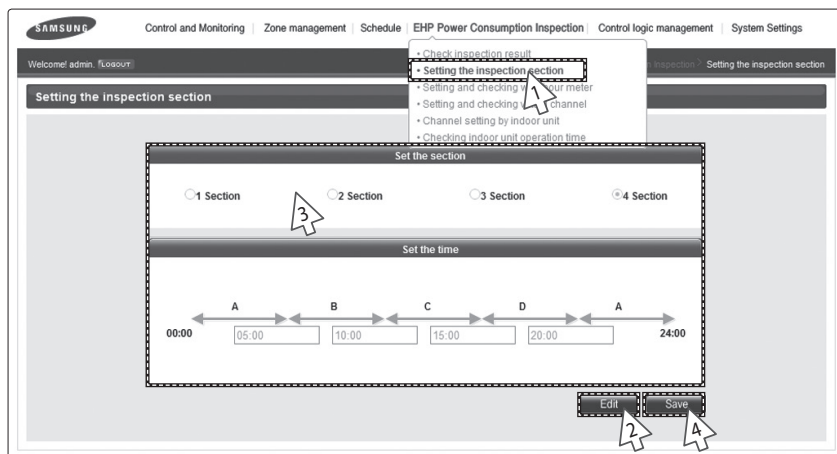

- 1 Click [EHP Power Consumption Inspection] → [Setting the inspection section] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] when inspection result screen appears.
 - ◆ 1 section is set as default.
- 3 Select a section and enter time by section.
 - ◆ You should enter time of section B when selecting 2 sections and enter time of section B and section C when selecting 3 sections and enter time of section B, section C, and section D when selecting 4 sections.
 - ◆ Correct format of time is HH:MM.
Ex) 4:30 in the afternoon → 16:30
- 4 Click [Save].
 - ◆ Set power section will be saved in DMS2.5.
 - ◆ If you do not click [Save], changed setting will not be saved.

Note ◆ *Ex) When selecting 2 sections (A, B, A)
If the border time between A and B is 08:00 and 18:00,
section A is 00:00 ~ 08:00, section B is 08:01 ~ 18:00,
and second section A again is 18:01 ~ 24:00.*

EHP Power Consumption Inspection (Continued)

Setting and Checking the meter

Setting and checking the meter

SIM / PIM Channel	Name	CT proportion	Meter Type	Meter Value	Unit
16.1	16.1	1	Electricity	1.0	kWh
16.2	16.2	1	Electricity	1.0	kWh
16.3	16.3	1	Electricity	1.0	kWh
16.4	16.4	1	Electricity	1.0	kWh
16.5	16.5	1	Electricity	1.0	kWh
16.6	16.6	1	Electricity	1.0	kWh
16.7	16.7	1	Electricity	1.0	kWh
16.8	16.8	1	Electricity	1.0	kWh

Edit Save

- 1 Click [EHP Power Consumption Inspection] → [Setting and checking the meter] when DMS2.5 web page menu screen appears.
 - ◆ Setting watt-hour meter is possible only when SIM/PIM is installed.
- 2 Click [Edit] when the Setting and checking the meter screen appears.
 - ◆ CT proportion '1' is set as default.
- 3 Set name and CT proportion of watt-hour meter.
 - ◆ You can use maximum 16 letters.
 - ◆ The range of CT proportion value is positive number from 1 to 5000.
 - ◆ CT proportion setting is required only when the meter type is 'electricity'.
- 4 Click [Save].
 - ◆ Set the meter information will be saved in DMS2.5.
 - ◆ If you do not click [Save], changed setting will not be saved.
 - ◆ Watt-hour meter value shows actual value of currently connected watt-hour meter. Watt-hour meter value will be updated automatically.



When using CT watt-hour meter, be careful that there can be difference with actual power consumption as much as CT ratio error.

The meter history

The screenshot shows the Samsung DMS2.5 web interface. The top navigation bar includes: Control and Monitoring, Zone management, Schedule, EHP Power Consumption Inspection, Control logic management, and System Settings. The 'Setting and checking the meter' screen displays a table with columns: SIM / PIM Channel, Name, CT proportion, Meter Type, Meter Value, and Unit. The table lists channels 16.1 through 16.5, all with a value of 1.0 kWh. A dropdown menu for 'SIM / PIM Address' is set to 16. The 'The meter history' screen shows a date range selector (2013, 12, 3) and a table with columns: Date, Electricity, Electricity, Electricity, Electricity, Electricity, Electricity, Electricity. The table is currently empty, displaying 'No meter value history exists.'.


- 1 Click [EHP Power Consumption Inspection] → [Setting and checking the meter] when DMS2.5 web page menu screen appears.
- 2 Click [The meter history] when the setting and checking the meter screen appears.
- 3 Select SIM/PIM address and date you want when the meter history screen appears.
 - ◆ Enter year/month/day in order.
 - ◆ Based on DMS2.5 time, you can check up to 365 days of meter value history.
- 4 Click [Search].
 - ◆ Meter value history of set period will be displayed.
- 5 Click [Excel].
 - ◆ When you click the [Excel] button, meter value of all SIM/PIM throughout the selected dates will be saved as MS Excel file.



For PIM, channel status should be set as "Enable" in order to save the meter history in Excel file. (Refer to page 172~173)

EHP Power Consumption Inspection (Continued)

Setting and Checking Virtual Channel

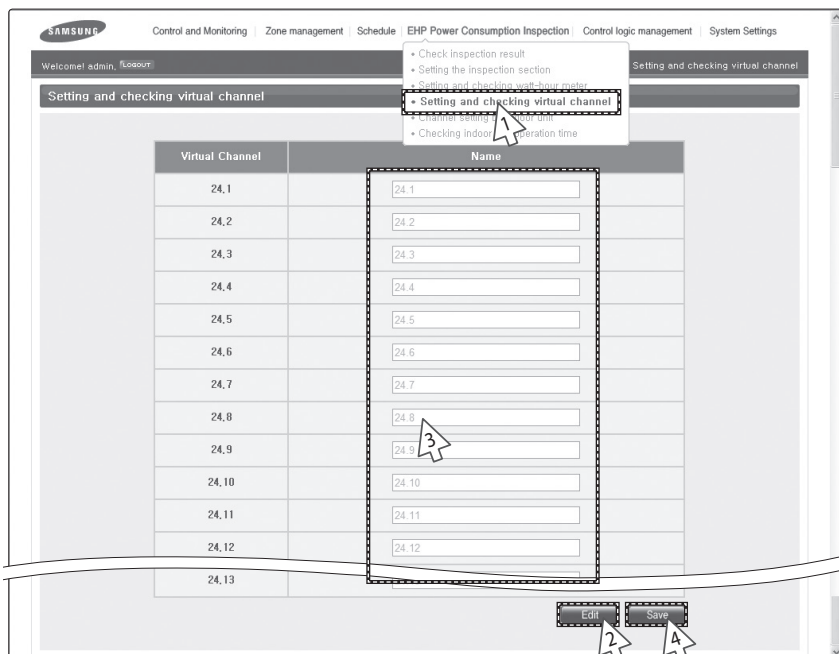

- 1 Click [EHP Power Consumption Inspection] → [Setting and checking virtual channel] when DMS2.5 web page menu screen appears.

◆ Maximum 128 virtual channels can be set.

Virtual channel is written in (24 ~ 31).(1 ~ 16) format address.

Ex) 24.1, 25.2, 31.8

- 2 Click [Edit] when the setting and checking virtual channel screen appears.

- 3 Set the name of virtual channel.

◆ You can use maximum 16 letters.

- 4 Click [Save].

◆ Set virtual channel name will be saved in DMS2.5.

◆ If you do not click [Save], changed setting will not be saved.

Channel Setting by Indoor Unit

Channel setting by indoor unit

Indoor unit address	Indoor unit name	Outdoor unit SIM / PIM channel				Indoor unit SIM / PIM channel	Outdoor unit virtual channel	Indoor unit virtual channel
		Channel1	Channel2	Channel3	Channel4			
11.00.01	11.00.01	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
11.00.02	11.00.02	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
11.00.03	11.00.03	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
11.00.04	11.00.04	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

Edit Save

- 1 Click [EHP Power Consumption Inspection] → [Channel setting by indoor unit] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] when the setting channel by indoor unit screen appears.



Some functions available on DMS2.5 web page may not be functional at BACnet Gateway and LonWorks Gateway. For detailed function, refer to the installation manual or contact Samsung Electronics.

EHP Power Consumption Inspection (Continued)

SAMSUNG Control and Monitoring | Zone management | Schedule | **EHP Power Consumption Inspection** | Control logic management | System Settings

Welcome! admin, [logout]

Channel setting by indoor unit

- Check inspection result
- Setting the inspection section
- Setting and checking watt-hour meter
- Setting and checking virtual channel
- **Channel setting by indoor unit**
- Checking indoor unit operation time

Channel setting by indoor unit

Indoor unit address	Indoor unit name	Outdoor unit SIM / PIM channel				Indoor unit SIM / PIM channel	Outdoor unit virtual channel	Indoor unit virtual channel
		Channel1	Channel2	Channel3	Channel4			
11.00.01	11.00.01	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
11.00.02	11.00.02	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
11.00.03	11.00.03	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
11.00.04	11.00.04	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

- 3 Check the address and channel information of SIM/PIM which is connected to watt-hour meter.

◆ If 0~7 SIM/PIM units execute tracking, it will be displayed as 16~23 in DMS2.5.

- 4 Check the information of indoor/outdoor unit which is connected to watt-hour meter.

- 5 Check the SIM/PIM channel(watt-hour meter) information of indoor/outdoor unit.

- ◆ You can set the channel when SIM/PIM is installed in DMS2.5.
- ◆ When bringing indoor unit's power from outdoor unit, set the 'Outdoor unit SIM channel' information only.
('Outdoor unit SIM channel' is referring to watt-hour meter which is connected to outdoor unit.)
- ◆ When bringing indoor unit's power from the other device, not from outdoor unit, set the 'Outdoor unit SIM channel' and 'Indoor unit SIM channel' information.
('Indoor unit SIM channel' is referring to watt-hour meter which is connected to indoor unit.)
- ◆ Power distribution will be executed automatically. The user does not need to check the value of watt-hour meter.
- ◆ The maximum number of SIM channels for an outdoor unit is 4.

-
- 6 Check the virtual channel information of indoor/outdoor unit.
- ◆ To execute power distribution without SIM/PIM, you should set virtual channel.
 - ◆ When bringing indoor unit's power from outdoor unit, set the 'Outdoor unit virtual channel' information only.
('Outdoor unit virtual channel' is referring to watt-hour meter which is connected to outdoor unit.)
 - ◆ When bringing indoor unit's power from the other device, not from outdoor unit, set the 'Outdoor unit virtual channel' and 'Indoor unit virtual channel' information.
('Indoor unit virtual channel' is referring to watt-hour meter which is connected to indoor unit.)
 - ◆ The number of virtual channel varies depending on the number of outdoor unit
 - ◆ To execute power distribution, you need to check watt-hour meter value manually.
 - ◆ Power distribution using SIM/PIM is more accurate than using indoor/outdoor unit virtual channel. Therefore, it is recommended to execute power distribution using SIM/PIM.
-
- 7 Set indoor unit to execute power distribution.
- ◆ If you do not set the watt-hour meter information, the power distribution result of the indoor unit will be displayed as '0'.
-
- 8 Click [Save].
- ◆ Set channel information will be saved in DMS2.5.
 - ◆ If you do not click [Save], changed setting will not be saved.
-



CAUTION

- ◆ **Information of watt-hour meter connected to indoor/outdoor unit should be accurate. If the watt-hour meter information is not accurate when you set channel information of indoor unit, error may occur in the power distribution result.**
- ◆ **You should set SIM/PIM channel information in the indoor unit if you want to execute power distribution using SIM/PIM. If not, it means that you do not execute power distribution. In this case, the power distribution result of the indoor unit will be '0'.**
- ◆ **If the information of watt-hour meter connected to indoor/outdoor unit is changed, consult with installation engineer.**
- ◆ **DMS2.5 executes power distribution based on set information.**
- ◆ **Virtual channel is not available when you use BACnet or LonWorks Gateway function.**
- ◆ **DVM CHILLER and FCU Kit are excluded for power distribution devices.**

EHP Power Consumption Inspection (Continued)

Checking Indoor Unit Operation Time

2013 2 1 2013 2 5

All indoor units by period Individual indoor unit by date

2-1 ~ 2013-2-5

Indoor unit address	Indoor unit name	Operation time (min)					Thermo on time (min)				
		A	B	C	D	SUM	A	B	C	D	SUM
11.00.01	11.00.01	1	0	0	0	1	0	0	0	0	0
11.00.02	11.00.02	1	0	0	0	1	0	0	0	0	0
11.00.03	11.00.03	1	0	0	0	1	0	0	0	0	0
11.00.04	11.00.04	1	0	0	0	1	0	0	0	0	0

Save as Excel

- 1 Click [EHP Power Consumption Inspection] → [Checking indoor unit operation time] when DMS2.5 web page menu screen appears.
- 2 Select search condition (All indoor units by period/ Individual indoor unit by date) when Checking indoor unit operating time screen appears.
 - ◆ Select year/month/day in order.
 - ◆ Based on DMS2.5 time, you can check up to 365 days of operation time.
- 3 Click [Search].
 - ◆ Operation time will be displayed depending on set period and condition.
- 4 Click [Save as Excel].
 - ◆ Searched operation time result will be saved as MS Excel file.

Note For data management, it is recommended to save indoor unit operation time result periodically.


Control Logic Management

Setting Control Logic

- Control logic is used in the following situations.

Ex) The current temperature of the lab is higher than 29°C and you want cooling operation,
The current temperature of the office is lower than 10°C and you want heating operation

- Period, day and time are included in specific conditions.

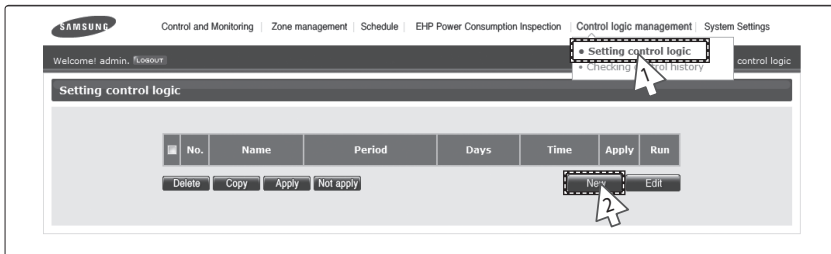

You can set, edit, delete and use control logic for controlling device which is connected to DMS2.5.

- 1 Click [Control logic management] → [Setting control logic] when DMS2.5 web page menu screen appears.

- ◆ Apply: Indicates control logic usage status.
- ◆ Run: Indicates If the control logic is applied and whether the operation conditions are met.

Ex) If there is logic which says 'If the current temperature of indoor unit is higher than 29°C, control indoor unit as cool mode.', 'Yes' will be displayed when the indoor unit's current temperature is higher than 29°C. 'No' will be displayed when the indoor unit's current temperature is lower than 29°C.

- 2 Click [New] when setting control logic screen appears.

- ◆ Setting screen is composed of 4 categories.
 - Name & time: Set the name and time(period, days, time) to apply of control logic.
 - Factor edit: You can edit factor selection which is components of input/output.
 - Input: Set the condition which makes control logic perform.
 - Output: Set items to be controlled when the conditions of input are met.

Note

- ◆ If different value is set for same control item of same address' device, the indoor unit follows the first control logic set among running control logics.
- ◆ It is not available to provide the control logic management information to BMS system.

EHP Power Consumption Inspection (Continued)

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin | Logout | Control logic management | Setting control logic

Setting control logic

Name	ControlLogic							
Period	2016	9	7	-	2017	9	7	<input type="checkbox"/> No limit
Day	<input type="checkbox"/> Sun <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input checked="" type="checkbox"/> Daily							
Time	0	:	0	-	24	:	0	

Input

<input type="checkbox"/> Compound factor	Factor	Comparison operator	Standard value	Duration (minute)
	Select a factor	=	<input checked="" type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input checked="" type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input checked="" type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1

Add **Delete**

Output

<input type="checkbox"/>	Factor	Command
	Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor
<input type="checkbox"/>	Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor
<input type="checkbox"/>	Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor

3 Enter control logic name in the name field when the new control logic setting screen appears.

◆ You can use maximum 16 letters.

4 Set period, day and time in control logic screen.

◆ Select year/month/day in order.

◆ Select a day to run during the control period.

◆ Control logic will be applied only when period, day and time are united.

◆ If you select 'Daily' in day selection, control logic will run regardless of day.

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin | Logout | Control logic management | Setting control logic

Setting control logic

Name	ControlLogic							
Period	2016	9	7	-	2017	9	7	<input type="checkbox"/> No limit
Day	<input type="checkbox"/> Sun	<input type="checkbox"/> Mon	<input type="checkbox"/> Tue	<input type="checkbox"/> Wed	<input type="checkbox"/> Thu	<input type="checkbox"/> Fri	<input type="checkbox"/> Sat	<input checked="" type="checkbox"/> Daily
Time	0	:	0	-	24	:	0	

Factor edit: Single Arithmetic Function

Device Select

Device selection

* Click 'Select' button : a pop-up window appears and you can select a device. Select a device to check the settings.

Apply

Compound factor	Factor	Comparison operator	Standard value	Duration (minute)
<input type="checkbox"/>	Select a factor	=	<input checked="" type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input checked="" type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input checked="" type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1

5 Select a factor in the input list.

- ◆ Factor means the target to be controlled or standard item of logic decision.

6 Select the type of factor.

- ◆ Single: It means 1 device.
Ex) Desired temperature of indoor unit
- ◆ Arithmetic: It means 2 devices are connected by arithmetic operator.
Ex) Desired temperature of indoor unit 1 – Desired temperature of indoor unit 2

Factor edit: Single Arithmetic Function

Device Select

Select a device

* Click 'Select' button : a pop-up window appears and you can select a device. Select a device to check the settings.

- ◆ Function: It means several devices are using as value of function.
Ex) Average(Current temperature of Indoor unit 1, Current temperature of Indoor unit 2, Current temperature of Indoor unit 3)


Factor edit: Single Arithmetic Function

Function Select **Device 2** Select **Device 3** Select **Device 4** Select **Device 5** Select

Select a device

* Click 'Select' button : a pop-up window appears and you can select a device. Select a device to check the settings.

Control Logic Management (Continued)

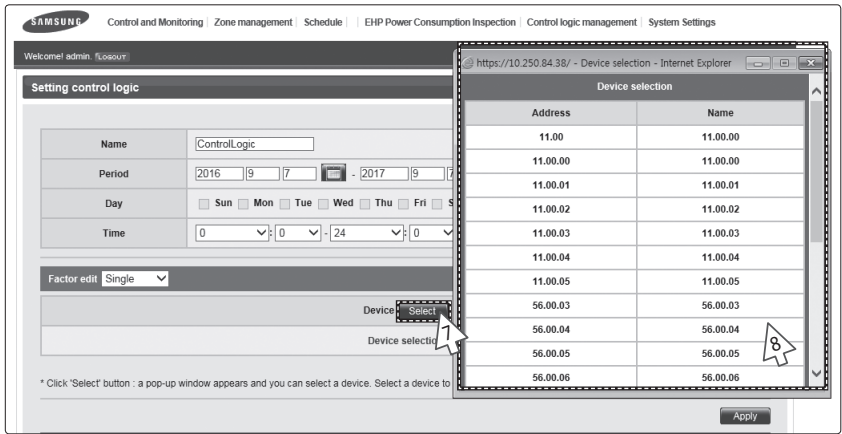

7 Click 'Select'.

- ◆ List of device which you can select will be displayed.

8 Select the device to use as factor.

- ◆ Control and monitoring items will be displayed depending on selected device.
- ◆ Control and monitoring items are as follows.

Type	Item	Value	Remarks
Outdoor unit	Current electric control option	50%, 55%, 60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%, 100%	Control impossible
	Current heating capacity calibration	25kg/cm ² , 26kg/cm ² , 27kg/cm ² , 28kg/cm ² , 29kg/cm ² , 30kg/cm ² , 31kg/cm ² , 32kg/cm ² , 33kg/cm ²	Control impossible
	Current cooling capacity calibration	5~7°C(41~45°F), 7~9°C(45~48°F), 9~11°C(48~52°F), 10~12°C(50~54°F), 11~13°C(52~55°F), 12~14°C(54~57°F), 13~15°C(55~59°F)	Control impossible
	Electric control option	50%, 55%, 60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%, 100%	Control impossible
	Heating capacity calibration	25kg/cm ² , 26kg/cm ² , 27kg/cm ² , 28kg/cm ² , 29kg/cm ² , 30kg/cm ² , 31kg/cm ² , 32kg/cm ² , 33kg/cm ²	Control impossible
	Cooling capacity calibration	5~7°C(41~45°F), 7~9°C(45~48°F), 9~11°C(48~52°F), 10~12°C(50~54°F), 11~13°C(52~55°F), 12~14°C(54~57°F), 13~15°C(55~59°F)	Control impossible
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Desired temp.	Number	Control impossible
Indoor unit	Outdoor temp.	Number	-
	Operation mode	Auto, Cool, Dry, Fan, Heat	-
	Fan speed	Auto, Low, Mid, High	Turbo is available when the device supports the Turbo fan speed.
	Air direction	Vertical, Horizontal, All, None	In case of the 360 Cassette air conditioner, it is changed to Spot, Mid, Wide, and Swing.
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Auto cool temp., Auto heat temp.	Number	Dual Set Point Displayed when Dual Set Point is enabled, and used in the Auto mode
	Power	On, Off	-
	Operation mode	Auto, HeatEx, Bypass, Sleep	-
ERV	Fan speed	Low, High, Turbo	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Outdoor temp.	Number	Control impossible
	ERV mode	Auto, HeatEx, Bypass, Sleep	-
	ERV fan speed	Low, High, Turbo	-
	Operation mode	Auto, Cool, Heat, Off	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
ERV PLUS	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Outdoor temp.	Number	Control impossible
	ERV mode	Auto, HeatEx, Bypass, Sleep	-
	ERV fan speed	Low, High, Turbo	-
	Operation mode	Auto, Cool, Heat, Off	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-

Type	Item	Value	Remarks
Fresh duct	Power	On, Off	-
	Operation mode	Auto, Cool, Fan, Heat	-
	OA intake temp.	Number	Control impossible
	Outdoor temperature	Number	Control impossible
	Cool discharge temp.	Number	-
	Heat discharge temp.	Number	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Power	On, Off	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
AHU	Auto cool temp., Auto heat temp.	Number	Dual Set Point Displayed when Dual Set Point is enabled, and used in the Auto mode
	Status	On, Off	Control impossible
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Status	On, Off	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Status	On, Off	Control impossible
	Power	On, Off	-
	Current temp.	Number	Control impossible
Hydro Unit, Hydro Unit HT, EHS	Desired temp.	Number	-
	Current water out temp.	Number	Control impossible
	Desired water out temp.	Number	-
	Outdoor temp.	Number	Control impossible
	Operation mode	Auto, Cool, Heat	Hydro unit HT cannot set Cool mode
	DHW power	On, Off	-
	Current DHW temp.	Number	Control impossible
	Desired water out temp.	Number	-
	DHW mode	Eco, Standard, Power, Force	Force is only for EHS
	RC usage	Enable RC, Disable RC, Cond. RC	-
ERV	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-
	Power	On, Off	-
	Outdoor temp.	Number	Control impossible
	ERV mode	Auto, HeatEx, Bypass, Sleep	-
	ERV fan speed	Low, High, Turbo	-
	Operation mode	Auto, Cool, Heat, Off	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-

Type	Item	Value	Remarks
DVM CHILLER	Power	On, Off	-
	Current temp.	Number	Control impossible
	Desired temp.	Number	-
	Outdoor temp.	Number	Control impossible
	Operation mode	Cool, Cool Storage, Heat, Hot Water	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
Pack- aged DOAS	Error detection	True, False	Control impossible
	Power	On, Off	-
	Cool discharge temp.	Number	-
	Heat discharge temp.	Number	-
	Dry discharge temp.	Number	-
	Current discharge temp.	Number	Control impossible
	Mode	Cool, Dry, Fan, Heat	Control impossible

Type	Item	Value	Remarks
FCU Kit	Power	On, Off	-
	Current temp.	Number	Control impossible
	Desired temp.	Number	-
	Operation mode	Auto, Cool, Fan, Heat	For the FCU manufactured by Samsung, Auto mode is not available.
	Fan speed	Auto, Low, Mid, High	-
	RC usage	Enable RC, Disable RC, Cond. RC	-
	Error detection	True, False	Control impossible
	Limit operation mode	None, Cool only, Heat only	-

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin | Logout | Control logic management | Setting control logic

Setting control logic

Name:

Period: 2016/9/7 - 2017/9/7 ☐ No limit

Day: ☐ Sun ☐ Mon ☐ Tue ☐ Wed ☐ Thu ☐ Fri ☐ Sat ☒ Daily

Time: 0:00 - 24:00

Factor edit: Single

Device:

11.00.00

* Click "Select" button : a pop-up window appears and you can select a device.

Input

Compound factor	Factor	Comparison operator	Standard value	Duration (minute)
<input type="checkbox"/>	Select a factor	=	<input type="radio"/> None <input type="radio"/> Select a factor	<input type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input type="radio"/> None <input type="radio"/> Select a factor	<input type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input type="radio"/> None <input type="radio"/> Select a factor	<input type="radio"/> Cancel <input type="radio"/> Apply 1

Pop-up window for Select button:

- Power
- Current temperature
- Desired temp.
- Outdoor temp.
- Mode
- Fan speed
- Air direction
- RC usage
- Trouble
- Limit mode

9 Select detailed item of factor.

- ◆ Detailed item may be different depending on the type of selected device.

10 Click [Apply].

- ◆ If you do not click [Apply], changed setting will not be saved.

11 Select comparison operator.

- ◆ Types of comparison operators: =, =<, =>, <, >, ≠
- ◆ Comparison operator compares factor to standard factor.

Control Logic Management (Continued)

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin. flosour | Control logic management | Setting control logic

Setting control logic

Name	ControlLogic							
Period	2016	9	7	-	2017	9	7	No limit
Day	<input type="checkbox"/> Sun <input type="checkbox"/> Mon <input type="checkbox"/> Tue <input type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input checked="" type="checkbox"/> Daily							
Time	0	0	24	0				

Input

<input type="checkbox"/> Compound factor	Factor	Comparison operator	Standard value	Duration (minute)
<input type="checkbox"/>	11.00.00.Power	=	<input checked="" type="radio"/> On <input type="radio"/> Select a factor <input checked="" type="radio"/> 12 min <input type="radio"/> Select a factor <input type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input type="radio"/> Select a factor <input type="radio"/> Select a factor <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input type="radio"/> Select a factor <input type="radio"/> Select a factor <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1

Add Delete

Output

<input type="checkbox"/>	Factor	Command
<input type="checkbox"/>	Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor
<input type="checkbox"/>	Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor
<input type="checkbox"/>	Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor

Add Delete

* Setting Guide: In the initial setting, click 'Select a factor' and a factor editing window appears. Then click 'Select' button to set the device. After setting the device, the information in the 'Select a factor' is updated to the setting. Select the information to modify it.

Save

12 Select standard value.

- ◆ Select detailed item value of selected factor or factor.
- ◆ The item varies depending on the left factor when selecting detailed item value from standard value.
 - Ex1) Factor : Current temperature of indoor unit 1,
Value of standard value : Enter 29
 - Ex2) Factor : Remote controller usage of indoor unit 1,
Value of standard value : Select one among Enable RC, Disable RC and Cond. RC.
- ◆ When selecting factor from standard value, it must be same with control item of left factor.
 - Ex1) Factor : Power of indoor unit 1,
Factor of standard value : Power of indoor unit 2
 - Ex2) Factor : Current temperature of indoor unit 1,
Factor of standard value : Average current temperature of indoor unit 1 and 2

13 Select duration time usage.

- ◆ Duration time means the time which the comparing conditions satisfy 'True'.
- ◆ The duration time can be set from 1 to 60.
- ◆ If you select duration time apply, the comparing condition will be 'True'.
To execute, maintain 'True' for duration time.

Note

- ◆ Only 1 duration time can be set per control logic.
- ◆ The tolerance range of duration time is maximum 1 minute. If you set the duration time as 2 minutes, operation will be started between 2 and 3 minutes.

Factor edit Single ▾

Device **Select**

Device selection

* Click 'Select' button : a pop-up window appears and you can select a device. Select a device to check the settings.

Apply

Input				
<input type="checkbox"/> Compound factor	Factor	Comparison operator	Standard value	Duration (minute)
<input type="checkbox"/>	11.00.00.Power	= ▾	<input checked="" type="radio"/> On ▾ <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1 ▾
<input type="checkbox"/>	AND ▾	= ▾	<input checked="" type="radio"/> None ▾ <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1 ▾
<input type="checkbox"/>	AND ▾	= ▾	<input checked="" type="radio"/> None ▾ <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1 ▾

Add Delete

Output	
Factor	Command
Select a factor	<input checked="" type="radio"/> None ▾ <input type="radio"/> Select a factor
Select a factor	<input checked="" type="radio"/> None ▾ <input type="radio"/> Select a factor
Select a factor	<input checked="" type="radio"/> None ▾ <input type="radio"/> Select a factor

Add Delete

Save

* Setting Guide: In the initial setting, click 'Select a factor' and a factor editing window appears. Then click 'Select' button to set the device. After setting the device, the information in the 'Select a factor' is updated to the setting. Select the information to modify it.

14 Select compound factor setting usage.

- ◆ You can use compound factor setting when you give conditions to 2 and 3 input items.
- ◆ You can select 1 compound factor from 'AND' and 'OR'.
- ◆ Select 'AND' if all the input items each should be 'True'.
- ◆ Select 'OR' if just 1 input item needs to be 'True'.
- ◆ Compound factor has priorities in order.

For example, if you set 'OR', 'AND' in order, it means '(input item 1 OR input item 2) AND input item 3'.

After selecting the compound factor, you must tick the check box on the left side.

15 Select 'Select a factor' in the Output list.

Control Logic Management (Continued)

Factor edit: Single (16)

Device select (17)

* Click 'Select' button : a pop-up window appears and you can select a device. Select a device to

Input

Compound factor	Factor	Comparison operator	
<input type="checkbox"/>	11.00.00.Power	=	<input checked="" type="radio"/> On
<input type="checkbox"/> AND	Select a factor	=	<input checked="" type="radio"/> None
<input type="checkbox"/> AND	Select a factor	=	<input checked="" type="radio"/> None

Output

Factor	Command
Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor
Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor
Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor

* Setting Guide: In the initial setting, click 'Select a factor' and a factor editing window appears. Then click 'Select' button to set the device. After setting the device, the information in the 'Select a factor' is updated to the setting. Select the information to modify it.

Add Delete Save

Device selection

Address	Name
11.00	11.00.00
11.00.00	11.00.00
11.00.01	11.00.01
11.00.02	11.00.02
11.00.03	11.00.03
11.00.04	11.00.04
11.00.05	11.00.05
56.00.03	56.00.03
56.00.04	56.00.04
56.00.05	56.00.05
56.00.06	56.00.06

16 Select type of factor.

- ◆ Single factor can be set for the left factor of output.
 - Single factor: It means 1 device.
 - Ex) Desired temperature of indoor unit

17 Click 'Select'.

- ◆ List of device which can be selected will be displayed.

18 Select the device to use as factor.

Factor edit Single ▾

Device Select

11.00.01 Power ▾

* Click 'Select' button : a pop-up window appears and you can select a device. Select a device to check the settings.

Apply

Input

<input type="checkbox"/> Compound factor	Factor	Comparison operator	Standard value	Duration (minute)
	11.00.00.Power	\approx ▾	<input checked="" type="radio"/> On ▾ <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1 ▾
<input type="checkbox"/> AND ▾	Select a factor	\approx ▾	<input checked="" type="radio"/> None ▾ <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1 ▾
<input type="checkbox"/> AND ▾	Select a factor	\approx ▾	<input checked="" type="radio"/> None ▾ <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1 ▾

Add Delete

Output

<input type="checkbox"/>	Factor	Command
	Select a factor	None ▾ <input type="radio"/> Select a factor
<input type="checkbox"/>	Select a factor	None ▾ <input type="radio"/> Select a factor
<input type="checkbox"/>	Select a factor	<input checked="" type="radio"/> None ▾ <input type="radio"/> Select a factor

Add Delete

Save

* Setting Guide: In the initial setting, click 'Select a factor' and a factor editing window appears. Then click 'Select' button to set the device. After setting the device, the information in the 'Select a factor' is updated to the setting. Select the information to modify it.

19 Select detailed item of factor.

- ◆ Detailed item may be different depending on the type of selected device.

20 Click [Apply].

- ◆ If you do not click [Apply], changed setting will not be saved.

21 Select command value.

- ◆ The value may vary depending on the detailed item of selected factor.
- ◆ You can select value of selected item or new factor.
- ◆ You can set single factor, arithmetic factor and function factor.

Control Logic Management (Continued)

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin, f160409r

Control logic management > Setting control logic

Setting control logic

Name	ControlLogic							
Period	2016	9	7	-	2017	9	7	<input type="checkbox"/> No limit
Day	<input type="checkbox"/> Sun	<input type="checkbox"/> Mon	<input type="checkbox"/> Tue	<input type="checkbox"/> Wed	<input type="checkbox"/> Thu	<input type="checkbox"/> Fri	<input type="checkbox"/> Sat	<input checked="" type="checkbox"/> Daily
Time	0	:	0	-	24	:	0	

Input

<input type="checkbox"/> Compound factor	Factor	Comparison operator	Standard value	Duration (minute)
<input type="checkbox"/>	11.00.00.Power	=	<input checked="" type="radio"/> On <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input checked="" type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1
<input type="checkbox"/> AND	Select a factor	=	<input checked="" type="radio"/> None <input type="radio"/> Select a factor	<input checked="" type="radio"/> Cancel <input type="radio"/> Apply 1

Output

<input type="checkbox"/>	Factor	Command
<input type="checkbox"/>	11.00.01.Power	<input checked="" type="radio"/> On <input type="radio"/> Select a factor
<input type="checkbox"/>	Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor
<input type="checkbox"/>	Select a factor	<input checked="" type="radio"/> None <input type="radio"/> Select a factor

* Setting Guide: In the initial setting, click 'Select a factor' and a factor editing window appears. Then click 'Select' button to set the device. After setting the device, the information in the 'Select a factor' is updated to the setting. Select the information to modify it.

22 To add output, click [Add].

After adding the output, you must tick the check box.

- ◆ If you want to delete output which you don't use anymore, select it and then click [Delete].


23 Click [Save].

- ◆ Set control logic will be saved in DMS2.5.
- ◆ If you do not click [Save], changed setting will not be saved.

Note

- ◆ Control logic input items consist of factor, comparison operator, standard value and duration time.
- ◆ You can enter up to 24 input items of control logic, and the items can be connected with compound factor.
- ◆ Output item of control logic consists of factor and command value.
- ◆ You can enter up to 20 output items of control logic.
- ◆ You can create up to 256 control logics.


Editing/Deleting/Copying Control Logic

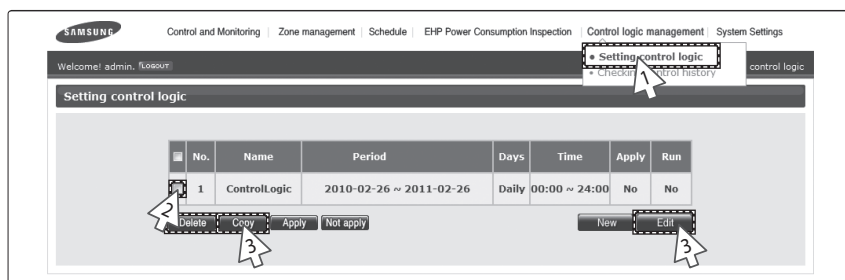

- 1 Click [Control logic management] → [Setting control logic] when DMS2.5 web page menu screen appears.
- 2 Select control logic when control logic screen appears.
- 3 Click [Edit]/[Delete]/[Copy].
 - ◆ To edit control logic, refer to 'Setting control logic' steps. (Refer to page 107~116)
 - ◆ Click [Delete] to delete the selected control logic.
 - ◆ Click [Copy] to copy the selected control logic.

Control Logic Management (Continued)

Enable/Disable Control Logic

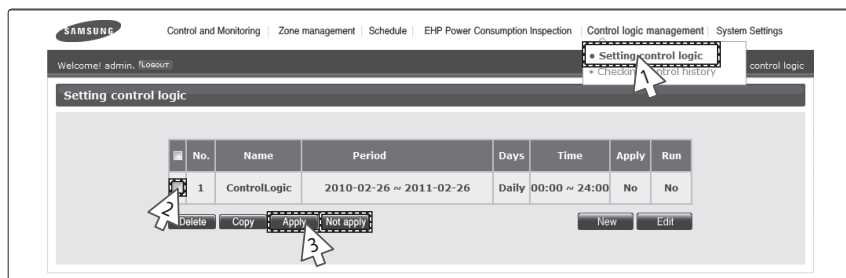

1 Click [Control logic management] → [Setting control logic] when DMS2.5 web page menu screen appears.

2 Select control logic when control logic screen appears.

3 Click [Apply]/[Not apply].


- ◆ The selected control logic will be applied by clicking [Apply].

- ◆ The selected control logic will not be applied by clicking [Not apply].

Note

- ◆ When the selected device is Hydro unit, Hydro unit HT or EHS and Thermostat #1 or Thermostat #2 is ON, the control logic of the desired temperature, water out temperature and operation mode cannot be controlled.
- ◆ When the selected device is EHS and the hot water thermostat is ON, the control logic of the desired temperature for hot water cannot be controlled.

Checking Control History

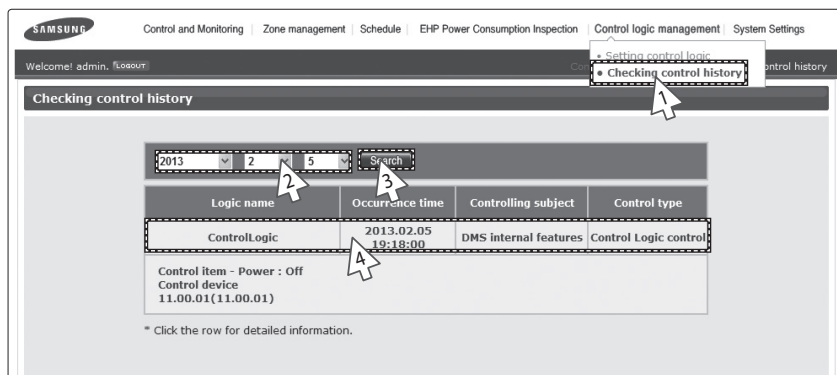


- 1 Click [Control logic management] → [Checking control history] when DMS2.5 web page menu screen appears.
- 2 Select the date you want when the control logic screen appears.
 - ◆ Select Year/Month/Day in order.
 - ◆ Based on DMS2.5 time, you can check of maximum 180 days of previous control history.
- 3 Click [Search].
 - ◆ You can check only in daily unit.
- 4 Select each items to check detailed contents of control history.

Note *DMS2.5 saves the information of control logic management control history for 180 days. However, it varies depending on saving space of DMS2.5.*

System Settings

Adding a User

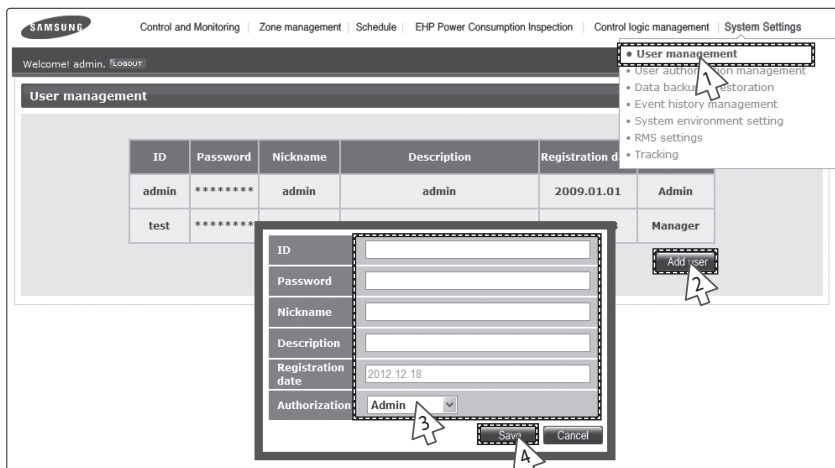


You can add, edit and delete the user of DMS2.5.

- 1 Click [System Settings] → [User management] when DMS2.5 web page menu screen appears.
- 2 Click [Add user] when user management screen appears.
 - ◆ User information input window will be appeared when pressing [Add user].
- 3 Enter ID, password, Nickname and description for new user and then select authority.
 - ◆ The user ID should be between 4~12 letters and English lower case letters and numbers only can be used. (English capital letter and special symbols including space cannot be used for user ID.)
 - ◆ The password should be between 8~12 letters and English capital/lower case letters, and numbers only can be used, without any spaces. In addition, the password should contain both English letters and numbers.
 - ◆ Name should be within 20 letters, and description should be in 50 letters.
 - ◆ Registration date will be input automatically as system date.
 - ◆ Select authorization for the user from 'Admin', 'Manager' and 'Regular user'.
Admin has all authorization and 'Manager'/'Regular user' has limited authorization.
- 4 Click [Save].
 - ◆ Maximum of 256 users can be registered.
 - ◆ User information will be saved in DMS2.5.

Note

- ◆ For security and maintenance, you should change the password of the admin account that is issued by the factory for shipping purposes.
- ◆ Administrator(Admin) can change all setting of indoor/outdoor unit.
- ◆ Administrator(Admin) can check all indoor/outdoor units connected to DMS2.5.
- ◆ Administrator(Admin) can edit zone information and assign the zone information to manager.
- ◆ A manager can check and control indoor/outdoor units which belong to assigned zones only.

Editing a User

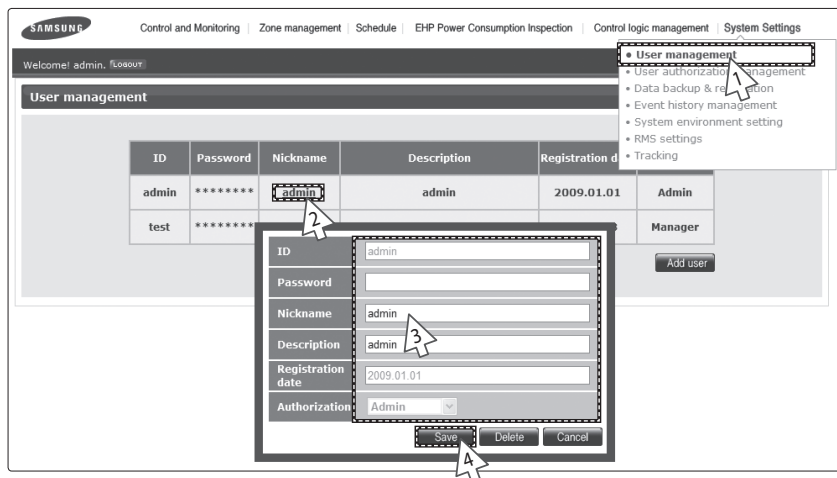

1 Click [System Settings] → [User management] when DMS2.5 web page menu screen appears.

2 Click the Nickname to edit when user management screen appears.

◆ User information window will be displayed.

3 Edit user information when the user information window appears.

- ◆ You cannot change user ID.
- ◆ The password should be between 8~12 letters and English capital/lower case letters, and numbers only can be used, without any spaces. In addition, the password should contain both English letters and numbers.
- ◆ Nickname should be within 20 letters, and description should be in 50 letters.
- ◆ Registration date is input automatically as system date. Therefore you cannot edit registration date.
- ◆ Select authorization for the user from 'Admin', 'Manager' and 'Regular user'. Admin has all rights and 'Manager'/'Regular user' has some rights.

4 Click [Save].


◆ Modified user information will be saved in DMS2.5.

Note

- ◆ User information can be changed only with the admin account.
- ◆ Authorization of admin account cannot be modified.
- ◆ Administrator(Admin) can change all setting of indoor/outdoor unit.
- ◆ Administrator(Admin) can check all indoor/outdoor units connected to DMS2.5.
- ◆ Administrator(Admin) can edit zone information and assign the zone information to manager.
- ◆ A manager can check and control indoor/outdoor units which belong to assigned zones only.

System Settings (Continued)


Deleting a User

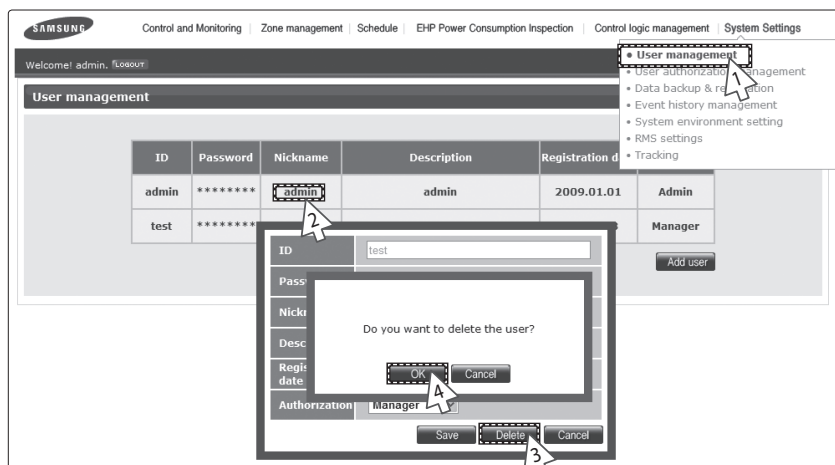

- 1 Click [System Settings] → [User management] when DMS2.5 web page menu screen appears.
- 2 Click the Nickname to delete when user management screen appears.
 - ◆ User information window will be displayed.
- 3 Click [Delete] when the user delete window appears.
 - ◆ Confirm window will pop up saying, "Do you want to delete the user?"
- 4 Click [OK].
 - ◆ Selected user information will be deleted in DMS2.5.

Note Admin account cannot be deleted.

Editing User Authorization

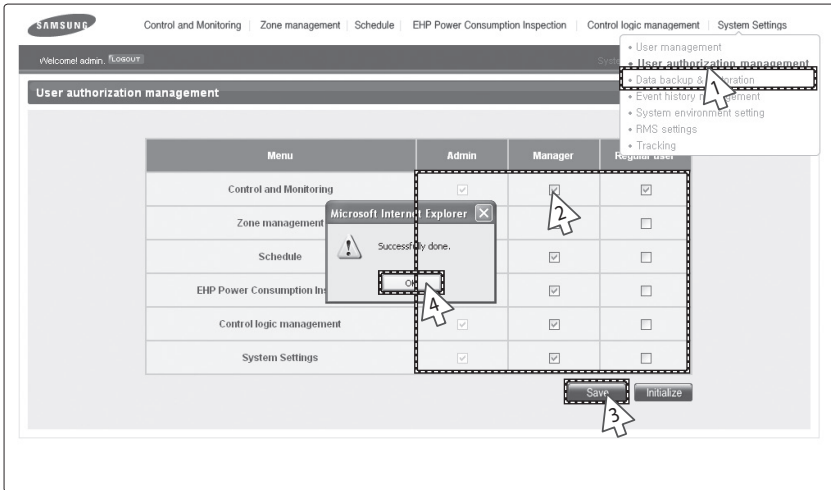


- 1 Click [System Settings] → [User authorization management] when DMS2.5 web page menu screen appears.
- 2 Select/Deselect accessible menu by authorization when the user authorization management screen appears.
- 3 Click [Save] after setting is completed.
- 4 Click [OK] when "Successfully done." message appears.
 - ◆ Changed user authorization information will be saved in DMS2.5 by clicking [OK].

Note

- ◆ **Administrator(Admin authorization) is allowed to access to all menus.**
- ◆ **You cannot edit authorization (menu access) of administrator(Admin).**

System Settings (Continued)


Initializing a User Authorization

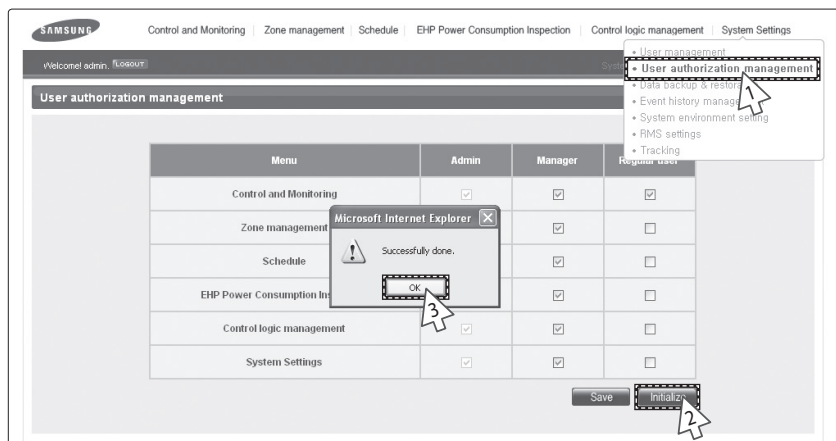

- 1 Click [System Settings] → [User authorization management] when DMS2.5 web page menu screen appears.
- 2 Click [Initialize] when user management screen appears.
- 3 Click [OK] when "Successfully done." message appears.
 - ◆ User authorization information saved in DMS2.5 will be initialized by clicking [OK].

Note You can restore user authorization information as factory setting by using initialization function.



DMS2.5 Data Backup – PC Backup

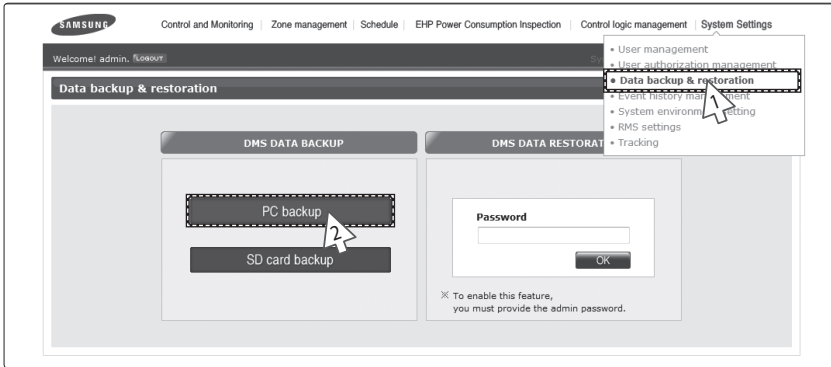


You can back up DMS2.5 data to PC or SD card.

- 1 Click [System Settings] → [Data backup & restoration] when DMS2.5 web page menu screen appears.
- 2 Click [PC backup] when DMS2.5 data backup & restoration screen appears.
 - ◆ "Reading data from DMS2.5. Please wait." message will appear.
 - ◆ Depending on the size of the data, backup time may vary. It will usually take few seconds.

System Settings (Continued)

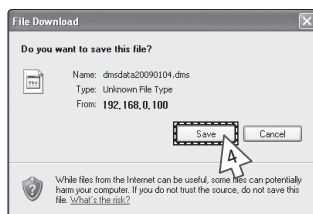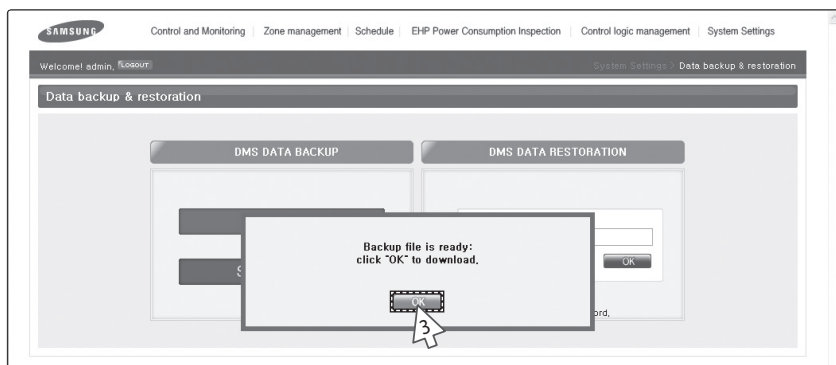

- 3** Click [OK] when "Backup file is ready. Click "OK" to download." message appears.
- 4** Click [Save] when "File download" window appears.

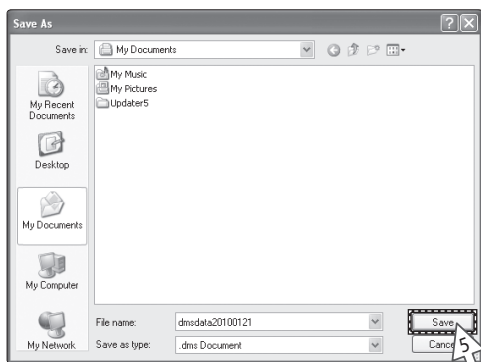

5 When “Save as” window appears, select saving location and file name and then click [Save].


- ◆ Backup file will be saved as the name you made in the location you select by clicking [Save].
- ◆ Basic backup file name is “dmsdataYYYYMMDDhhmmss.dms”.
(YYYY: year, MM: month, DD: day, hh: hour, mm: minute, ss: second)
- ◆ The extension of the backup data files is “. dms”.
- ◆ If you want to edit the file name, use English alphabets or numbers only.
- ◆ File name should be less than 32 letters. If the file name exceeds 32 letters, proper restoration may not be possible.

6 Click [Close] after completing the download.

Note *Backup data includes DB data, setting data, data related indoor/outdoor unit control and various kinds of history data. They will be backed up in single unified file.*


System Settings (Continued)

DMS2.5 Data Backup – SD card backup

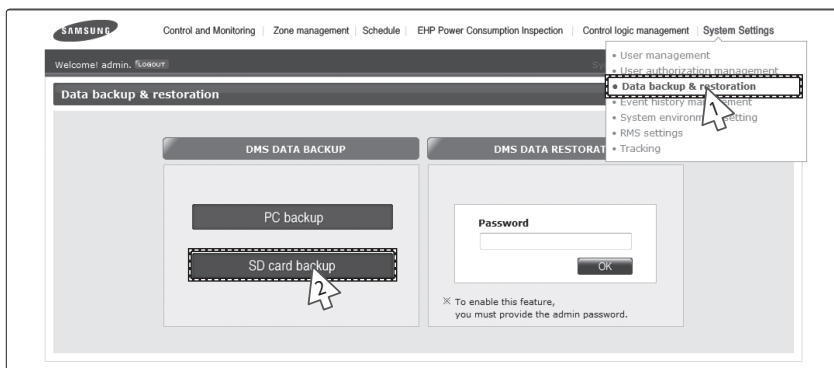

You can back up DMS2.5 data to PC or SD card.

- 1 Click [System Settings] → [Data backup & restoration] when DMS2.5 web page menu screen appears.
- 2 Click [SD card backup] when DMS2.5 data backup & restoration screen appears.
 - ◆ “Reading data from DMS2.5. Please wait.” message will be displayed.
 - ◆ Depending on the size of the data, backup time may vary. It will usually take few seconds.

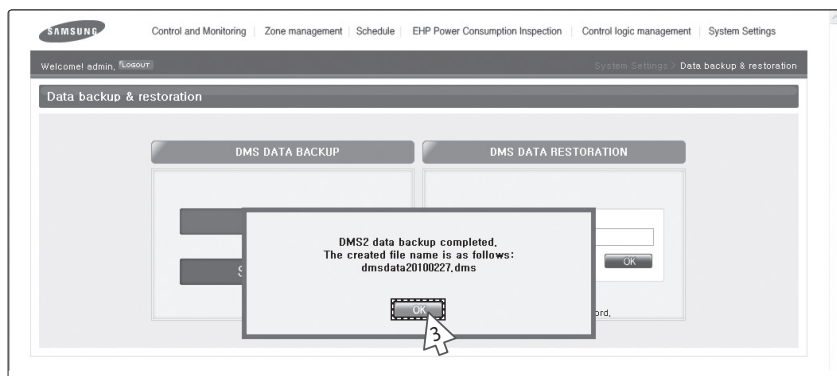

- 3 Click [OK] when "DMS2.5 data backup completed. The created file name is as follows: "dmsdataYYYYMMDDhhmmss.dms" message appears.
 - ◆ The file name of backup file is "dmsdataYYYYMMDDhhmmss.dms" and it does not exceed maximum 21 letters.
(YYYY: year, MM: month, DD: day, hh: hour, mm: minute, ss: second)
 - ◆ The extension of the backup data files is ". dms".
 - ◆ If "Backup failed." message appears, click [OK] . Then check if the SD card is inserted or forbidden for writing.

Note Backup data includes DB data, setting data, data related indoor/outdoor unit control and various kinds of history data. They will be backed up in single unified file.




CAUTION



- ◆ To use SD backup and restoration function properly, SD card which is formatted in VFAT file system is required.
- ◆ If SD card is already inserted, automatic backup function will be operated and everyday data will be backed up in SD card.
- ◆ If available space of SD card is smaller than 100Mbytes, deleting oldest DMS2.5 backup file process will be operated first and then auto backup function will be operated.

System Settings (Continued)

DMS2.5 Data Restoration - PC Restore

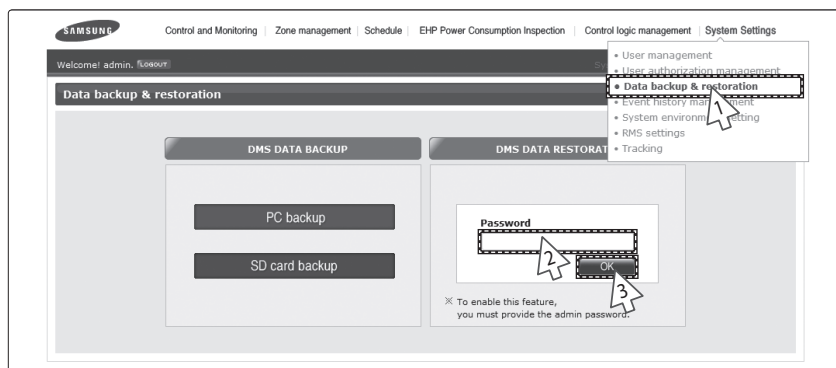

- 1 Click [System Settings] → [Data backup & restoration] when DMS2.5 web page menu screen appears.
- 2 Enter the password of Admin account when DMS2.5 data backup and restoration screen appears.
 - ◆ Data restoration function deals with the important data of the system.
To activate the function, you should enter administrator's password.
- 3 Click [OK].
- 4 Click [OK] when caution window appears.

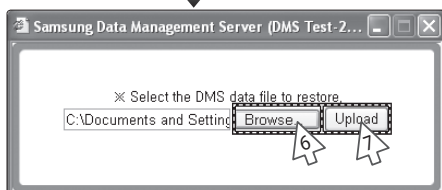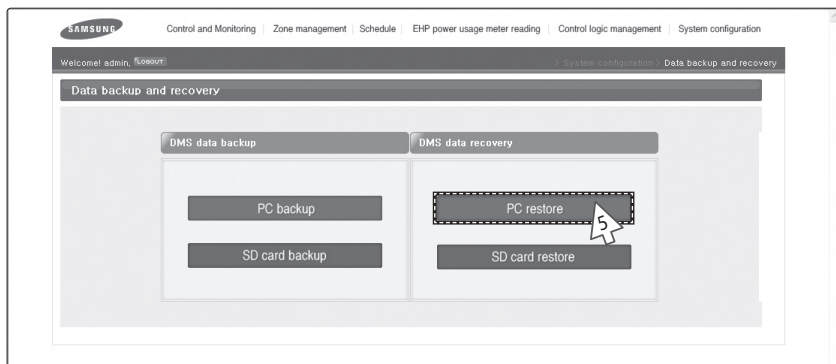


5 Click [PC restore].

6 Click [Browse].

◆ Select DMS2.5 data file to restore and then click [Open(O)] when "File selection" window appears.

7 Check if the file route and file name are correctly entered in the text box, and then click [Upload].

System Settings (Continued)

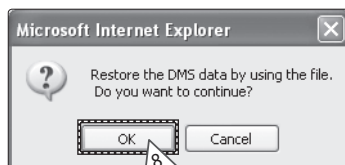

-
- 8 Click [OK] when “Restore the DMS by using the file. Do you want to continue?” message appears.
- ◆ “Reading data from DMS2.5. Please wait.” message window will appear.
 - ◆ Depending on the size of the data, backup time may vary. It will usually take few seconds.
-
- 9 Click [OK] when “Restoration is complete. Click 'OK' to restart DMS.” confirm window appears.
- ◆ DMS2.5 will restart and restored data will be reflected.
-

Note

- ◆ Backup and restoration of set event history is not available.
- ◆ Backup and restoration of network setting is not available.




CAUTION

Keep in mind followings when operating restoration using backup file saved in PC.



1. You cannot use files bigger than 100Mbytes for restoration file.
2. Restoration should be carefully executed because existing data will be deleted during restoration and the data you select will be restored. Before operating restoration, backup current data of DMS2.5 to PC or SD card.
3. The name of file for restoration should be within 32 letters in English alphabet or numbers. If not, rename the file and upload it again.

DMS2.5 Data Restoration - SD Card Restoration

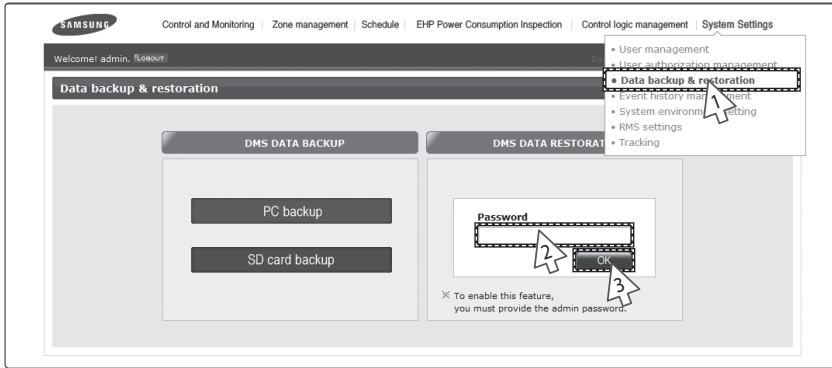


- 1 Click [System Settings] → [Data backup & restoration] when DMS2.5 web page menu screen appears.
- 2 Enter the password of Admin account when DMS2.5 data backup and restoration screen appears.
 - ◆ Data restoration function deals with the important data of the system.
To activate the function, you should enter administrator's password.
- 3 Click [OK].
- 4 Click [OK] when caution window appears.

System Settings (Continued)

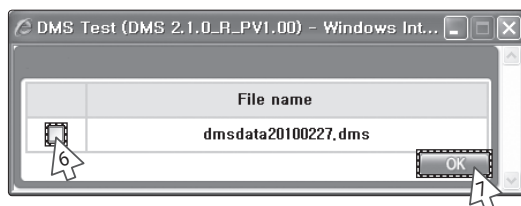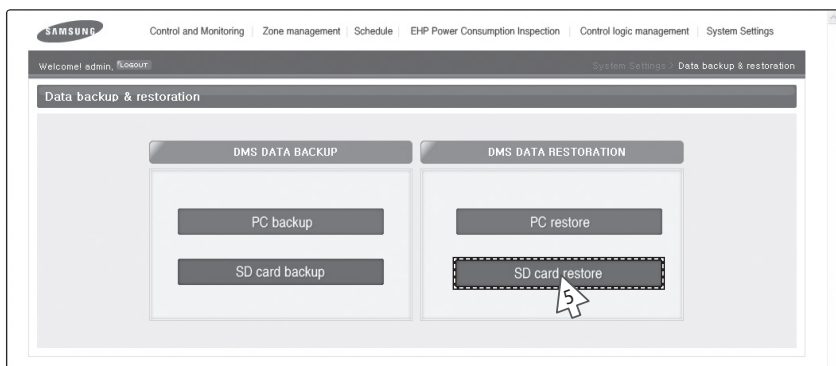

- 5 Click [SD card restore].
- 6 Select the check box of file to restore.
- 7 Click [OK].

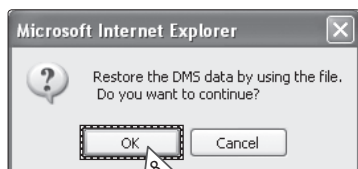


-
- 8 Click [OK] when “Restore DMS data by using the file. Do you want to continue?” message appears.
- ◆ “Reading data from DMS2.5. Please wait.” message window appears.
 - ◆ Depending on the size of the data, backup time may vary. It will usually takes few seconds.
-
- 9 Click [OK] when “Restoration is complete. Click 'OK' to restart DMS.” message window appears.
- ◆ DMS2.5 will restart and restored data will be reflected.
-

Note *For proper restoration, unlock the forbidden writing function of SD card.*

System Settings (Continued)

Event History Management “Search(Check)”

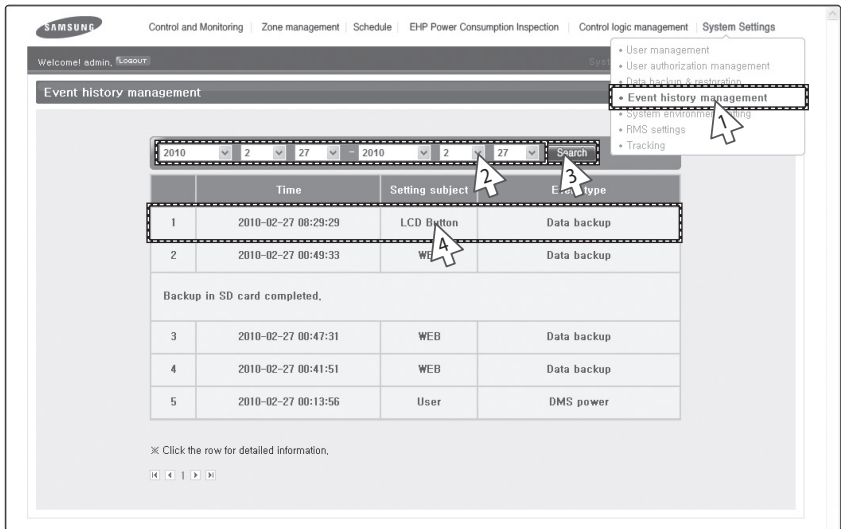


You can search(check) all kinds of set information of event log in DMS2.5.

- 1 Click [System Settings] → [Event history management] when DMS2.5 web page menu screen appears.
- 2 Select the period of event history you want to search.
- 3 Click [Search].
- 4 List of events which occurred in the period will be displayed.
 - ◆ You can check detailed information about the event by selecting the item you want to check.

Note You can check following event logs using event history management.

1. DMS2.5 power related event
2. Schedule setting related event
3. RMS service setting related event
4. Tracking related event
5. User information modification related event
6. System settings related event
7. Operation using external interface related event

DMS2.5 Network Information Setting – “Manual Setting”

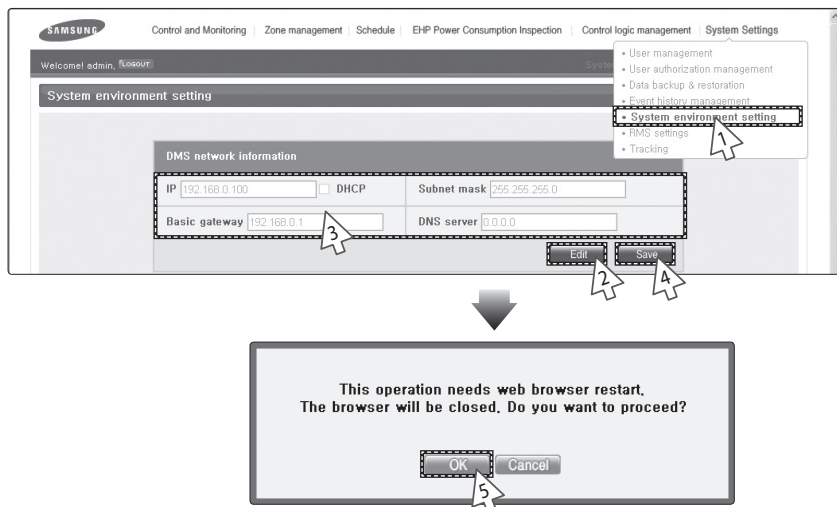


You can set and check information about DMS2.5 installation operation.

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] from DMS2.5 network information window.
- 3 When text boxes of IP address, subnet mask address, default gateway and DNS server are enabled, enter values for each item.
 - ◆ 15 letters can be entered for each item.
 - ◆ Each item should match with the network address form.
 - ◆ Basically, only Private IP can be set to IP address. To use Public IP, you must set Enable public IP as 'Enable' from the menu [System Settings] → [System environment setting].
 - Private IP range: 10.0.0.0 ~ 10.255.255.255, 172.16.0.0 ~ 172.31.255.255, 192.168.0.0 ~ 192.168.255.255
 - Public IP range: IP except for Private IP range and 127.0.0.1(localhost)
- 4 Click [Save] in DMS2.5 network information window.
- 5 Click [OK] when "This operation needs web browser restart. The browser will be closed. Do you want to proceed?" message appears.
 - ◆ Click [OK] and current web browser will be closed. Run the web browser again and you can access to DMS2.5 using IP which is manually set.

System Settings (Continued)

DMS2.5 Network Information Setting – using “DHCP”

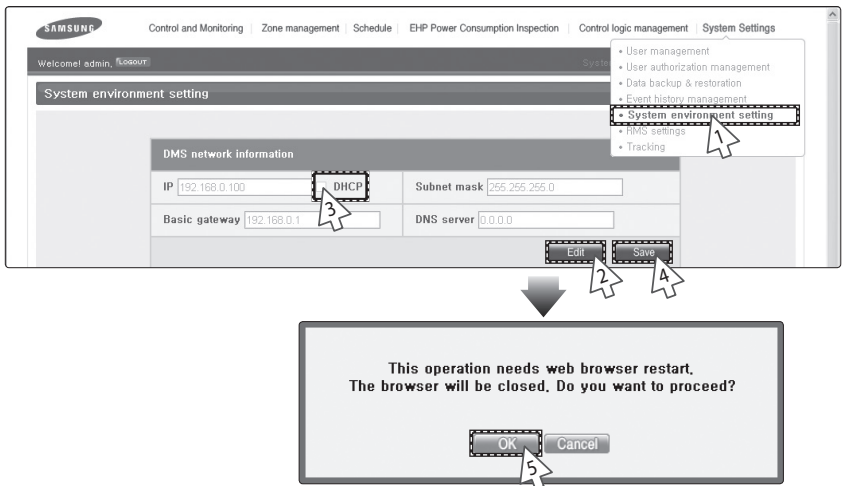

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] from DMS2.5 network information window.
- 3 Check 'DHCP'.
 - ◆ The text boxes of IP address, subnet mask address, default gateway and DNS server will be disabled.
 - ◆ If you want manual setting, uncheck 'DHCP' and then refer to “DMS2.5 Network information setting-manual setting” steps. (Refer to page 137)
 - ◆ DMS2.5 supports DHCP. Only private IP should be assigned from DHCP. If Public IP is assigned from DHCP, you cannot access DMS2.5.
 - ◆ If Public IP must be assigned from DHCP, you must set Enable public IP as 'Enable' from the menu [System Settings] → [System environment setting].
- 4 Click [Save] in DMS2.5 network information window.
- 5 Click [OK] when “This operation needs web browser restart. The browser will be closed. Do you want to proceed?” message appears.
 - ◆ Click [OK] and current web browser will be closed. Run the web browser again and you can access to DMS2.5 after checking auto setting IP in the external LCD.



Some functions available on DMS2.5 web page may not be functional at BACnet Gateway and LonWorks Gateway. For detailed function, refer to the installation manual or contact Samsung Electronics.

Note

- ◆ **Factory setting is as follows.**
 1. IP address: 192.168.0.100
 2. Subnet mask address: 255.255.255.0
 3. Default gateway : 192.168.0.1
 4. DNS server: 0.0.0.0
- ◆ **DMS2.5 sets service engineer IP(192.168.0.254) internally. Therefore, it should be available all the time regardless of current IP setting.**
- ◆ **DMS2.5 gets DHCP IP address when you activate DHCP function. When connecting DMS2.5 to S-NET series, you can connect them using the IP. However the DHCP IP address can be changed by events such as network environment of restart.**

In this case, it may cause communication failure between S-NET series and DMS2.5. Therefore it is not recommended to connect DMS2.5 using DHCP address using S-NET series.
- ◆ **You can check network information on external LCD of DMS2.5 when activating DHCP. (Refer to page 175)**
- ◆ **When DHCP is set, address from DHCP server will be set as DMS2.5 IP address.**
- ◆ **DHCP function is not available when you use BACnet Gateway function.**
- ◆ **When an IPv6 address is assigned automatically, it is displayed on the display, but you cannot change it.**




CAUTION


This product must be used in a dedicated network because it cannot respond to network attacks such as hacking and viruses. When it is connected to the Internet or an intranet (ex: an office LAN), it could be a risk of illegal approach. Also, this may change it to a harmful connection for other network devices. This is not the responsibility of Samsung Electronics and not included in compensation for the damage.

System Settings (Continued)

System Time Setting

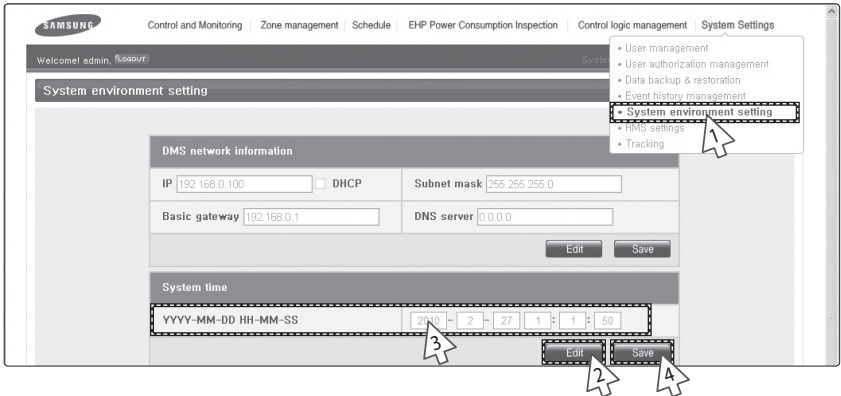

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] from system time setting.
- 3 Enter system time(year/month/day/hour/minute/second).
 - ◆ You can enter only numbers.
 - ◆ Year: You can enter from 1980 to 2035.
 - ◆ Month: You can enter from 1 to 12.
 - ◆ Day: You can enter from 1 to 31.
 - ◆ Hour: You can enter from 0 to 23.
 - ◆ Minute: You can enter from 0 to 59.
 - ◆ Second: You can enter from 0 to 59.
- 4 Click [Save] after setting is completed.

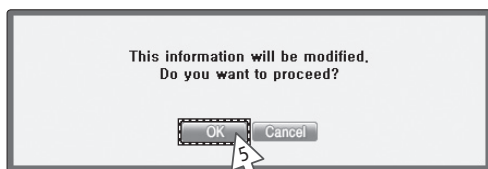

-
- 5 Click [OK] when “This information will be modified. Do you want to proceed?” message window appears.
-
- 6 “Reading data from DMS2.5. Please wait.” message appears and saving is completed. Then, system environment setting screen appears again with all items are disabled.
-

Note Time on the screen shows DMS2.5 setting time.

Synchronizing time via the Internet

- 1 Set this function when you synchronize the time of DMS with an Internet time server.
 - ◆ This function operates properly only when DMS is installed so that it can connect to the Internet.
-
- 2 Click [Apply], and then set the time offset based on the Universal Time Coordinated (UTC) for the place where DMS is installed.
-

System Settings (Continued)

■ Selecting the Language

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] from language selection.
- 3 Select a language you want then click [Save].
- 4 Click [OK] when “This operation needs DMS to be restarted. Do you want to apply the setting?” message appears.
 - ◆ Click [OK] and current web browser will be closed. DMS2.5 will restart and it may take approximately 1 minute.

DMS2.5 Name Setting

System environment setting

DMS network information

IP: 192.168.0.100 ☐ DHCP Subnet mask: 255.255.255.0

Default gateway: 192.168.0.1 DNS server: 0.0.0.0

System time

YYYY-MM-DD HH-MM-SS: 2016-05-17 10:50:29

Select Language

<input type="radio"/> 한국어	<input type="radio"/> 中文	<input type="radio"/> Nederlands
<input checked="" type="radio"/> English	<input type="radio"/> Français	<input type="radio"/> Ελληνικά
<input type="radio"/> Magyar	<input type="radio"/> Italiano	<input type="radio"/> Polski
<input type="radio"/> Português	<input type="radio"/> Slovensky	<input type="radio"/> Español
<input type="radio"/> Deutsch	<input type="radio"/> русский	<input type="radio"/> Türkçe


DMS name setting

DMS name:

Edit Save

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu appears.
- 2 Click [Edit] from DMS2.5 name setting.
- 3 Enter name of DMS2.5 when DMS2.5 name field enabled.
 - ◆ You can use maximum 30 letters including English alphabets and special symbols.
 - ◆ When DMS2.5 name is set, the name will be displayed on the top title bar of web browser.
- 4 Click [Save] after setting is completed.

System Settings (Continued)

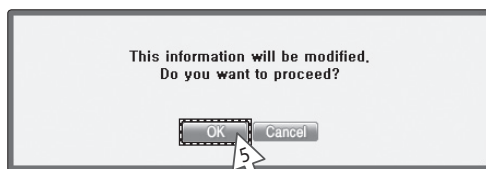

-
- 5 Click [OK] when “This information will be modified. Do you want to proceed?” message appears.
-
- 6 “Reading data from DMS2.5. Please wait.” message appears and saving is completed. Then, system environment setting screen appears again with all items are disabled.
 - ◆ You can check new DMS2.5 name on the title bar of web browser.
-

Note *Name of the DMS2.5 is set to blank as factory default.*

Error Mail Forwarding Setting

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | **System Settings**

Welcome! admin, f099xx@ | **System environment setting**

- User management
- User authorization management
- Data backup & restoration
- Event history management
- **System environment setting**
- DMS settings
- Tracking

DMS network information

IP: 10.240.225.31 ☐ DHCP Subnet mask: 255.255.255.0

Default gateway: 10.240.225.1 DNS server: 0.0.0.0

System time

YYYY-MM-DD HH-MM-SS: 2011-11-04 17:07:02

DMS name setting

DMS name: DMS Test

Error email forwarding

☐ Apply ☒ Not apply

E-mail:


ID: PW: SMTP server:

Select the contact control pattern

☒ Pattern1 ☐ Pattern2 ☐ Pattern3 ☐ Pattern4

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] from error mail forwarding setting.
- 3 Set all the items as the value you want when all items fields are enabled.
 - ◆ If you select 'Apply', you should input e-mail address, SMTP server ID, password, and SMTP server address.
 - ◆ If you select 'Not apply', E-mail, ID, PW and SMTP server items will not affect on the setting.
 - ◆ [Test] appears after saving all e-mail information. Click [Test] to send the test message.
- 4 Click [Save] after setting is completed.

System Settings (Continued)

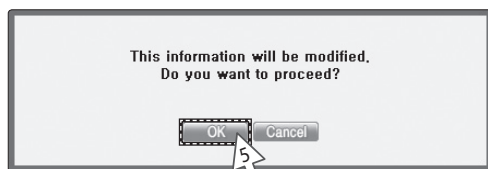


-
- 5 Click [OK] when "This information will be modified. Do you want to proceed?" message appears.
 - 6 "Reading data from DMS2.5. Please wait." message appears and saving is completed. Then, system environment setting screen appears again with all items are disabled.
-

Note


- ◆ *In factory setting, 'Not apply' is checked and item fields(E-mail, ID, PW, SMTP) are blank.*
- ◆ *E-mail forwarding function only deals with the server supporting SSL.*

Contact Control Pattern Selection

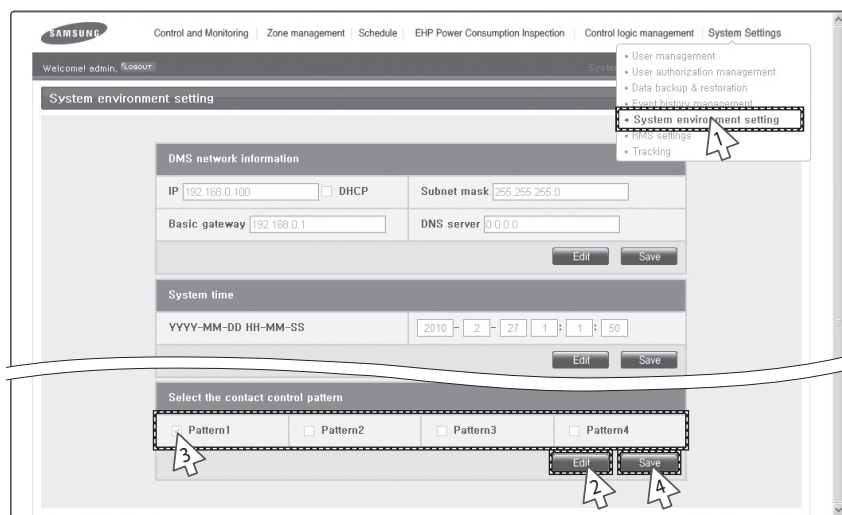

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] from contact point pattern selection window.
- 3 Select the pattern you want to check.
 - ◆ Pattern 1[No external input]:
No operation will be made when inputting contact control signal.
 - ◆ Pattern 2[Level(Emergency stop)]:
Commands that stop all operation of indoor unit and disable remote control when inputting contact control signal. In level emergency stop status, it will not be controlled even if the command is from upper controller.
 - ◆ Pattern 3[Level(Operation/Stop)]:
Level signal input timing.
It changes operation/stop status of all indoor units.
 - ◆ Pattern 4[pulse (Operation/Stop,Disable/Enable)]:
Pulse signal. It changes operation/stop status of all indoor units.
- 4 Click [Save] after setting is completed.

System Settings (Continued)

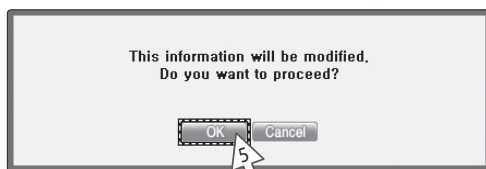

- 5 Click [OK] when "This information will be modified. Do you want to proceed?" message appears.
- 6 "Reading data from DMS2.5. Please wait." message appears and saving is completed. Afterwards, system environment setting screen appears again with all items are disabled.
 - ◆ If at least one of indoor unit is turned on, contact point output port 1 generates contact point signal.
 - ◆ If there is breakdown, contact point output port 2 generates contact point signal.

Note


- ◆ **Pattern 1 is set as factory setting of contact control pattern.**
- ◆ **Contact output**
 - When indoor unit is in operation, DMS2.5 which executed tracking successfully outputs signal through DO Ch1.
 - If there is unsolved breakdown in DMS2.5, signal will be output through DO Ch2. You can check it through check indicator on DMS2.5.



CAUTION

**For extension, DMS2.5 has 10 DI/DO ports. Contact control and output function are assigned to Ch1 and Ch2. Ch3~Ch10 will be assigned to additional functions.
For proper contact control, connect using Ch1 and Ch2.**


Setting Control and Monitoring

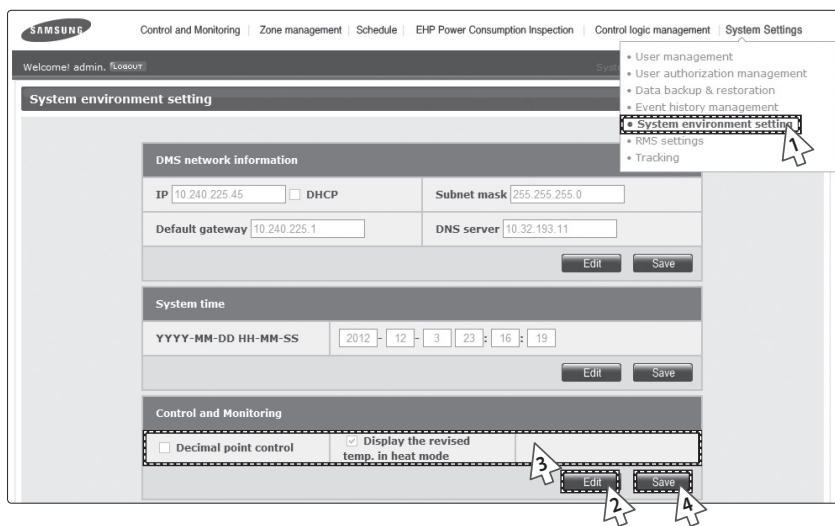

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on Control and Monitoring section.
- 3 Select 'Decimal point control' or 'Display the revised temp. in heat mode'.
 - ◆ Decimal point control: Select this function if you want to control the indoor unit in 0.1°C unit. If this is not selected, temperature will be adjusted in 1°C even if the indoor unit supports decimal point control which allows temperature adjustment in 0.1°C unit.
 - ◆ Display the revised temp. in heat mode: Select this function if you want to display the revised temperature for current temperature in heat mode.
- 4 Click [Save].


System Settings (Continued)

Setting silent control

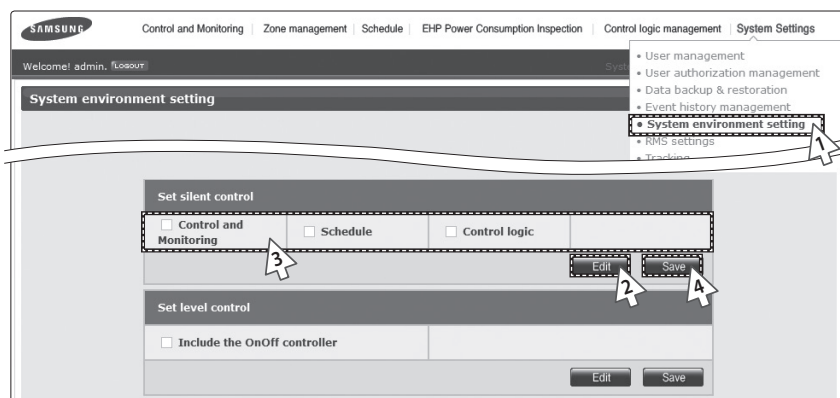

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on Set silent control section.
- 3 Select 'Control and Monitoring' or 'Schedule' or 'Control logic'.
 - ◆ Control and Monitoring: Select this if you want to control silently in 'Control and Monitoring' screen.
 - ◆ Schedule: Select this if you want to perform 'Schedule' silently.
 - ◆ Control logic: Select this if you want to perform 'Control logic' silently.
- 4 Click [Save].


Setting level control

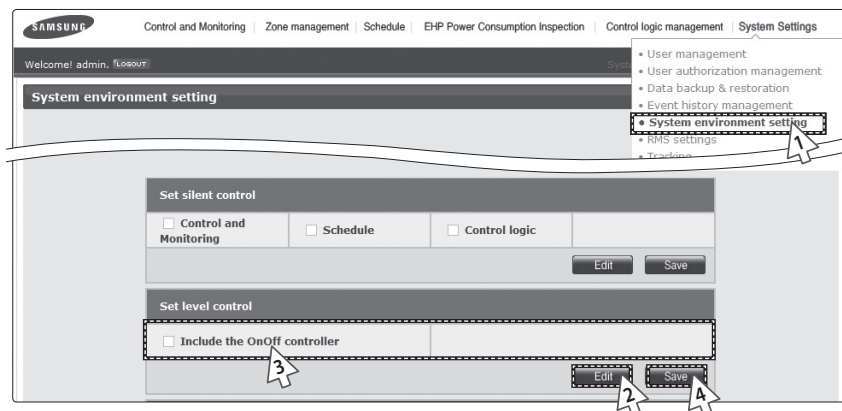

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on Set level control section.
- 3 Select 'Include the OnOff controller'.
 - ◆ Include OnOff controller: Select this if you want to restrict controlling from OnOff controllers when you disable RC from the DMS2.5.
- 4 Click [Save].

System Settings (Continued)

Setting temperature scale

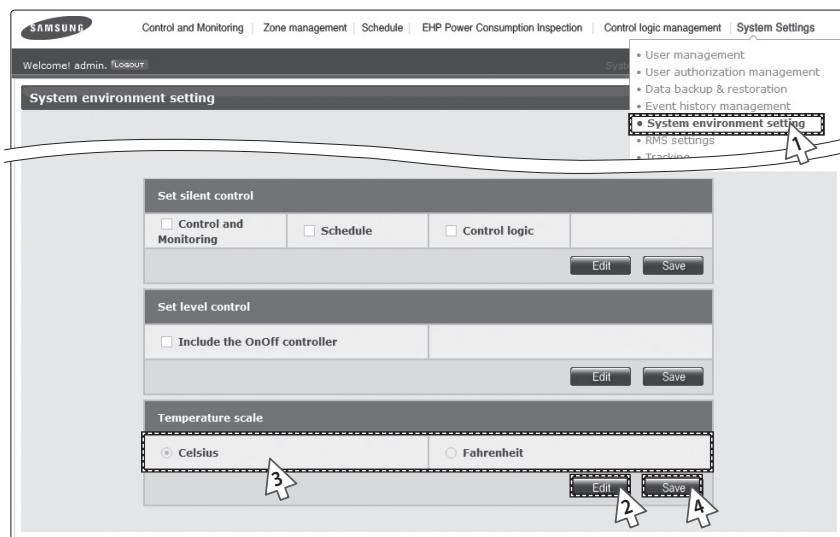

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on the temperature scale.
- 3 Select the temperature display of DMS2.5 as Celsius or Fahrenheit.
- 4 Click [Save].

Setting Enable public IP

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on Enable public IP section.
- 3 Select whether to use Public IP or not.
 - ◆ When you select 'Enable', you must register the Public IP of PCs or network devices to access DMS2.5 from the PCs or network devices.
- 4 Click [Save].

Setting Public IP of upper controller

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on Public IP of upper controller section.
- 3 Register the Public IP of PCs or network devices to access DMS2.5 from the PCs or network devices.
 - ◆ Select 'Apply' after entering Public IP to access DMS2.5.
- 4 Click [Save].

Setting the time on the wired remote controller

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on [Time settings on the wired remote control] in [Time sync with the wired remote control] menu.
 - ◆ Set the time to use.
- 3 Click [Edit] on [Automatic time sync on the wired remote control] in [Time sync with the wired remote control] menu and click [Apply].
 - ◆ Be sure to click [Apply] to start auto sync.
- 4 Click [Save].

Note ◆ *Time setting is available only in some wired remote controllers that can support time setting function through the DMS.*
◆ *When the [Automatic time sync on the wired remote control] is applied, the time for the wired remote controller is automatically set based on the DMS time once a day.*

System Settings (Continued)

■ ■ Activating [Daylight Saving Time Setting]

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on [Daylight Saving Time Setting].
- 3 Set the Start date and End date after selecting Apply.
- 4 Click [Save].

■ ■ Activating Extra Functions

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
 - ◆ Turn [Alert when PC time differs from DMS time] on or off to set whether to display a pop-up window when you log-in to DMS2.5 and your PC time differs from the DMS2.5 time.
 - ◆ Click [Download certificate] to download a DMS2.5 certificate that you want to register to the web browser.
 - ◆ Click [Add b.IoT Server certificate] to register a b.IoT server certificate for DMS2.5 communication with the b.IoT server.

Setting the wired remote controller

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on the temperature type, select Celsius or Fahrenheit, and then click [Save].
- 3 Click [Edit] on the compensation temperature, enter a value between -9.9 and 9.9 degrees Celsius, and click [Save].

Note ♦ *The function for setting up the wired remote controller using DMS2.5 is only available with the product versions that support this function and are equipped with a wired remote controller that supports this function.*

Setting the calculation interval of EHP power consumption

- 1 Click [System Settings] → [System environment setting] when DMS2.5 web page menu screen appears.
- 2 Click [Edit], select Once a day or Once an hour, and then click [Save].
 - ♦ When you save as Excel in [EHP Power Consumption Inspection] → [Check inspection result], the results are displayed in the Excel file by 1 day or 1 hour according to your selection.

System Settings (Continued)

Cloud settings

Cloud settings are available only in Korea.

The pop-up window for software update appears when you select “Cloud settings” and have an update available to the DMS2.5 software. Click Agree and then enter the admin password to update the software.

Note

◆ **DMS2.5 automatically reboots once the software update has been completed. If there is a task in progress, such as tracking, complete the task before starting software update.**

◆ **Software update is available only when DMS2.5 is connected to an external network.**

Setting Auto Change Over

Auto Change Over setting

☒ Apply ☐ Not apply

Minimum operation mode time

☐ 10 (min.) ☐ 20 (min.) ☒ 30 (min.)

Operating method of Auto Change Over

☐ Weighted average

☐ Representative temperature

☐ Cooling/heating load

☒ Selected indoor unit load

Outdoor unit address	Outdoor unit name	Group	Exception
11.04.00	11.04.00	1	<input type="checkbox"/>
11.07.00	11.07.00	2	<input type="checkbox"/>
11.09.00	11.09.00	3	<input type="checkbox"/>

Edit **Save**

1 Click [System Settings] → [Auto Change Over setting] when DMS2.5 web page menu screen appears.


◆ Using the 'Auto Change Over' function, DMS2.5 can control indoor units to start auto cooling or auto heating.

◆ When using auto cooling or heating, DMS2.5 operates the Fan → Cool or Heat → Auto modes in order. For ERV PLUS, it operates the Fan → Cool or Heat modes in order.

2 Click [Edit] to configure the Auto Chang Over settings.

(1) [Apply] / [Not apply]

- ◆ When using the Auto Change Over function, 'A' appears in the [Control and Monitoring] screen on the indoor unit, and the indoor unit cannot control its operation mode separately.

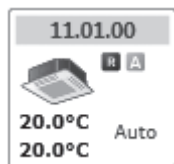

(2) Minimum operation mode time

- ◆ You can select a period of time among 10, 20, and 30 minutes for which the operation mode is maintained after the indoor units are controlled in automatic cooling or automatic heating. However, if you turn the indoor units on or off or change the set temperatures, the internal logic can maintain the operation mode for a time less than the selected time.

(3) [Weighted average]: Configure the settings so that indoor units automatically switch between cooling and heating modes according to the set temperature, current temperature, and cooling/heating capacity of the indoor units that are turned on. Let's assume, for example, indoor units of the same capacity have been installed. If a larger number of the units have desired temperature lower than the current temperature, all of the units automatically switch to cooling mode. If a larger number of the units have the set temperature higher than the current number, all of the units automatically switch to heating mode.

(4) [Representative temperature]: Sets to run auto cooling or heating operation, according to the average temperature of the turned-on indoor units.

- ◆ DMS 2.5 sets the indoor units to the auto cooling mode and keeps the temperature according to 'B (Heat Desired Temp)' when the average temperature of the units currently running is higher than 'C (Heat to Cool)'. DMS 2.5 also sets the indoor units to the auto heating mode and keeps the temperature according to 'A (Cool Desired Temp)' when the average temperature of the units currently running is lower than 'D (Cool to Heat)'.

System Settings (Continued)

(5) Cooling/Heating load

- ◆ All indoor units that are turned on and belong to an outdoor unit group are controlled in automatic cooling or automatic heating according to the selected heating/cooling load.
- ◆ When the heating load is selected, the difference between the set temperature and the current temperature is calculated for all indoor units that are turned on and belong to the same outdoor unit group. If this difference is larger than the set difference and the number of indoor units with this value is equal to or greater than the set percentage, all indoor units belonging to the same outdoor unit group is controlled in automatic heating. If this difference is larger than the set difference and the number of indoor units with this value is less than the set percentage, all indoor units belonging to the same outdoor unit group are controlled in automatic cooling.
- ◆ When the cooling load is selected, the difference between the set temperature and the current temperature is calculated for all indoor units that are turned on and belong to the same outdoor unit group. If this difference is larger than the set difference and the number of indoor units with this value is equal to or greater than the set percentage, all indoor units belonging to the same outdoor unit group are controlled in automatic cooling. If this difference is larger than the set difference and the number of indoor units with this value is less than the set percentage, all indoor units belonging to the same outdoor unit group is controlled in automatic heating.

(6) Selected indoor unit load

- ◆ If all indoor units that you selected are turned on and belong to an outdoor unit group, all indoor units belonging to the same outdoor unit group are controlled in automatic cooling or automatic heating according to the selected heating/cooling load for indoor units.
 - ◆ The difference between the set temperature and the current temperature is calculated for all indoor units that you selected and belong to the same outdoor unit group. If this difference is larger than the set difference for all the selected indoor units and the heating load is selected, all indoor units belonging to the same outdoor unit group are controlled in automatic heating.
 - ◆ The difference between the set temperature and the current temperature is calculated for all indoor units that you selected and belong to the same outdoor unit group. If this difference is larger than the set difference for all the selected indoor units and the cooling load is selected, all indoor units belonging to the same outdoor unit group are controlled in automatic cooling.
-

(7) Outdoor unit setting

- ◆ Only Heat Pump outdoor units that support new communication mode appear in the list. However, not listed in the list are the Heat Pump outdoor units that are connected to the Fresh Duct, Hydro Unit, Hydro Unit HT, EHS, DVM CHILLER, or cooling only indoor unit, as these units are not applicable for Auto Change Over.
- ◆ The following outdoor units are not displayed in the list: the outdoor units designed solely for cooling and the outdoor units connected to the heating/cooling change-over switch if the switch is set to the cooling only mode or to the heating only mode.
- ◆ The conventional indoor and outdoor units connected to ERV interface module, FCU interface module, Heat Recovery, and compatible interface module—those units do not appear in the list, as these units are not applicable for Auto Change Over.
- ◆ Auto Change Over works for each group.
- ◆ All indoor units in a single group become the targets for calculating Auto Change Over operation, and are controlled to equally run auto cooling or auto heating.
- ◆ If you select [Exception], the outdoor unit cannot use the Auto Change Over function despite being grouped, and indoor units connected to the outdoor unit are excluded from the targets for calculating Auto Change Over operation.
- ◆ If the outdoor unit is set to cooling or heating only mode, the Auto Change Over function is not available.

3 Click [Save] after finishing the setup.

Note

- ◆ ***In the Auto mode, the indoor units for which the Dual Set Point function is enabled use the automatic heating set temperature or automatic cooling set temperature instead of the single set temperature.***
- ◆ ***When the DMS2.5 is installed in the S-Net3, Touch Centralized controller, Wi-Fi Kit product, or wired/wireless remote controllers simultaneously, the indoor unit with the Auto Change Over function cannot control operation modes through S-Net3, Touch Centralized controller, Wi-Fi Kit product, or the wired/wireless remote controller.***

Setting Dual Set Point

- 1 Click [System Settings] → [Dual Set Point setting] when DMS2.5 web page menu screen appears.
 - The Dual Set Point function allows you to set the automatic cooling and heating set temperatures only when the indoor unit is in the Auto mode.
 - If you want to use the Dual Set Point function for an indoor unit, the wired remote controller connected to the indoor unit must support the Dual Set Point function and the Dual Set Point function must be also enabled (the Auto Change Over function is enabled for the wired remote controller).
 - 2 [Click [Edit]], and then select whether to enable the Dual Set Point function for each indoor unit.
 - Only the indoor units that support the Dual Set Point function appear on the screen.
 - 3 Click [Save].
-

System Settings (Continued)

■ Downloading user manual

1. Click [System Settings] → [User manual] when DMS2.5 web page menu screen appears.
 - ◆ You can download the user manual.

■ System Setting Initialization

192.168.0.100
06:12:13(AM)

1. Press [Menu], [▲], [▼] or [Set] on LCD if IP and current time are displayed on LCD screen.
 - ◆ Main menu screen appears.
 - ◆ Initialization is not possible in the screen which time information is displayed.

MAIN MENU
1.IP Config

2. Press [Menu] → [▼] → [▲] → [▼] → [Menu] buttons in order in main menu screen.
 - ◆ Caution will be displayed on LCD Display.

Are you sure?
YES:Set, NO:Menu

3. Initialize DMS2.5 by clicking [Set] when caution phrase appears.
 - ◆ If you press [Menu] button, it will turn back to main menu without initialization.



CAUTION

When initializing system setting, all saved data in DMS2.5 will be deleted.

After initialization, saved data and IP address will be same as factory setting.

Tracking

◆ What is tracking?

Tracking is an operation that finds devices which are connected to DMS2.5.

Through tracking operation, devices which are connected to DMS2.5 can recognize if they are connecting to DMS2.5.

To supervise and control system air conditioner using DMS2.5, tracking should be done first.

◆ Things you can do through tracking

Checking the number of devices installed, setting communication mode by channel, DVM tracking, Renaming is possible through tracking.

◆ Execute tracking

- (1) Connect DVM device
 - Connect the device to COM1~COM5.
- (2) Set communication mode by channel.
 - Set proper communication mode which fits to the devices connected in step (1).
 - Be careful that if communication mode is not properly set, the device will not be found through tracking.
- (3) Execute tracking - Execute DVM tracking.
 - DVM tracking is an operation that finds system air conditioner devices such as indoor/outdoor unit, watt-hour meter.
- (4) Name setting for each device.
 - Name setting for each device is a function that sets the name of connected devices. Set the name which shows installation location of the device.

◆ Communication mode setting by channel

Roles


- It records what devices are connected to COM1~COM5 of DMS2.5.
- Through tracking, DMS2.5 searches proper devices which fits to user's setting.
- Select proper communication mode which fits to connected device.

What is communication mode?

- Outdoor unit, OnOff controller, SIM, PIM can be connected to DMS2.5.
- Following is the list of devices that can be communicated through each communication mode.
 - NEW mode: OnOff controller, outdoor units, and SIM/PIM which support new communication mode.
 - IM mode: IM mode cannot be set, but it can be used for function change or new function with an updated version.


System Settings (Continued)

Communication Mode Setting by Channel

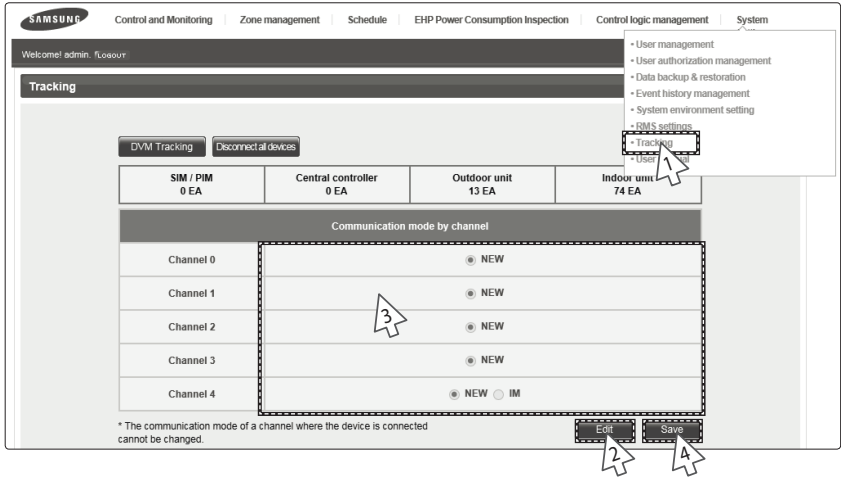

- 1 Click [System Settings] → [Tracking] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] from communication mode by channel setting.
 - ◆ [Edit] will change to [Cancel].
 - ◆ Selection buttons are enabled. However, the channels which have searched device maintains its selection button disabled.
- 3 When each channel is enabled, check the communication mode you want to set by channel.
 - ◆ You cannot change the communication mode of channel which has currently connected device.
 - ◆ When 'NEW' is set as communication mode, setting will allow tracking, monitoring and controlling devices that support NEW communication mode.
 - ◆ IM mode cannot be set, but it can be used for function change or new function with an updated version.
- 4 Click [Save] after setting is completed.
 - ◆ "Reading data from DMS2.5. Please wait." message appears and saving is completed.
 - Then, tracking page with disabled items will be displayed again.
 - ◆ If you click [Cancel], check boxes will be disabled and [Cancel] will change to [Edit].

DVM Tracking

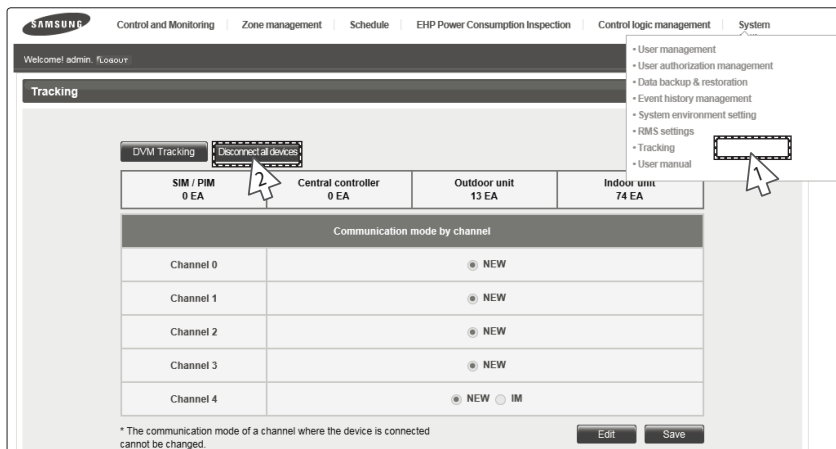

1 Click [System Settings] → [Tracking] when DMS2.5 web page menu screen appears.

2 Click [DVM Tracking].


- ◆ When the addresses of the devices are collected, you can perform re-tracking without collecting detailed information.




CAUTION

Some functions available on DMS2.5 web page may not be functional at BACnet Gateway and LonWorks Gateway. For detailed function, refer to the installation manual or contact Samsung Electronics.

System Settings (Continued)

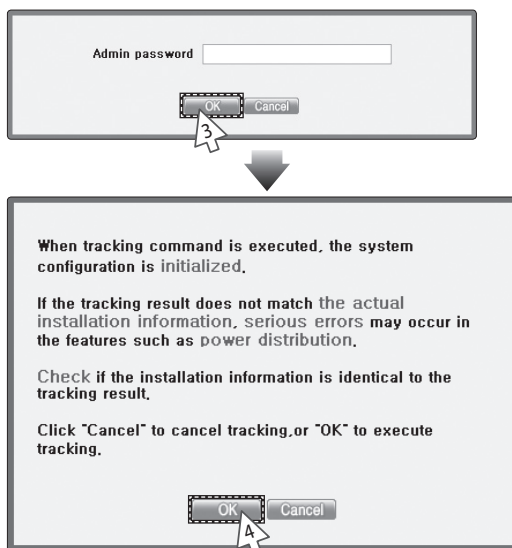

-
- 3 Enter administrator's password and then click [OK].
-
- 4 Tracking information window pops up. Check and click [OK] to continue.
 - ◆ Execute tracking depending on the communication mode set by communication mode setting by channel.
 - (1) When 'NEW' is set as communication mode, DMS2.5 executes tracking on devices that supports NEW communication.
-
- 5 "Tracking is in progress. Please wait." message appears.
 - ◆ Tracking takes from tens of seconds to several ten minutes.
However, it may vary depending on the number of installed controllers.
-

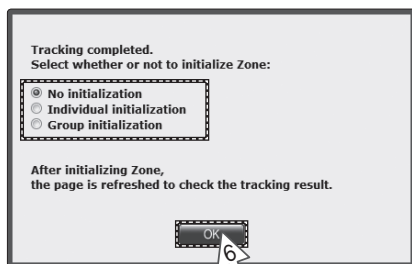

- 6 Tracking completed message will appear. Select Zone initialization mode you want and click [OK].
- ◆ Not initialize: No zone information initialization will be made.
 - ◆ Initialize individually: Initialize zone information as individual mode.
 - ◆ Initialize by group: Initialize zone information as group mode.

Note

- ◆ If tracking is executed successfully while NEW is set as communication mode for each channel, virtual OnOff controller will be assigned to each channel.
- ◆ If there is no searched outdoor unit, OnOff controller, SIM/PIM, it is regarded as DVM tracking failure.
- ◆ If there are devices which have same address, first searched device will be registered only.
- ◆ The number of OnOff controller doesn't contain the number of virtual OnOff controller that is used in NEW communication.
- ◆ Group initialization will not be applied to Hydro Unit, Hydro Unit HT and EHS.



CAUTION

- ◆ If you execute tracking, system setting will be initialized.
- ◆ If tracking result does not match with actual installation information, there can be critical error in additional functions such as power distribution.
- ◆ Make sure that tracking information matches to actual installation information after tracking.

System Settings (Continued)


Disconnect All Devices

◆ Function


Initialize searched device status in DMS2.5. Using this function, monitoring and controlling of all the connected devices to DMS2.5 will be stopped.

◆ When is it needed?

- Connect searched device to the other channel and execute tracking. If the other device is searched in the channel you want to use, use 'Disconnect all devices' function.
- If you use this function, DMS2.5 device connection status will be initialized.

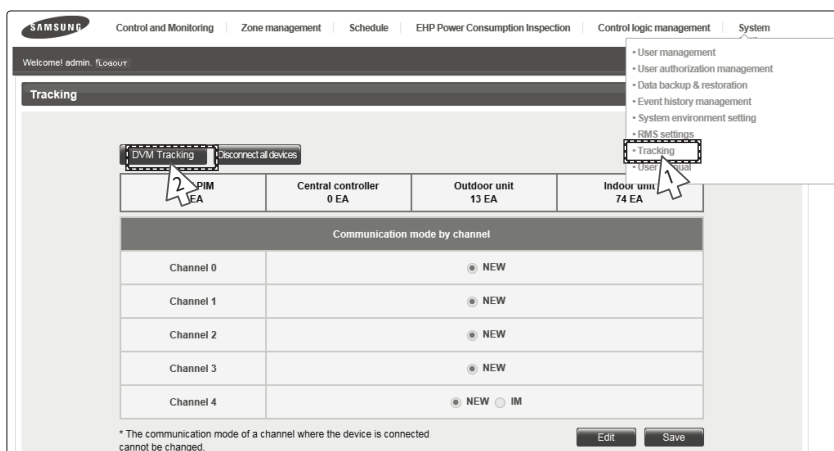

- 1 Click [System Settings] → [Tracking] when DMS2.5 web page menu screen appears.
- 2 Click [Disconnect all devices].

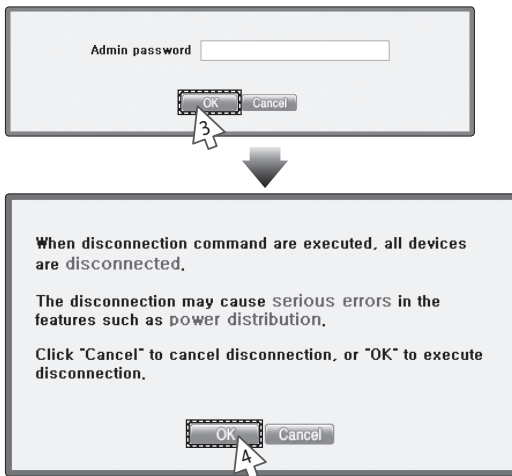

-
- 3** Enter administrator's password and then click [OK].
-
- 4** Disconnect all devices information window pops up. Check it and click [OK] to continue.
-
- 5** "Reading data from DMS2.5. Please wait." message appears. After completing disconnect all devices operation, page will be refreshed.
-

Note

- ◆ *After executing disconnect all devices function, device search status of DMS2.5 will be initialized.*
- ◆ *You should execute tracking again after using disconnect all devices function.*

System Settings (Continued)

Renaming the Device

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | **System**

Welcome! admin. flowour

Tracking

DVM Tracking | Disconnect all devices

SIM / PIM: 0 EA | Central controller: 0 EA | Outdoor unit: 1 EA | Indoor unit: 4 EA

Communication mode by channel

Channel	Mode
Channel 0	<input checked="" type="radio"/> NEW
Channel 1	<input checked="" type="radio"/> NEW
Channel 2	<input checked="" type="radio"/> NEW
Channel 3	<input checked="" type="radio"/> NEW
Channel 4	<input checked="" type="radio"/> NEW <input type="radio"/> IM

* The communication mode of a channel where the device is connected cannot be changed.

Channel	Device	Address	Device name	Name
CH4	Central controller	15		기상중심채기-15
	Outdoor unit ()	15.00.00		15.00.00
	Indoor unit (004.032.000.000)	15.00.00 (255)		15.00.00
	Indoor unit (004.032.000.001)	15.00.01 (255)		15.00.01
	Indoor unit (004.032.000.002)	15.00.02 (255)		15.00.02
	Indoor unit (004.032.000.003)	15.00.03 (255)		15.00.03
DMS	DMS DIDO <input type="button" value="Setting"/>	56		DIDO

- 1 Click [System Settings] → [Tracking] when DMS2.5 web page menu screen appears.
- 2 Click [Edit] on the bottom of tracking device list.
 - ◆ [Edit] will change to [Cancel].
 - ◆ When the type of the device is displayed, New communication address will be shown with it.

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System

Welcome! admin. floor:01

Tracking

DVM Tracking | Disconnect all devices

SIM / PIM
0 EA

Central controller
0 EA

Outdoor unit
1 EA

Indoor unit
4 EA

Communication mode by channel

Channel	Mode
Channel 0	<input checked="" type="radio"/> NEW
Channel 1	<input checked="" type="radio"/> NEW
Channel 2	<input checked="" type="radio"/> NEW
Channel 3	<input checked="" type="radio"/> NEW
Channel 4	<input checked="" type="radio"/> NEW <input type="radio"/> IM

* The communication mode of a channel where the device is connected cannot be changed.

Edit Save

Channel	Device	Address	<input type="checkbox"/> Device name	Name
CH4	Central controller	15	<input type="checkbox"/>	가상중앙제어기-15
	Outdoor unit ()	15.00.00	<input type="checkbox"/>	15.00.00
	Indoor unit (004.032.000.000)	15.00.00 (255)	<input type="checkbox"/>	15.00.00
	Indoor unit (004.032.000.001)	15.00.01 (255)	<input type="checkbox"/>	15.00.01
	Indoor unit (004.032.000.002)	15.00.02 (255)	<input type="checkbox"/>	15.00.02
	Indoor unit (004.032.000.003)	15.00.03 (255)	<input type="checkbox"/>	15.00.03
DMS	DMS DIDO	56	<input type="checkbox"/>	DIDO

Edit Save

- Enter the device name, which is saved in the PBA of indoor unit and outdoor unit, in the Device name field or enter the name, which is saved in the DMS2.5, in the Name field.


- ◆ You cannot use special symbols as Device name and Name.
- ◆ Select the check box beside 'Device name' if you want to use the name of the device (that supports NEW communication) which is saved in the PBA.

- Click [Save] after setting is completed.

- ◆ "Reading data from DMS. Please wait." message appears and saving is completed. Then, tracking page with disabled items will be displayed again.
- ◆ If you click [Cancel], input fields are disabled and [Cancel] will change to [Edit].

System Settings (Continued)

DMS DI•DO Port Setting

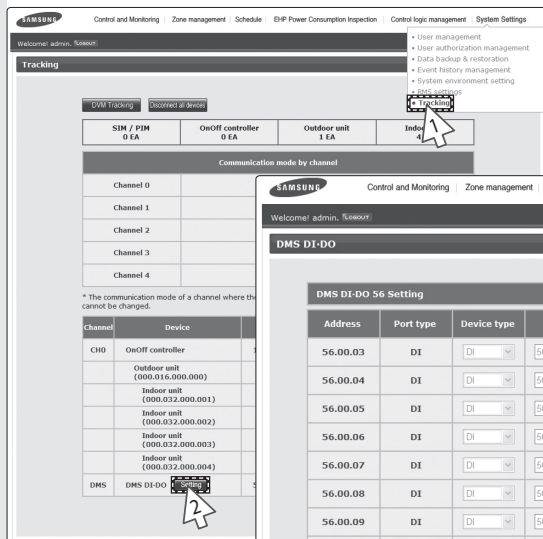

Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin, f56000

Tracking

DWM Tracking | Connected @ direct

SIM / PIM
DIA

OnOff controller
DIA

Outdoor unit
DIA


Indoor unit
DIA

Communication mode by channel

Channel	Device
Channel 0	
Channel 1	
Channel 2	
Channel 3	
Channel 4	

* The communication mode of a channel where the cannot be changed.

Channel	Device
CH0	OnOff controller
	Outdoor unit (000.015.000.000)
	Indoor unit (000.032.000.001)
	Indoor unit (000.032.000.002)
	Indoor unit (000.032.000.003)
	Indoor unit (000.032.000.004)
DMS	DMS DI•DO

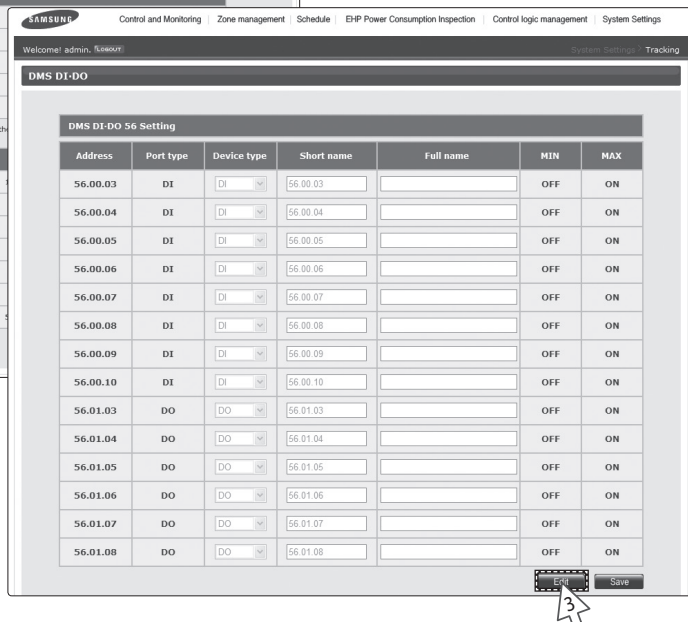

Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin, f56000

System Settings > Tracking

DMS DI•DO

DMS DI•DO 56 Setting

Address	Port type	Device type	Short name	Full name	MIN	MAX
56.00.03	DI	DI	56.00.03		OFF	ON
56.00.04	DI	DI	56.00.04		OFF	ON
56.00.05	DI	DI	56.00.05		OFF	ON
56.00.06	DI	DI	56.00.06		OFF	ON
56.00.07	DI	DI	56.00.07		OFF	ON
56.00.08	DI	DI	56.00.08		OFF	ON
56.00.09	DI	DI	56.00.09		OFF	ON
56.00.10	DI	DI	56.00.10		OFF	ON
56.01.03	DO	DO	56.01.03		OFF	ON
56.01.04	DO	DO	56.01.04		OFF	ON
56.01.05	DO	DO	56.01.05		OFF	ON
56.01.06	DO	DO	56.01.06		OFF	ON
56.01.07	DO	DO	56.01.07		OFF	ON
56.01.08	DO	DO	56.01.08		OFF	ON

Edit Save

- 1 Select [System Settings] and then click [Tracking].
- 2 Click [Setting] which is next to DMS DI•DO of device list.
- 3 Click [Edit] which is on the bottom of DMS DI•DO setting page.
◆ [Edit] will change to [Cancel].

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin, [Logout] > System Settings > Tracking

DMS DI-DO

DMS DI-DO 56 Setting

Address	Port type	Device type	Short name	Full name	MIN	MAX
56.00.03	DI	DI	56.00.03		OFF	ON
56.00.04	DI	DI	56.00.04		OFF	ON
56.00.05	DI	DI	56.00.05		OFF	ON
56.00.06	DI	DI	56.00.06		OFF	ON
56.00.07	DI	DI	56.00.07		OFF	ON
56.00.08	DI	DI	56.00.08		OFF	ON
56.00.09	DI	DI	56.00.09		OFF	ON
56.00.10	DI	DI	56.00.10		OFF	ON
56.01.03	DO	DO	56.01.03		OFF	ON
56.01.04	DO	DO	56.01.04		OFF	ON
56.01.05	DO	DO	56.01.05		OFF	ON
56.01.06	DO	DO	56.01.06		OFF	ON
56.01.07	DO	DO	56.01.07		OFF	ON
56.01.08	DO	DO	56.01.08		OFF	ON

Cancel Save

4 Edit each item when DMS DI•DO selection and input fields are enabled.


- ◆ Device type : DI or DO
- ◆ Short name : Input short name of the device.
- ◆ Full name : Input full name of the device.
- ◆ Minimum value / Maximum value : MIN value is fixed as OFF and MAX value is fixed as ON.

5 Click [Save].

- ◆ After the saving is complete, DMS DI•DO setting page with all deactivated items will appear.
- ◆ If you press [Cancel], web page will refresh and it goes back to the state before the modification.

System Settings (Continued)

PIM Setting

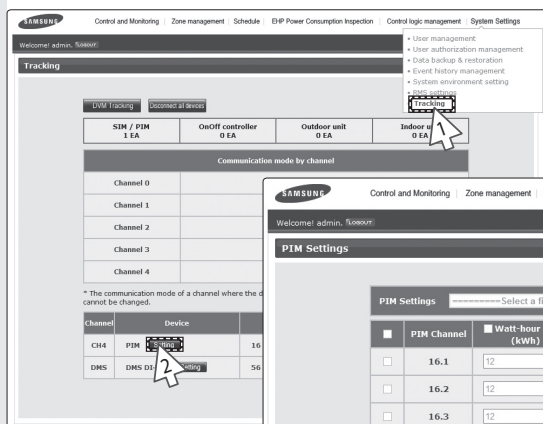

Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | **System Settings**

Welcome! admin, floor001

Tracking


- User management
- User authorization management
- Data backup & restoration
- Event history management
- System environment setting

OTM tracking | Connected all device

STM / PIM 1 EA	OnOff controller 0 EA	Outdoor unit 0 EA	Indoor unit 0 EA
Communication mode by channel			
Channel 0			
Channel 1			
Channel 2			
Channel 3			
Channel 4			

* The communication mode of a channel where the device cannot be changed.

Channel	PIM	Device
CH4	PIM	16
DMS	DMS D1	56

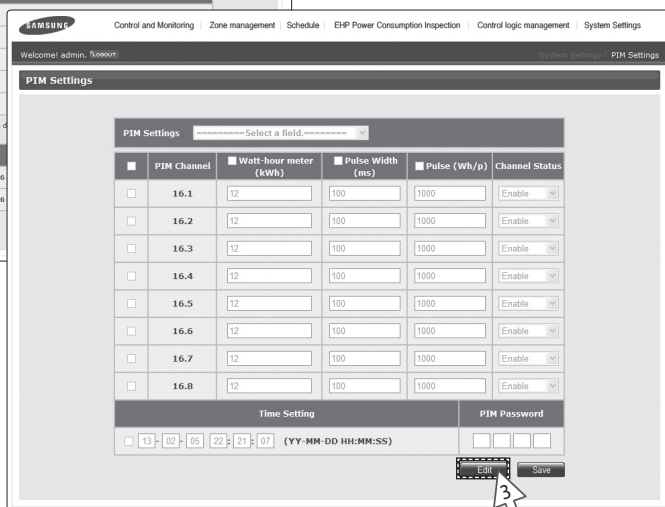

Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | **System Settings** | PIM Settings

Welcome! admin, floor001

PIM Settings

Select a field, [view more](#)

	PIM Channel	Watt-hour meter (kWh)	Pulse Width (ms)	Pulse (Wh/p)	Channel Status
<input type="checkbox"/>	16.1	12	100	1000	Enable
<input type="checkbox"/>	16.2	12	100	1000	Enable
<input type="checkbox"/>	16.3	12	100	1000	Enable
<input type="checkbox"/>	16.4	12	100	1000	Enable
<input type="checkbox"/>	16.5	12	100	1000	Enable
<input type="checkbox"/>	16.6	12	100	1000	Enable
<input type="checkbox"/>	16.7	12	100	1000	Enable
<input type="checkbox"/>	16.8	12	100	1000	Enable

Time Setting: 13:02:05 22:21:07 (YY-MM-DD HH:MM:SS)

PIM Password:

Edit **Save**

- 1 Click [System Settings] → [Tracking] when DMS2.5 web page menu screen appears.
- 2 Click [Setting] which is next to PIM of device list.
◆ Enter administrator's password and then click [OK].
- 3 Click [Edit] which is on the bottom of PIM setting page.
◆ [Edit] will change to [Cancel].

SAMSUNG Control and Monitoring | Zone management | Schedule | EHP Power Consumption Inspection | Control logic management | System Settings

Welcome! admin. Logout

System Settings - PIM Settings

PIM Settings

<input type="checkbox"/>	PIM Ch	Meter Value	Meter Type/Pulse rate	Channel Status	Time Setting	PIM Password
<input type="checkbox"/>	16.1		Electricity	Enable		
<input type="checkbox"/>	16.2	538.0	Electricity	Enable		
<input type="checkbox"/>	16.3	538.0	Electricity	Enable		
<input type="checkbox"/>	16.4	538.0	Electricity	Enable		
<input type="checkbox"/>	16.5	538.0	Electricity	Enable		
<input type="checkbox"/>	16.6	538.0	Electricity	Enable		
<input type="checkbox"/>	16.7	538.0	Electricity	Enable		
<input type="checkbox"/>	16.8	538.0	Electricity	Enable		

Time Setting: (yyyy-MM-dd HH:mm:ss)

Cancel Save

4 Select a field you want to change.

- ◆ Meter Value (0~9999999.9, to one decimal place)
- ◆ Meter Type / Pulse rate
 - Electricity (1~10000)
 - Water (1~10000)
 - Gas (0.001~10, to three decimal places)
- ◆ Channel Status
- ◆ Time Setting
- ◆ PIM Password (Number)



You should tick the check box of the channel you want to change.

5 Click the check boxes to select the channel applying for the setting.

6 Click [Save].

- ◆ If you press [Cancel], web page will refresh and it goes back to the state before the modification.

Check Before using Panel

Using LCD and LCD Button

LCD is mounted on DMS2.5 for installation and convenience of the user.

- ◆ You can search menu and change setting using [▲] and [▼] buttons.
- ◆ If you press and hold [▲] or [▼] button in some menu such as IP setting, the value changes faster.
- ◆ To go to upper menu or cancel, select [MENU] button.
- ◆ To go to sub menu, select or save, press [SET] button.
- ◆ Operates some menus with care because they are related to the proper operation of DMS2.5 system.
- ◆ If you do not use DMS2.5 buttons for long periods of time, set button lock to avoid malfunction.
- ◆ Manufacturer is not responsible for the damage caused by wrong operation.

Checking Main Menu

192.168.0.100
06:12:13(AM)

1. If IP and current time are displayed on LCD display, press [Menu], [▲], [▼] or [Set] button.
 - ◆ Main menu screen will be displayed.

2. Check menu options by pressing [▲], [▼] buttons.

1	IP Config	Network information setting
2	In/Outdoor	Checking Indoor/Outdoor unit information
3	DMS2.5 Version	Checking DMS2.5 version
4	DMS2.5 Time	Setting DMS2.5 time
5	Data Backup	Setting data backup
6	Peak Level	Checking peak level
7	Error Status	Checking error information
8	Password Reset	Password reset
9	Button Lock	Button lock function
10	Safety Halt	Safe end function

Setting Network Information

Network Information Setting(IP Config)

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
1.IP Config

2. Select 1.IP Config by pressing [▲] and [▼] buttons, and press [Set] button.
 - ◆ Network setting screen will be displayed.

IP ADDRESS
192.168.0.100

3. Select the item you want by pressing [▲] and [▼] buttons.
 - ◆ You can select from IP address, subnet mask address, gateway address, and DNS server.
 - ◆ When an IPv6 address is assigned automatically, it is displayed on the display, but you cannot change it.

SET YOUR IP
192.168.0.79

4. Edit selected network information by pressing [Set] button.
 - ◆ Number to edit will blink.
 - ◆ You can change value by pressing [▲] and [▼] buttons.
To move to next number, press [Set] button.
 - ◆ If you press and hold [▲] or [▼] button, the value changes faster.
 - ◆ After setting all the 4-digit number, press [Set] button to save the new settings.
 - ◆ To cancel the setting, press [Menu] button.

Setting Network Information (Continued)

Auto Address Setting (DHCP CONFIG)

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
1.IP Config

2. Select 1.IP Config by pressing [▲] and [▼] buttons, and press [Set] button.
 - ◆ Network setting screen will be displayed.

DHCP CONFIG
Current disabled

3. Select auto address setting function(DHCP CONFIG) by pressing [▼] button.
 - ◆ Auto address setting function status will be displayed.
 - Current disabled: Auto address setting function disabled
 - Current enabled: Auto address setting function enabled

Enable DHCP?
YES:Set, NO:Menu

4. Enable/Disable auto address setting function by pressing [Set] button.
 - ◆ If auto address setting function enabled
 - You can change it to disabled status by pressing [Set] button.
 - ◆ If auto address setting function disabled
 - You can change it to enabled status by pressing [Set] button.
 - ◆ To maintain current status, press [Menu] button.
 - ◆ DHCP function is not available when you use BACnet Gateway function.

Checking Indoor/Outdoor Unit Information

Checking Indoor/Outdoor Unit Information

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
2.In/Outdoor

2. Select 2.In/Outdoor by pressing [▲] and [▼] buttons.

DEVICE INFO
Indoor:64

3. Press [Set] button.

- ◆ The number of indoor units connected to DMS2.5 will be displayed.

DEVICE INFO
Outdoor:6

4. Check outdoor unit information by pressing [▼] button.

- ◆ The number of outdoor units connected to DMS2.5 will be displayed.
- ◆ To check indoor unit information again, press [▲] button.
- ◆ You can go back to main menu by pressing [Menu] or [Set] button.

Checking DMS2.5 Version

■ Checking DMS2.5 Version

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
3.Version

2. Select 3. Version by pressing [▲] and [▼] buttons.

Version
2.5

3. Press [Set] button.

- ◆ Current version of DMS2.5(DMS2.5 Version) will be displayed.
- ◆ You can go back to main menu by pressing [Menu] or [Set] button.

Checking DMS2.5 version (Continued)

■ DMS2.5 Time Setting – Checking and Setting Date

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
4.Time

2. Select 4. Time by pressing [▲] and [▼] buttons.
 - ◆ Current set date of DMS2.5 will be displayed.

CURRENT DATE
2017/04/09

3. When 'CURRENT DATE' appears, set current data by pressing [Set] button.
 - ◆ Number to edit blinks.
 - ◆ You can change value by pressing [▲] and [▼] buttons. To move to the next number, press [Set] button.
 - ◆ Press and hold [▲], [▼] buttons to change the number continuously.
 - ◆ Set year, month and day in order, and then press [Set] button to save.
 - ◆ To cancel the setting, press [Menu] button.

Checking DMS2.5 version (Continued)

■ DMS2.5 Time Setting – Checking and Setting Time

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
4.Time

2. Select 4. Time by pressing [▲] and [▼] buttons.

◆ Current set time of DMS2.5 will be displayed.

CURRENT TIME
16:46:37(PM)

3. Select 'CURRENT TIME' by pressing [▼] button. Then set time by pressing [Set] button.

- ◆ Current set time of DMS2.5 will be displayed.
- ◆ Number to edit blinks.
- ◆ You can change value by pressing [▲] and [▼] buttons. To move to the next number, press [Set] button.
- ◆ Press and hold [▲], [▼] buttons to change the number continuously.
- ◆ Set hour, minute and second in order, then press [Set] button to save.
- ◆ To cancel the setting, press [Menu] button.

Data Backup Setting

Data Backup

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
5.Data Backup

2. Select 5. Data Backup by pressing [▲] and [▼] buttons.
 - ◆ BACKUP MENU will appear.

BACKUP MENU
data backup

3. Check if data backup is selected. Then press [Set] button.
 - ◆ You can start backup by pressing [Set] button again.
 - ◆ If data backup is completed successfully, screen below will be displayed.

Backup Completed

- ◆ To cancel backup, press [Menu] button.

Are you sure?
YES:Set, NO:Menu



CAUTION

- ◆ **Before executing data backup, check if SD card is inserted.**
- ◆ **Unlock forbidding writing tab of SD card.**

Data Backup Setting (Continued)

Data Restore

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
5.Data Backup

2. Select 5.Data Backup by pressing [▲] and [▼] buttons, and then press [Set] button.
◆ BACKUP MENU will appear.

BACKUP MENU
data restore

3. Check if data restore is selected by pressing [▲] button. Then select a file you want to restore by pressing [▲] and [▼] buttons.
◆ Before executing data restore, check if SD card is inserted.

dmsdata201703161
15432.dms

4. Start data restore by pressing [Set] button.
◆ To cancel restoration, press [Menu] button.



CAUTION

- ◆ **When controlling DMS2.5 using panel, data restore is only possible in SD card. You can execute PC restoration through web browser.**
- ◆ **Unlock forbidding writing tab of SD card.**

Checking Error Information

Checking Error Information

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
7.Error Status

2. Select 7. Error Status by pressing [▲] and [▼] buttons, and then press [Set] button.
 - ◆ Unsolved error info will be displayed.

Error : 1/1
CAU-01 611

3. You can check the other error information by pressing [▲] and [▼] buttons.
 - ◆ You can check the next error information by pressing [▼]. To check the previous error, press [▲] button.

Reset Password

Reset Password

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
8.Password Reset

2. Select 8.Password Reset by pressing [▲] and [▼] buttons, and then press [Set] button.

RESET PASSWORD
WAITING.....

3. When "RESET PASSWORD WAITING....." message appears, press [Menu] and [Set] buttons at the same time.
 - ◆ Button lock function will be released and confirm message for password initialization will appear.
 - ◆ If there is no button input for around 3 seconds, password reset will be failed and it will return to main menu.

Are you sure?
YES:Set, NO:Menu

4. Reset password by pressing [Set] button.
 - ◆ Password will be reset as factory setting. (ac0530)
 - ◆ To cancel reset password, press [Menu] button.

Note ◆ If you reset the password while you are accessed to the DMS2.5 web page, you must close the browser and then re-login in order to use resetted password.

Button Lock

■ Button Lock

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
9.Button Lock

2. Select 9.Button Lock by pressing [▲] and [▼] buttons.

Are you sure?
YES:Set, NO:Menu

3. Press [Set] button.
 - ◆ Confirm message will appear.

BUTTON LOCKED
07:30:21(AM)

4. Press [Set] button.
 - ◆ LCD operating button will be locked.
 - ◆ To cancel button lock, press [Menu] button.
5. To release button lock function, press [Menu] and [Set] button at the same time for 5 seconds.

Safety Halt

192.168.0.100
06:12:13(AM)

1. Check main menus by pressing [Menu], [▲], [▼] or [Set] button.

MAIN MENU
10.Safety Halt

2. Select 10.Safety Halt by pressing [▲] and [▼] buttons.

Are you sure?
YES:Set, NO:Menu

3. Press [Set] button.
 - ◆ Confirm message will appear.

Now sleeping..
See you again

4. Press [Set] button.
 - ◆ All functions of DMS2.5 will stop and 'Now Sleeping..' phrase will appear.

Note

- ◆ *Safety halt function is an operation that saves data of DMS2.5 and then stops service safely. Use this function when relocation and system restart are needed.*
- ◆ *This function will not transfer DMS2.5 power to OFF status. Therefore, when the screen above appears, press [RESET] button on the bottom of DMS2.5 or remove power cable. If you do not press [RESET] button or remove power after 1 minutes passed, DMS2.5 will restart automatically.*


Troubleshooting

Problem	Check	Solution
DMS2.5 is not working.	Is there an electricity failure?	Check if the power is connected to the other interface module besides OnOff controller. Then try again.
	Isn't there a communication error in the other interface module besides OnOff controller?	Check the connection of communication cable. Then try again.
	Are the adapter and power cable connected?	Check the connection of adapter and power cable. Then try again.
Access to web page is not available.	Is Microsoft Silverlight installed?	Check the installation status. Refer to Start → Control Panel → Add/Remove Programs.
	Is Microsoft Silverlight installed properly?	Microsoft Silverlight 2.0 or later version should be installed to access web page.
Access to web page from outside is not available.	Are the network settings set?	Contact network manager first.
	Isn't the fire wall set?	
Power distribution is not executed properly.	Isn't the power of DMS2.5 disconnected?	To use power distribution function properly, the power of DMS2.5 should be connected all the time.

Troubleshooting (Continued)

<u>Problem</u>	<u>Check</u>	<u>Solution</u>
I forgot DMS2.5 IP.	Press [Menu] button from the main menu and "1. IP Config" will appear. Then press [Set] button.	The factory setting of DMS2.5 IP address is 192.168.0.100
Indoor unit turned on or off automatically.	Isn't the schedule control in operation?	Depending on the schedule control, indoor unit can be turned on or off automatically. It is normal operation.
	Is DMS2.5 system time different from current time?	Set the DMS2.5 system time according to current time.
DI(Digital Input) external contact point function is not working.	Is the external circuit constituted?	Check if the external circuit is constituted.
	If the contact control pattern of DMS2.5 set to 1?	Set the pattern which fits to the control pattern you want.
Tracking is not working.	Does it show 'Tracking Fail' and is there no indoor unit?	It means tracking failure. Execute tracking again.

Specifications

Items		Description
Exterior		
Size		240 X 255 X 64.8 mm (Width X Length X Height)
Weight		1.48 Kg
Power	Source	DC ADAPTOR
	INPUT Voltage	100-240V 50/60Hz 1.0A
	OUTPUT Voltage	12V 3A
Inter- face	RS-485	5 Channels
	Ethernet	10/100Mbps 1 Port
	SD CARD	Option (Purchase SD card separately)
	DI	12V Digital Input 10 Channels
	DO	12V Digital Output 8 Channels
	Etc.	Serial Port, Reset Button
Display		16-Character X 2-Line Character LCD
Input method		Menu/Up/Down/Set 4-Tact Button

■ Open Source Announcement

The software included in this product contains open source software. You may obtain the complete corresponding source code for a period of three years after the last shipment of this product by contacting our support team via <http://opensource.samsung.com> (Please use the "Inquiry" menu.)

It is also possible to obtain the complete corresponding source code in a physical medium such as a CD-ROM; a minimal charge will be required.

The following URL http://opensource.samsung.com/opensource/DMS2_5/seq/1 leads to the open source license information as related to this product. This offer is valid to anyone in receipt of this information.



Memo

